

NOTE: To view video install instructions, visit our website at the following address <http://www.morningindustry.com/>

The MP-300 has been designed so the code can be changed on the door in seconds. The code chamber consists of 10 buttons and a "C" button which is used to re-set the code chamber after an incorrect entry, and must always be used as the first digit of a code. Buttons may only be used **ONCE** in a code. For example 1212 is **NOT** Possible.

The MP-300 code or combination can be entered in any order or sequence; ex: 1234, 4321, 1243 or whatever sequence is most convenient to remember. With 10 buttons, a total of 8,191 different codes are available any of which can be entered in any sequence.

NOTE: MP-300 has 9 coded buttons giving 4095 different codes. Most people will set the code in the range of 4-7 digits, and the total number of codes in this range is 5434. The lock is supplied with a random factory set code (see code change card) At any time this can be quickly changed to a new code of your choice. Typically codes are 4-7 digits long. Shorter codes are possible (1-2 digits) but are not recommended.




1
Start with your door open
Press the **C** button the keypad to reset any numbers that could be pressed



2
Insert your key



3
Turn your key 90° (Clockwise for left handed doors, Counter clockwise for right handed door) And choose a 3 to 6 digit code

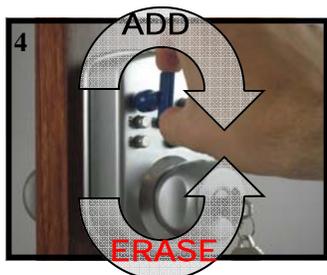

4
Using your code key wrench push it upon the numbers of the previous code (or all buttons if you don't know the code) and turn counter clockwise about 180°. (that will erase the current code) Then turn your desired numbers of your new code about 180° clockwise. Return the key to its original position and pull it out.

Checking your code


Type in your new code and turn you knob away from the door. (counter clockwise if it's a right handed door, clockwise if it's a left handed door) Your latch should retract, if it doesn't Start your programming all over. If your latch retracts but you are turning it in the opposite directions your flat driver bar is installed wrong. Please review Step 5 on

Right or Left Handed Door?


Determining What Door you have

Stand in front of your door, if your hinges are on the right you have a right handed door if your hinges are on the left you have a left handed door.

Right Handed Door

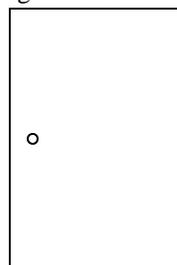

Left Handed Door

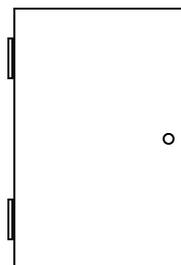

Morning Industry thanks you for your business and invites you to check out the new and exciting new products on our website: <http://www.morningindustry.com>