



**Kompaktverriegelung  
Cabinet Locks**

**1049.10  
1049.10RR**

**Montage- und Installationsanleitung  
Mounting and Installation Instructions (page XX)**





## Inhaltsverzeichnis

Allgemeine Beschreibung	3
<b>Funktionsprinzip</b>	
Bedeutung von Ruhe- und Arbeitsstrom	3
Einstellen der Betriebsart Ruhe- oder Arbeitsstrom	4
<b>Montage</b>	
Maßzeichnung	4
Montagehinweise	5
Positionierung von Kompaktverriegelung und Rosette	5
Montagebeispiele	6
An einer Schublade	6
An einem Einbauschränk	6
<b>Elektrischer Anschluß</b>	
Anschlußplan	7
Technische Daten	7

## Contents

General Description	8
<b>Functional characteristics</b>	
Fail-unlocked and fail-locked operation	8
Setting of operating mode fail-unlocked or fail-locked	9
<b>Mounting</b>	
Dimensioned drawing	9
Mounting instructions	10
Positioning of compact lock and rosette	10
Mounting examples	11
Drawer	11
Fitted cupboard	11
<b>Electric supply</b>	
Connecting diagram	12
Technical data	12







**Montagebeispiele:**

Die Bilder 6 und 7 zeigen, wie die Kompaktverriegelung an einem Schreibtisch mit Schubladen oder an einem Einbauschränk montiert werden kann. Der Kompaktverriegelung liegt ein Zubehörbeutel bei. Dieser enthält Befestigungsschrauben und Unterlegscheiben für Verriegelungselement und Rosette sowie Reduzierhülsen für die Montage in vorhandene Fachbohrungen.

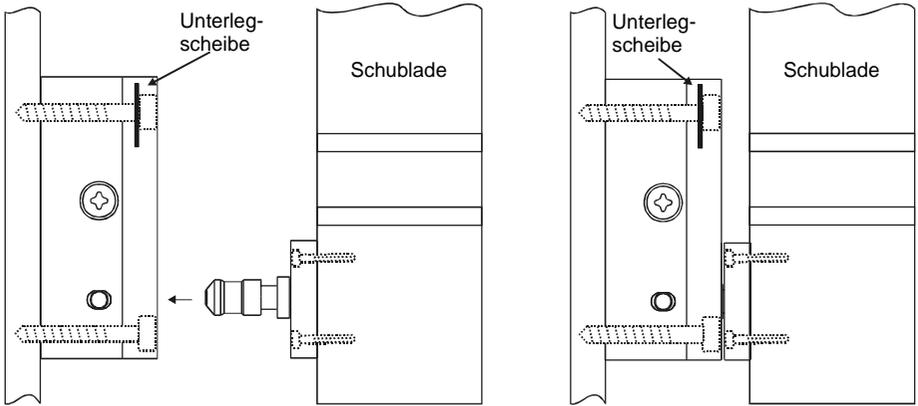


Bild 6: Anbau an einer Schublade

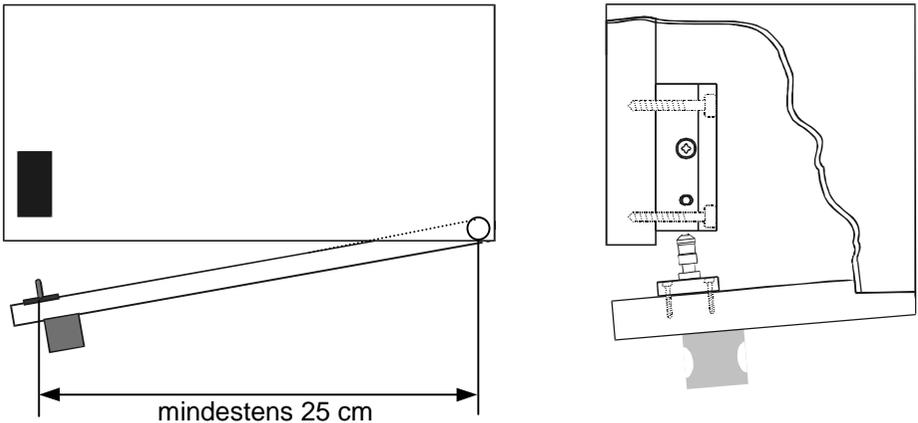


Bild 7: Anbau bei einem Einbauschränk

## Elektrischer Anschluß



Die Kompaktverriegelungen 1049.10 und 1049.10 RR müssen bei 100% Einschaltdauer mit einer stabilisierten 12 V oder 24 V Gleichspannung betrieben werden. Eine Entriegelung durch Wechselspannung ist möglich, wird aber wegen des auftretenden Brummgeräusches nicht empfohlen. Die Verschaltung ist nach Anschlußplan durchzuführen (siehe Bild 8). Die Drahtbrücken, für den Anschluß, sowie die Diode finden Sie im Zubehörbeutel.

Die Ausführung 1049.10 RR besitzt zusätzlich einen potentialfreien Wechselkontakt, der den Öffnungszustand der Tür überwacht.

Bei der Leitungsauswahl ist der Leitungsquerschnitt so zu wählen, daß die Spannung an der Kompaktverriegelung nach Abzug aller Verluste maximal 10% unter der angegebenen Betriebsspannung liegt.

## Anschlußplan

**Vorgehensweise beim Anschluß:** Schrauben der benötigten Klemmen durch Linksdrehen (3-4 Umdrehungen) öffnen. Leitung in die Klemme einführen. Klemme durch Rechtsdrehen schließen.

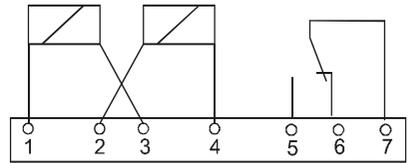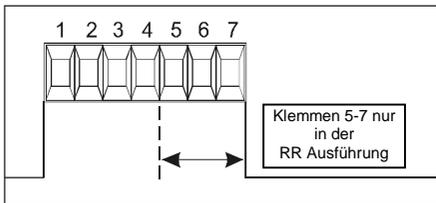


Nur bei 1049.10 RR


Kontaktstellung: zeigt "Tür offen"

\*  
Nur bei Gleichspannung!  
Wird die Kompaktverriegelung an einem elektronischen Gerät mit Gleichspannung betrieben, muß zusätzlich eine Freilaufdiode parallel zur Spule angeschlossen werden.

Anschluß 12 V

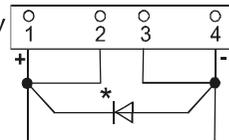

Anschluß 24 V

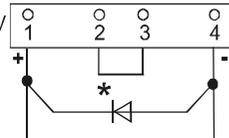

Diode im Zubehörbeutel



Bild 8: Anschlußmöglichkeiten

## Technische Daten:

Betriebsart	Ruhe- oder Arbeitsstrom Moment- und Dauerentriegelung			
Betriebsspannung	12V GS stab.	12V WS Brummgeräusch	24V GS stab.	24V WS Brummgeräusch
Anschlußspannung	Betriebsspannung ± 10%			
Stromaufnahme typ.	260 mA	140 mA	130 mA	70 mA
Max. Belastbarkeit des RR-Kontakts	25 V/ 1A			
Zugfestigkeit	1000 N (≈100 kp)			
Schutzart nach DIN 40050	IP 20			
Gehäusetemperatur	Bei Dauerbestromung ca. 60°C			
Temperaturbereich	+10°C - +40°C			
Maße in mm (L x B x H) Verriegelungsteil o. Rosette	48 x 42 x 20			



Cabinet Locks

1049.10  
1049.10RR

**Mounting and Installation Instructions**



## Contents

General Description	8
<b>Functional characteristics</b>	
Fail-unlocked and fail-locked operation	8
Setting of operating mode fail-unlocked or fail-locked	9
<b>Mounting</b>	
Dimensioned drawing	9
Mounting instructions	10
Positioning of compact lock and rosette	10
Mounting examples	11
Drawer	11
Fitted cupboard	11
<b>Electric supply</b>	
Connecting diagram	12
Technical data	12

## General description

The compact locking units 1049.10 and 1049.10 RR have especially been developed for the locking of furniture. They can be used instead of usual mechanical lockings or additionally as an access control system and prevent unauthorized access to valuables or certain documents.

The compact locking units can be used for locking filing cabinets, fitted cupboards, drawers, post-office boxes / safe-deposit boxes and glass cabinets, for example.

The most simple way to operate the access control system is by means of a key switch. If it is necessary to electronically control, register and monitor the access control system, the compact locking unit can be combined with a code or card reader system.

The RR version additionally incorporates a change-over contact for monitoring the state of the door (open/closed).

Taking into account the varied possibilities to use the compact locking unit, it can be operated in the fail-unlocked mode as well as in the fail-locked mode.

The field reversibility is easily executed in no time during the installation of the unit by positioning the rosette accordingly.

**Due to the integrated mechanism that keeps the door closed, the door of a filing cabinet, for example, is kept close even if it is unlocked. Consequently, additional mechanisms for keeping the door closed (e.g. magnetic snaps) are not required.**

### Fail-unlocked and fail-locked operation:


The difference between the fail-unlocked and the fail-locked operating mode is the following: the fail-unlocked version must be energized in order to be locked whereas the fail-locked version must be energized in order to be unlocked.

### Note:

Fail-locked operation means that in the event of power failure unlocking is impossible and consequently the door cannot be opened.

### Functional characteristics:

The compact locking unit 1049.10/1049.10 RR consists of two parts. Part 1 is the locking element which is, for example mounted laterally to a safe-deposit box. Part 2 is the rosette which is installed at the door.

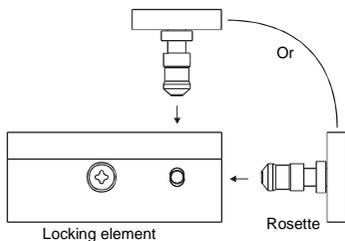

When the door is closed, the locking bolt of the rosette engages the locking element and the safe-deposit is locked. If the safe-deposit must be opened, the compact locking element must be unlocked electrically first.

According to the requirements, the compact locking unit can be installed for front or top engagement of the rosette (see illustration 1).

Illustration 1: Locking principle



### **Mounting instructions:**

Locking element and rosette must be aligned as shown in illustration 4 (flush). When closing the door or drawer, the locking bolt of the rosette must be able to engage the locking element unimpededly and completely. Furthermore, no tensile force caused by the door respectively the drawer must act on the locking element. The rosette can be fixed by screws and is also suitable for flush mounting. The adjustment of locking element and rosette must be effected by means of the elongated holes in the locking element. An adhesive film (adhesive on both sides) is supplied which can be stuck to the back of the rosette. This will help you to find the correct position of the rosette.

After fixing the adhesive film, the rosette must be put into the mounted locking element with fail-unlocked setting and the door must be closed. When the door is opened again the rosette sticks in the correct position. After marking the drilling points, the rosette must be turned through 180°.

**Under no circumstances must the rosette be mounted as shown in illustration 5 i.e. turned through 90°. If the locking bolt of the rosette engaged the locking element that way, it would not be possible to open the door or drawer any more.**

Correct positioning: The locking bolt of the rosette engages the locking element unimpededly and completely.

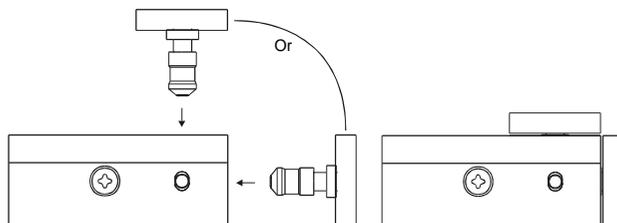


Illustration 4: Mounting instruction

Wrong positioning: The rosette turned - through 90°.

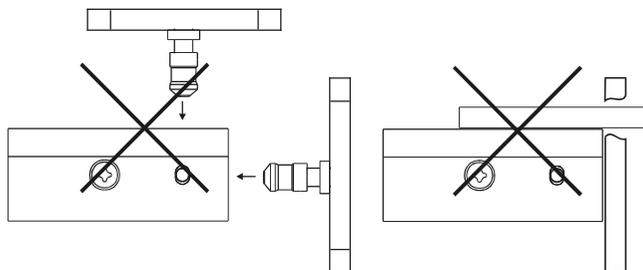


Illustration 5: Mounting instruction



## Electric Supply

With regard to continuous duty operation, the compact locking units 1049.10 and 1049.10 RR must be operated with stabilized DC, 12 V or 24 V. Unlocking by AC is possible, however, it is not recommended due to the buzzing sound caused. Connections must be effected according to the connecting diagram (see illustration 8). The necessary jumpers as well as the diodes are included in the accessories bag.

Model 1049.10 RR additionally incorporates a change-over contact which monitors the state of the door (open/closed).

When determining the wiring please take into consideration that the supply voltage – measured at the terminals – is not lower than the minimum indicated.

### Connecting Diagram:

**Instructions for connection:** loosen the screws of the required terminals by turning them anticlockwise (3-4 turns). Insert the lead into the terminal. For fastening the terminal retighten the screws by turning them clockwise.

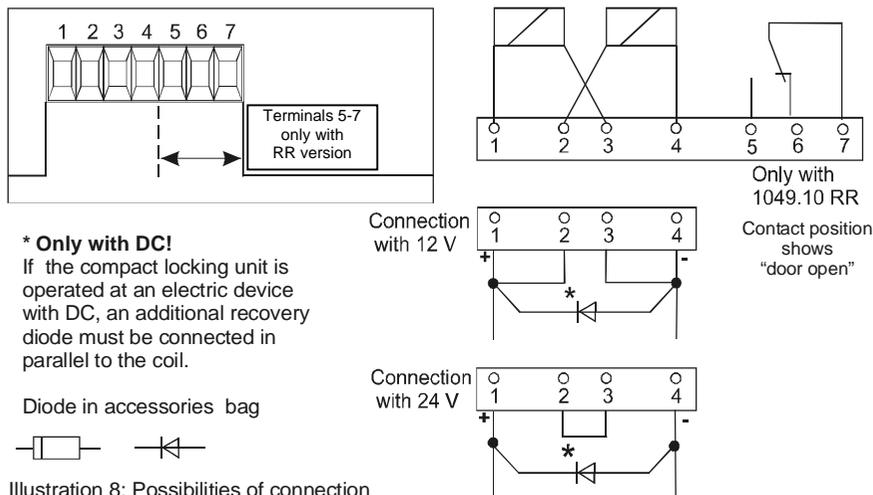


Illustration 8: Possibilities of connection

### Technical data:

mode of operation	fail-unlocked or fail-locked operation momentary or continuous unlocking			
operating voltage	12V DC stab.	12V AC buzzing sound	24V DC stab.	24V AC buzzing sound
connecting voltage	operating voltage $\pm$ 10%			
current consumption typ.	260 mA	140 mA	130 mA	70 mA
max.cap. of the RR contact	25 V/ 1A			
tensile strength	1000 N ( $\approx$ 100 kp)			
type of protection according to DIN 40050	IP 20			
housing temperature	continuous energization: approx. 60°C			
temperature range	+10°C - +40°C			
dimensions in mm (L x W x H) locking element w/o rosette	48 x 42 x 20			



**effeff Fritz Fuss GmbH & Co.**  
**Kommanditgesellschaft auf Aktien**  
Bildstockstraße 20  
D-72458 Albstadt  
Telefon +49 74 31/1 23-0  
Telefax +49 74 31/1 23-240  
info@effeff.com  
www.effeff.com