

Lift-Master

SECURITY+

Model 974LM Security+ 4-Channel Remote Control

OWNER'S MANUAL

NOTICE: To comply with FCC rules, adjustment or modifications of this receiver and/or transmitter are prohibited, except for changing the code setting or replacing the battery. THERE ARE NO OTHER USER SERVICEABLE PARTS.

The 974LM remote control can activate 3 separate Security+ garage door openers, gate openers, entryways and/or light controls. (Instructions for programming light products are included with those accessories.) *The first 3 push buttons work only with receivers having a yellow indicator light.* The rolling code between these channels and the receiver changes with each use, randomly accessing over 100 billion new codes.

The 4th push button is for use with a non-Security+ receiver. While it cannot program that receiver, its code can be matched to other *CGI manufactured fixed code or billion code remotes.* **The code between this channel and the receiver remains constant until reprogrammed.**

Instructions are described and illustrated below.

WHEN USED WITH SECURITY+ GARAGE DOOR OPENERS

To program the opener to accept the remote control code:

Select a remote control push button to operate the opener. The first button is recommended for use with a garage door opener. (Do not choose the 4th.)

1. Press and hold the selected push button. See Figure 1.
2. Press and release the "Smart" (learn) button on the opener panel. See Figure 2. The indicator light on the panel will begin to blink and the opener lights will flash once.
3. Release the remote push button.

Now the opener will operate when that push button is pressed.

Adding a remote can also be done from the door control, as follows:

1. With the door closed, press and hold the selected push button.
2. Press and hold the Light button on the door control.
3. Press and hold the door control push bar.
4. After the opener lights flash, release all buttons.

Test by pressing the remote push button.

To erase all remote control codes from the receiver:

Press and hold the "Smart" button on the opener panel until the indicator light turns off (about 6 seconds). All transmitter codes inside the receiver are now erased. Then follow the steps above to re-program each remote control.



WARNING

Children operating or playing with a garage door opener can injure themselves or others. The garage door could close and cause serious injury or death. Do not allow children to operate the wall push buttons or remote controls.

A moving garage door could injure or kill someone under it. Activate the opener only when you can see the door clearly, it is free of obstructions, and is properly adjusted.

Model 974LM
SECURITY+
Remote Control

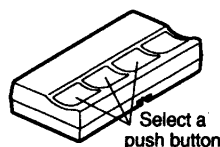


Figure 1

SECURITY+
Garage Door Opener

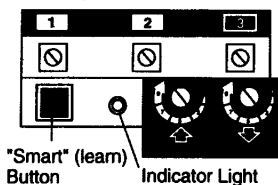


Figure 2


WHEN SEVERAL REMOTES OPERATE ONE DEVICE
To match the 974LM to another CGI manufactured remote's code (Remote Control X):

1. With the 974LM bottom side up, press and hold both 1st and 4th push buttons until the yellow indicator light begins to blink. It will blink for 30 seconds; during this time it is in "learn" mode.
2. While it is in learn mode, hold both transmitters back to back with the FCC labels touching, then
3. Press and hold the Remote Control X push button as you slowly slide the remotes across each other until the 974LM indicator light blinks very rapidly, indicating it has learned the code. See Figure 3. (If Remote Control X is a 974 or 972LM, you must press and hold its right hand button.)

Now the device will operate when the 4th push button is pressed.

This code will remain inside the remote control until replaced with a new code by repeating the above steps.

Figure 3

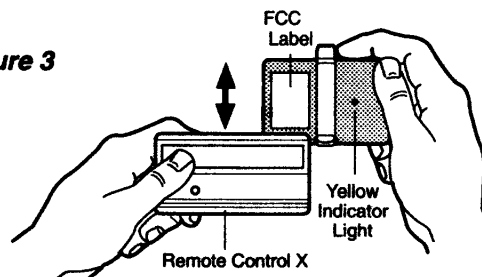

Side two contains battery and replacement parts information.




WARNING

Keep batteries away from small children. If swallowed, promptly notify doctor.

The Remote Control Batteries

The lithium batteries should produce power for up to 5 years. To replace, pry open case with visor clip or screwdriver, as shown. Insert batteries *positive side up (+)*.

Dispose of old batteries properly.

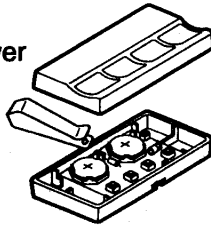

Replacement Parts

Model 974LM Security+ remote case41A5059-4
(circuit board not included)	
3V2032 Lithium battery (2 required)10A20
Visor clip29B137

**FOR SERVICE DIAL OUR TOLL FREE NUMBER:
1-800-528-2817**