

SERVICE UPDATE

Date: March 2007
Update: Gate 2007 - 01
Model #: Elite™ CSW200UL™ and SL3000UL™
Subject: New Omni Board Service Kit

In February 2005, an external reset button was added to the outside cover of all CSW200UL™ and SL3000UL™ operators. This external reset allows the user to easily deactivate the audible alarm and reset the unit after double entrapment by simply pressing the reset button. The external reset also eliminates nuisance service calls by providing the facilities manager or homeowner with the ability to clear the opening and press a button to reset rather than recycling power or activating another input to reset the operator/alarm.

As the added benefit of the external reset button has been well received, we will introduce a new Omni board kit that includes a "retrofitable" external reset button. This kit will be available mid March. This new Omni board kit (part# Q400D) will make it possible to upgrade a pre-2005 model CSW200UL™ or SL3000UL™ operator with an external reset button.

It is important to note, as long as a hard input is connected to the operator, it will reset the operator and audible alarm. Therefore, it may not be necessary to install the external reset button included in the kit to reset the operator/alarm. (For a complete listing of inputs that will reset the operator/alarm, please see the reverse side.)

As we introduce this new Omni Board replacement kit (part#Q400D) we will be phasing out the old part Q400 over the upcoming months.

Omni board service kit part numbers

Part #	Description	List Price
Q400D	Omni Control board with retrofit external reset button	Unchanged
Q400	Omni Control board for Elite Operators manufactured prior to February 2005 (without reset)	Unchanged

The Q400D Omni control board with "retrofitable" external reset button will be available mid March. If you have a question, or would like to place an order, please call Parts and Service at 800-528-2806

Omni Q400D

Summary of inputs that reset operator/alarm

Cycle Main Power Supply	Yes
Reset Button (when present)	Yes
Open Button (when present)	Yes
Stop Button (when present)	Yes
Hard Open Command *	Yes
Soft Open Command **	No
Radio Control Command	No
Loops	No
Fire Department Input	Yes

* Terminal Inputs: 7&8, 9&10

** Terminal Inputs:1&2, 3&4, 5&6, 11&12