



The Remote Chime is designed to work with the X10 PRO Dual Floodlight Motion Detector (PHS01) to provide a pleasant annunciator chime when someone approaches. It can also be activated using the correct House Code and Unit Code from any X10 PRO controller, such as the Power Flash Interface PSC01, or the PHC01 Mini Controller.

### Setting up the Remote Chime

- Using a small screwdriver adjust the code wheels to the desired House Code and Unit Code. If the Remote Chime is to be used with the Dual Floodlight Motion Detector, you should ensure that the House and Unit Codes correspond to one of the 'Sensor' switch settings (+1, +2, +3 or +4) on the PHS01 Dual Floodlight Motion Detector.
- Plug the Remote Chime into a 120V AC wall outlet.

### Testing the Remote Chime from a Plug-in Controller

- Press the ON button on a controller corresponding to the House Code and Unit Code set on the Remote Chime. The Remote Chime responds only to unit ON commands. An OFF command has no effect on the unit.

*Note: The Remote Chime will only respond to a valid X10 ON command (with matching house and unit code matching the Chime Module). The Chime will play once per each ON command sent and will accept the next ON command after it has completely finished it's annunciation.*