 
 



BC-01, BC-02, BX-02, BC-20, BC-23,
BC-22, BC-22e photo, BC-05, BC-06

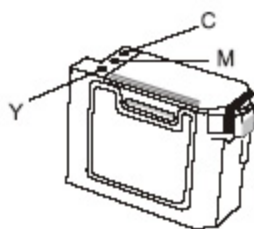


(BC-05,06)

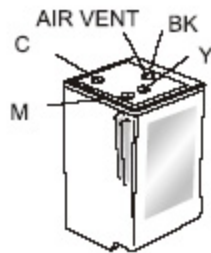

 (BC-22,22e)

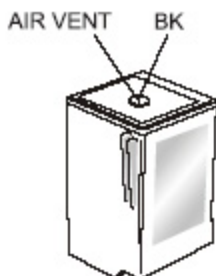

(BC-20,23)

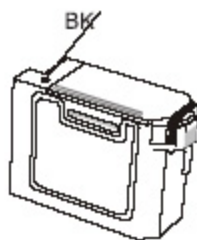

(BC-01,02,BX-02)

1. Put the cartridge on the tissue paper or other hygroscopic material in case of the excess ink.
2. Insert the drill tool into the air vent of plug, turn and fork out the plug to expose the filling hole. (the plug of BC-01, 02, 05, 06, BX-2 is in the side of the cartridge, the plug of BC-20, 23, 22, 22e is on the top of cartridge.)
3. Assemble the syringe and needle. Insert the needle through the filling hole deeply and then push out for 5-6 ml. Slowly and carefully press the plug of the syringe and fill the ink into the tank until it is full and pull out the syringe.
4. Clean the ink on the surface of the filling hole with tissue paper, and insert the plug which was taken off in step 2.
5. Reload the cartridge into the printer, and run "head cleaning" utility for 2-3 times before printing or nozzle testing.

BJ-5/10/15/20;BJC-150/210/210SP/240/250/255SP/265SP/1000;BJ-200;BJC-2000/4000/5000series;Multipass C 20/30/50/70/500 Series, 2500/3000/3500/5000/5500;BJC-5000 series;BJC-100, 200, 210, 255, 265SP, 1000SP;BJC-240, 255, 265 (Photo Ink);BJC-4200, 4300, 4550, 4650, 5000;Multipass C530/555/560/3000/3500/5500 (Photo Ink)