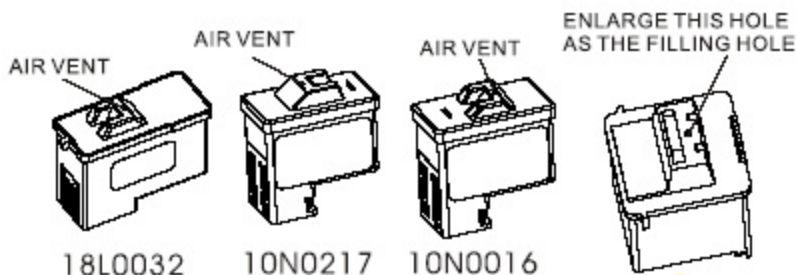


BROTHER IN-700, LC-11BK

COMPAQ 337709-001,33714-001,
180845-001,180847-001LEXMARK 1361400,1380620,13620HC,
10N0016,12A1970
12A1975,15M0125,16G0055,
17G0050,12A1145,
13400HC, 10N0217,
18L0032,1382050
OKIDATA 52109301
XEROX 8R7881,8R7882

1. Put the cartridge on the tissue paper or other hygroscopic material in case of the excess ink.
2. Make a hole as filling hole with the screw driver..
3. Assemble the syringe and needle . Insert the needle through the filling hole deeply and then push out for 5-6 ml. Slowly and carefully press the plug of the syringe and fill the ink into the tank until it is full and pull out the syringe.
4. Clean the ink on the surface of the nozzle with tissue paper. Reload the cartridge into the printer, and run "head cleaning" utility for 2-3 times before printing or nozzle testing.

CJ 1000 series;2030/2050/2055/3000;W'wrt100/150;SF 3000/
3100/4000/4100/4200;CJ2070;Z12/22/32;CJ3200/5000/
5700/7000,Z31,Z11,Z51,Z52Z45,Z54;1000/1100/2030/2050/
Winwriter150C & 4076IIC ;Color Jetprinter
3200/5000/5700/5770/7000/7200/7200V;Optra Color 40/45;
Lexmark Color Jetprinter Z42;Lexmark:CJ1000,CJ1020,CJ1100,
Samsung:SF3100P,SF4100Series,SF4200Series,SF3000Series,
SF3100Series,SF4000Series ;Legend:5200MFC;Lexmark :Z13,
Z23,Z33,Z35 i3 Compaq:IJ650SeriesZ55/55se/65/65N/65pro/65p;
Z13/23/33, Compaq IJ650, Legend Z33