

BROTHER IN-710,LC-11CL

COMPAQ 33710-001,337715-001,180846-001

180848-001,180844-001,337711-001

LEXMARK 1380619,13619HC,12A1980,12A1985

15M0120,1382060,16G0065,17G0060,10N0026

12A1990,1361760,12A1170,10N0227,18L0042

OKIDATA 52109302

XEROX 8R7880,8R12591


REMOVE THE CAP HERE




LEXMARK 18L0042



LEXMARK 10N0227,10N0026

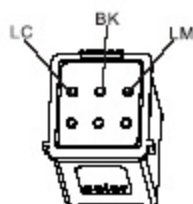

COMPAQ 337711-001

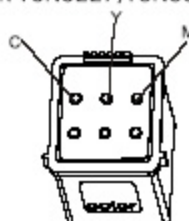

LEXMARK 12A1990,1361760,12A1170

1. Put the tissue paper or other hygroscopic material in case of the excess ink.
2. Remove the cap of the cartridge with a knife by cut the seal carefully (LEXMARK18L0042 as the figure showing). Place the cartridge on the tissue paper then and make sure the nozzle is downward.
3. Assemble the syringe and needle . Insert the needle through the filling hole deeply and then push out for 5-6 ml. Slowly and carefully press the plug of the syringe and fill the ink into the tank until it is full (normally inject 5-8ml), pull out the syringe.
4. After refilling reseal the cap which was removed in step 2 with immobile tapes.
5. Clean the ink on the surface of the nozzle with tissue paper. Seal the filling hole with sealing tapes. Reload the cartridge into the printer, and run "head cleaning" utility for 2-3 times before printing or nozzle testing.

Lexmark:CJ3200,5000,5700,5770,7000,7200,7200V C40/45,Z31,Z11  
 Samsung:Smartjet,SF4500Series,Msys4700, Msys4800,MJ4500C  
 Kodak:PM 100;CJ 1000 series;2030/2050/2055/3000;W'wrt150;Lexmark  
 :Z12,Z22;Samsung SF3100P/SF4100/4200;SF3000;Z42/43/45/51/Z52/  
 53/82 ;CJ 2070;Lexmark:CJ3200,5000,5700,5770,7000,7200,7200V  
 C40/45,Z31,Z22, Samsung:Smartjet,SF4500Series,Msys4700,Msys4800,  
 MJ4500C,SF4700Series,SCX1000Series Legend :Z32, Lexmark  
 :Z13,Z23,Z25,Z33,Z35,i3; Compaq :IJ650Series ;Legend :Z13/23/33,  
 Compaq IJ650;Lexmark :Z55/55se/65/65N/65pro/65p