


FILLING HOLE

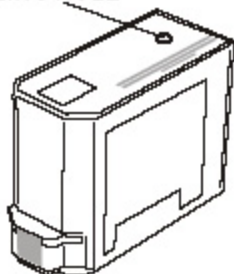

1. Put the cartridge on the tissue paper or other hygroscopic material in case of the excess ink.
2. Use the thinner end of the bradawl to press the steel ball into the cartridge to expose the filling hole.
3. Assemble the syringe and needle. Insert the needle through the filling hole deeply and then push out for 5-6 ml. Slowly and carefully press the plug of the syringe and fill the ink into the tank until it is full and pull out the syringe.
4. Use the larger end of the bradawl to plug the filling hole with another steel ball. Clean the filling hole and the steel ball with the tissue paper before sticking the leak proof tape on the filling hole.
5. Clean the ink on the surface of the filling hole with tissue paper. Reload the cartridge into the printer, and run "head cleaning" utility for 2-3 times before printing or nozzle testing.

Canon Fax-B100/B110, Faxphone B540/B550/B640, Canon Multipass 10/800/1000;BJC-100, 210, 255, 265SP; FAX-B155