 
 


BCI-21BK, BCI-21C
BCI-24BK, BCI-24C

FILLING HOLE



(BCI-21BK)

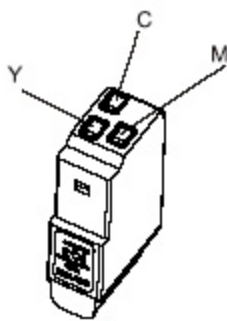

(BCI-21C)

1. Put the tissue paper or other hygroscopic material on the table-board.
2. Place the cartridge on the tissue paper and make sure the outlet is upward.
3. Assemble the syringe and needle, and fill in ink with the correct color. Insert the needle through the filling hole (outlet) deeply about 12-15ml. Slowly and carefully press the plug of the syringe and fill the ink into the tank with a volume about 4-6ml and pull out the syringe. Clean the ink left on the outlet.
4. Clean the syringe for next use.
5. Reload the cartridge into the printer, and run "head cleaning" utility for 2-3 times before printing or nozzle testing.

Canon BJC-2000/4000/400J/410J/4100/4200/4300/4304
PHOTO/ 4400/4550/455J/5000/5100/5500/Multipass C20/C
530/C545/ C560/C635/C2500/C3000/C3500/C5000/C5500/
UF-344; Apple Color Style Writer 2400/2500; Panafax UF-344/
Panasonic KXF 1600 ; Canon S100; Canon S300/S200/S330/
i320/i450/i470D;