


HP51645A,HP51640A ,
 HP51640C,HP51640M,
 HP51640Y,HPC6650,HPC6615DN

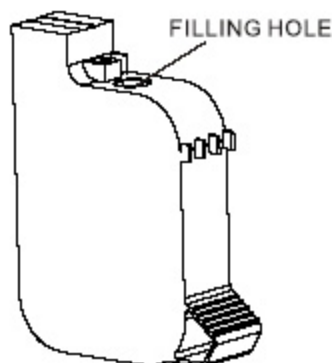

1. Put the tissue paper or other hygroscopic material in case of the excess ink.
2. Tear apart the black spot on the bottom of the cartridge. Use the thinner end of the bradawl to press the steel ball into the cartridge and expose the filling hole.
3. Assemble the syringe and needle . Insert the needle through the filling hole deeply and then push out for 5-6 ml. Slowly and carefully press the plug of the syringe and fill the ink into the tank until it is full and pull out the syringe.
4. Use the larger end of the bradawl to plug the filling hole with another steel ball. Clean the filling hole and the steel ball with the tissue paper before sticking the leak proof tape on the filling hole.
5. Press the cartridge from side slightly for 2 or 3 times to make sure the outlet is full with ink.
7. Clean the nozzle with the tissue paper and reload the cartridge into the printer. Run "head cleaning" utility for 2-3 times and perform printing or nozzle testing.

HP DeskJet 700 Series, 800 Series, 900 Series, 1000 Series, 1100 Series, 1200 Series, and 1600 Series printers, HP Color Copiers, HP Officejet R40, R60, R80, T45, T65, HP Officejet Pro 1150C, 1175C, HP Photosmart P1000 and P1100, and HP Designjet 700, 750C, 750C Plus, 755CM printers;HP Deskjet 810, 812, 825, 840, 842, 843, 845, 920, 940, 950 printers, HP Officejet K60 and HP Printer/Scanner/Copier 500/750;HP Deskjet 1200C, 1200C/PS, 1600C Series, HP Color Copier 210, 210LX, HP Copyjet and Copyjet M