


HP51626A, HP51629A,
 HP51626G, HP51629G
 HP51633M HPC6614AN
 HPC6628AN

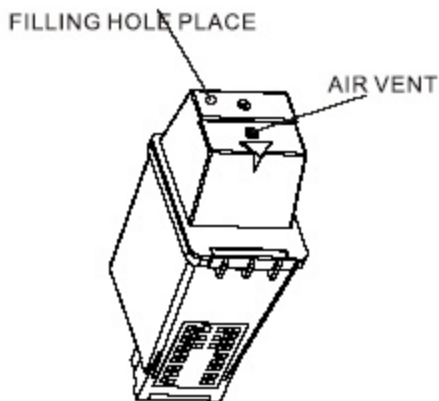

1. Put the tissue paper or other hygroscopic material in case of the excess ink.
2. Place the cartridge on the tissue paper and make sure the outlet is downward. Make a hole as the figure shows with the screw driver as the filling hole.
3. Assemble the syringe and needle. Insert the needle through the filling hole deeply and then push out for 5-6 ml. Slowly and carefully press the plunger of the syringe and fill the ink into the tank until it is full (about 40ml) and pull out the syringe.
4. Seal the filling hole with the rubber plug.
5. Leave the cartridge on the tissue paper for some time until the ink does not leak from nozzle any more. Make sure the nozzle is downward.
6. Clean the cartridge with tissue paper. Reload the cartridge into the printer and run "head cleaning" utility for 2-3 times before printing or nozzle testing.

HP Deskjet, Deskjet Plus, HP Deskjet 400 Series, 500 Series, HP Deskwriter C, HP Deskwriter 500 Series printers, HP Fax 200, 300, 310, 700, 750, 900, 950, HP Officejet LX, and Officejet 300 Series, Designjet 200, 220, and 600; HP Deskjet portable, HP Deskjet 310, 320, 340 printers and HP Deskwriter 310, 320 printers; HP Deskjet 600C, 660C, 670C, 680C, and 690C Series; HP Deskwriter 600, 660, 680, and 694; HP Printer/Scanner/Copier 300 Series; HP Officejet 500, 600, and 700 Series; HP FAX 910 and 920; HP Deskjet 610, 612, 640, 642 and 648 color printers and HP Fax 925