




HPC8727A HPC8728A
C6656AN, C6657AN, C6658AN

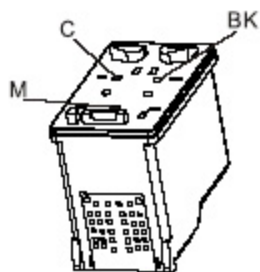

C6658AN

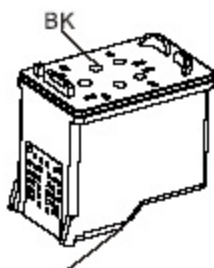

C8727A,C6656AN

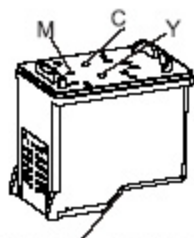

C8728A,C6657AN

1. Put the tissue paper or other hygroscopic material in case of the excess ink.
2. uncover the label on the cartridge and expose the filling hole. Put aside the label for later use.
3. Place the cartridge on the tissue paper and make sure that the nozzle is downward.
4. Assemble the syringe and needle. Insert the needle through the filling hole and push into the center of the cartridge. Slowly and carefully fill the ink into the tank with a volume of 5-8 ml and pull out the syringe.
5. Clean the nozzle with the tissue paper, and reload it into the printer. Run "head cleaning" utility for 2-3 times before printing or nozzle testing.

HP Deskjet 3320 and 3420 Series printers; HP Deskjet 5550 and 5551 Color Inkjet printers, HP Photosmart 7150, 7350 and 7550 Color Inkjet printers, HP PSC 2110, 2210 and 2150 all-in-ones, HP Officejet 6110 all-in-one; HP PhotoSmart 100 printer;