

HP51641A, C1823A,
HPC6578AN, HPC6578DN, HPC6625AN



C1823A, C6625AN
C6578AN, C6578DN, 51641A

1. Put the cartridge on the tissue paper or other hygroscopic material in case of the excess ink.
2. It's very important to make sure that only fill the color run out of, this can be done by running nozzle test or printing test.
3. The filling holes are located on top of the cartridge and are sealed with three small-vented plugs, push these plugs into the cartridge using an ballpoint pen.
4. Assemble the syringe and needle. Insert the needle through the filling hole deeply and then push out for 5-6 ml. Slowly and carefully press the plug of the syringe and fill the ink into the tank until it is full and pull out the syringe.
5. Hold and shake the cartridge up and down for 2-3 times to make the outlet full of ink. Please make sure the filling hole is upward.
6. Clean the ink on the surface of the nozzle with tissue paper. Reload the cartridge into the printer, and run "head cleaning" utility for 2-3 times before printing or nozzle testing.

HP Deskjet 820C Series, 850C Series, 870C Professional Series, and 1000C Series printers, HP Officejet Pro 1150C, and HP Color Copier 110 and 120; HP Deskjet 710c Series, 720c Series, 810 Series, 830 Series, 880 Series, 890 Series, and 1120c printers, HP Officejet R40, R60, R80, T45, and T65, HP Officejet Pro 1170 and 1175 Series, HP Color Copiers 140, 145, 150, and 155, HP Color Copiers 160, 170, 260 and 270, and HP Printer/Scanner/Copier 500; HP Deskjet 840 and the HP Deskjet 842 printers; HP Deskjet 930, 932, 935, 950, 952, 970, 1220 printers, HP Photosmart P1000, P1100, P1215, P1218, HP Color Copier 180, 190, 280, 290, and HP Officejet G55, G85, G95, K60 and K80