

Lift-Master[®]

SECURITY+[™]

Model 971LM Security+[™]

Single Function Remote Control

OWNER'S MANUAL

NOTICE: To comply with FCC rules, adjustment or modifications of this receiver and/or transmitter are prohibited, except for changing the code setting or replacing the battery. THERE ARE NO OTHER USER SERVICEABLE PARTS.

The 900 Series remote control works only with door openers and light controls having an orange "Smart" button and a yellow indicator light. The code between the remote control and the receiver changes with each use, randomly accessing over 100 billion new codes. Programming instructions are described and illustrated below.

Security+ Garage Door Openers

To program the opener to accept the remote control code:

1. Press and *hold* the remote control push button. See Figure 1.
2. Press and release the "Smart" (learn) button on the opener panel. See Figure 2. The indicator light on the panel will begin to blink and the opener lights will flash once.
3. Release the remote push button.

Now the opener will operate when that remote control button is pressed. Test it by pressing the remote button to see that the door goes up and down.

Adding a remote can also be done from the door control, as follows:

1. *With the door closed*, press and hold the remote push button.
 2. Press and hold the Light button on the door control.
 3. Press and hold the door control push bar.
 4. After the opener lights flash, release all buttons.
- Test by pressing the remote push button.

To erase all remote control codes:

Press and hold the "Smart" button on the opener panel until the indicator light turns off (about 6 seconds). All transmitter codes are now erased. Then follow the steps above to reprogram each remote control.



WARNING

Children operating or playing with a garage door opener can injure themselves or others. The garage door could close and cause serious injury or death. Do not allow children to operate the wall push buttons or remote controls.

A moving garage door could injure or kill someone under it. Activate the opener only when you can see the door clearly, it is free of obstructions, and is properly adjusted.

Model 971LM
Security+
Remote Control

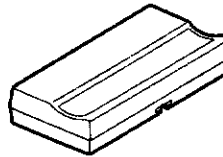 


Figure 1

SECURITY+
Garage Door Opener

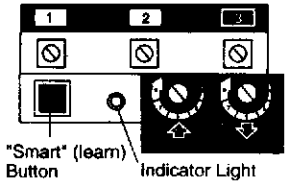 


Figure 2



 
WARNING

Keep batteries away from small children. If swallowed, promptly notify doctor.

The Remote Control Battery

The lithium battery should produce power for up to 5 years. To replace battery, pry open case with visor clip or screwdriver, as shown. Insert battery *positive side up*.

Dispose of old battery properly.

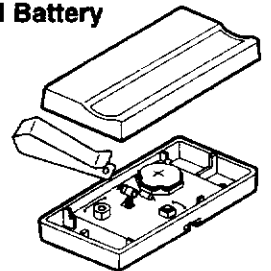

Replacement Parts

Model 971LM Security+ remote case41A5056-1
(circuit board not included)	
3V2032 Lithium battery10A20
Visor clip29B137

FOR SERVICE DIAL OUR TOLL FREE NUMBER: 1-800-528-2817