

RC Tarantula

AGES 6 AND UP

2027


Remote Control Tarantula with Light-Up Eyes

Installing batteries into tarantula

Tool required - Small Phillips head screwdriver ⊕

1. Using a Phillips head screwdriver remove the battery cover from the bottom of the tarantula (See Fig. 1).
2. Insert 2 "AAA" batteries and replace cover.

 
Fig.1

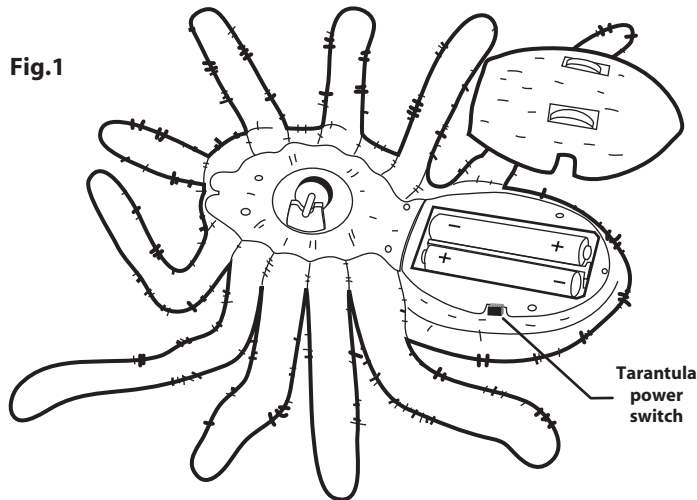

Install batteries into controller

1. Using a Phillips head screwdriver remove the battery cover from the back of the controller (See Fig. 2).
2. Insert 2 "AA" batteries and replace cover.

 Fig. 2

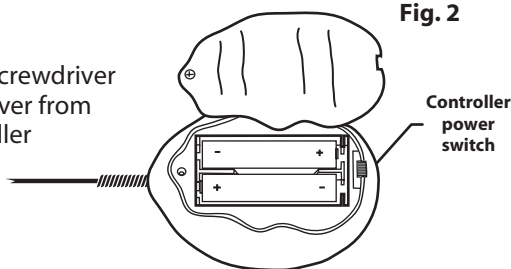

BATTERY SAFETY INFORMATION

- Only adults should install and replace batteries.
- Switch toy off before opening battery compartment.
- Insert batteries correctly. Match positive + and negative - signs.
- Alkaline batteries are recommended for best performance.
- Rechargeable batteries are not recommended.
- If rechargeable batteries are used, they are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the product before they are charged.
- Do not recharge non-rechargeable batteries.
- Only use the batteries specified.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Do not mix old and new batteries.
- Remove dead or exhausted batteries.
- Remove the batteries during long periods of non-use.
- Always remove exhausted batteries from the toy.
- Battery leakage and corrosion can damage this product.
- Dispose of batteries safely.
- Do not dispose of batteries in a fire or attempt to open the outer casing. Never short-circuit the battery terminals.
- Do not immerse battery-operated toys in water. Wipe clean only.

Using your R/C Tarantula

1. Turn the power switches to the "ON" position on both the controller and tarantula (See Fig. 1).
2. Move the tarantula forward or make it turn using the buttons on the controller (See Fig. 3).

Note: For best performance use your r/c tarantula on a smooth flat surface like a hardwood floor.

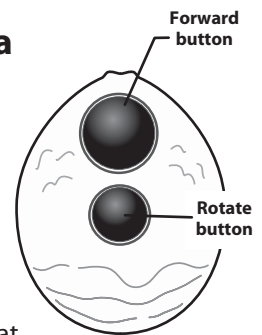 


Fig. 3

NOTE: This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

FCC ID: N9B2027UMI2006
MADE IN CHINA

49Mhz

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions.

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

⚠ WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE - DO NOT DISCARD

Problems? Before taking this product back to the store, please call us. We can help! 1-888-742-2484 or go to www.unclemilton.com



Uncle Milton Industries – Westlake Village, CA 91362
1-888-742-2484 Fax: 818.707.0878 www.unclemilton.com
© UMI, Inc. All rights reserved. Printed in China.

2027-06/06