



GAGGIA Model MM Coffee Grinder

Important Safeguards:

When using your Coffee Grinder as any electrical appliance, these basic safety precautions should always be followed:

1 Read all instructions.

2 To protect against risk of electrical shock **DO NOT IMMERSE IN THE WATER OR OTHER LIQUID.**

3 Close supervision is necessary when any appliance is used by or near children.

4 Unplug from outlet when not in use, when removing or putting on parts before cleaning.

5 **DO NOT** operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner.

6 **DO NOT** use outdoors.

7 **DO NOT** let cord hang over edge of table or counter, or touch hot surfaces.

8 Before using, make sure no foreign objects are in the container,

9 **DO NOT PLACE IN DISHWASHER.**

10 This appliance may be fitted with a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

SAVE THESE INSTRUCTIONS

Introduction:

Congratulations. You have purchased a fine Gaggia product that is the perfect companion for your espresso machine. Freshly ground coffee will greatly enhance the taste of the coffee you enjoy.

1. Insert plug into a wall outlet having a voltage that corresponds with voltage indicated on bottom of grinder.
2. The upper container (1) holds about 5 oz. (150 gr.) of coffee beans. Place beans in container and replace cover (2) to preserve the beans' freshness.
3. Grinding can be adjusted from "very fine" to "coarse". Grasp the upper container and turn it to the extreme right. This position corresponds to "very fine". Turning the container to the left will result in a coarser grind. Espresso pump-machines require a fine grind. But since machines differ, you may have to experiment with the degree of fineness that is best for your machine. (If coffee flows too fast, grind may be too coarse - if coffee flows very slowly, coffee grind may be too fine). Refer to your espresso machine instructions for more information.
4. Make certain that lower container (4) is fully inserted in machine. To turn "on", depress switch (3) and hold down. Keep it "on" only long enough to make desired amount of coffee, then release switch.

IMPORTANT: Do not operate grinder for more than 1 minute at a time. Overheating may cause damage to the motor. Allow about a 2 minute pause between grinding.

5. Grasp lower container and pull forward to remove. Remove cover (5) and measure out coffee as required.
- &. Unplug cord before cleaning. With a damp cloth or sponge wipe clean any coffee powder that is present.

Grinder Parts:

1. Coffee bean container
2. Coffee bean container cover
3. Power on-off switch
4. Ground coffee container
5. Ground coffee container cover