


## Wave Series Pump Parts

- 1. Inlet Valve Assembly.....0278242
  - 2. Nylon Seal Washer.....0089482
  - 3. Outlet Seal.....0278362
  - 4. Outlet Seat.....0278280
  - 5. Ball (6mm).....0093635
  - 6. Outlet Spring.....0047485
  - 7. Paint Pump.....0278334
  - 8. Seal.....0156606
  - 9. Washer.....0278340
  - 10. Spring.....0278368
  - 11. Pusher Stem Assembly...0278250
  - 12. Ball Stop.....0278361
  - 13. O-Ring.....9871073
  - 14. Outlet Fitting.....0278335
  - 15. Pusher Body.....0278337
- Prime Spray  
Valve.....0278277/0512250

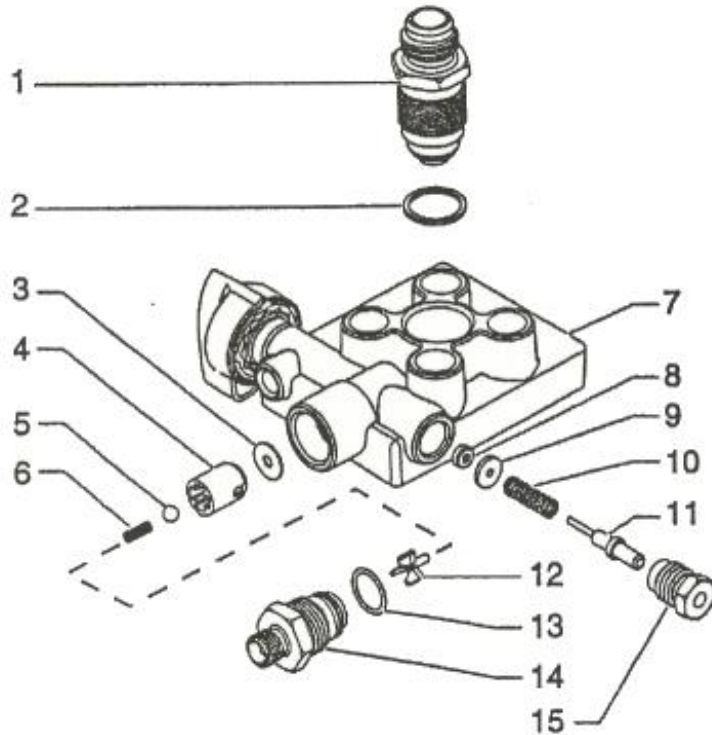

### Suction Set Assembly:

- 1. Complete Suction Tube Assembly (includes items 2-10).....0278254
  - 2. Suction Nut.....0090622
  - 3. Adapter.....0088938
  - 4. Snap Ring.....0088931
  - 5. Clamp.....0089882
  - 6. Suction Tube.....0089750
  - 7. Filter Assembly (includes filter housing and filter).....0270162
  - 8. Filter.....0270369
  - 9. Washer.....0093871
  - 10. Return Fitting.....0088715
  - 11. Clamp.....0089096
  - 12. Hose.....0089751
- Complete Return Tube Assembly (includes items 10-12).....0089744

