



## Adjustable Brush Buster Beeper Collar

1. **To turn unit on:** Press on button, hold until you hear chirps, release.
2. **To turn unit off:** Press off button, hold until you hear one chirp, release.



3. **There are 4 modes:**

- Mode 1:** *Normal, Point Only* - After dog is still 8 seconds, it will beep 1 time per second.
- Mode 2:** *Normal, Point & Run* - Will beep 2 times every 8 seconds while dog is running and after dog is still 8 seconds, it will beep 1 time per second.
- Mode 3:** *Grouse, Point Only* - After dog is still 4 seconds, it will beep 1 time per second.
- Mode 4:** *Grouse, Point & Run* - Will beep 2 times every 4 seconds while dog is running and after dog is still 4 seconds, it will beep 1 time per second.


**To change mode:** Press and hold on button until you hear chirps. Number of chirps in a sequence determines mode you are in. Release button when you hear mode desired (will remain in this operation mode until you change it or battery is changed):

- A. Mode 1 - 1 chirp
- B. Mode 2 - 2 chirps
- C. Mode 3 - 3 chirps
- D. Mode 4 - 4 chirps

*Unit does not change mode when turned on/off.*

**Placing Unit on Dog:** Place collar on dog, with molded speaker on top of dog's neck and electronics unit snug beneath dog's neck. Adjust speaker & electronics unit so they are direct opposite of each other (speaker should ride in top center of dogs neck). Beeper collar can be placed in front of an ordinary collar. **Do not attach leash to beeper collar.**

**To Change Battery:** Use a coin to unscrew battery compartment plug. Replace battery with a new 9V alkaline battery (it must be alkaline). Screw plug straight into battery compartment until it is snug. It may be necessary to reset operating mode after changing battery.

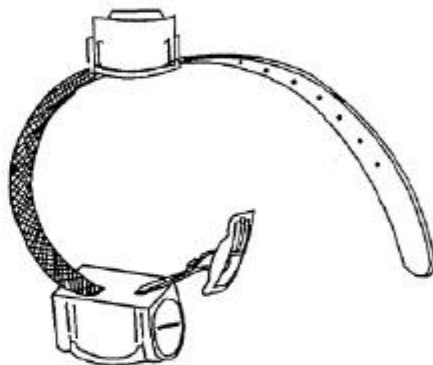

**\*REMINDER:** Use 9 volt **"ALKALINE"** batteries **ONLY!** When troubleshooting complications of Lovett's Beeper always check to make sure you are using **ALKALINE Batteries!!!!!!**