




## PRO Beeper Collar

Item 4407

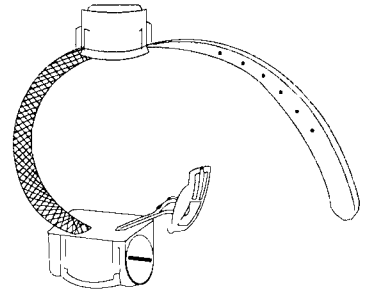

1. **To turn unit on:** Press "ON" button, hold until you hear chirps, release.
2. **To turn unit off:** Press "OFF" button, hold until you hear one chirp, release.
3. **There are 3 modes:**
  - Mode 1:** *Normal, Point Only* - After dog is still 5 seconds, it will beep 1 time per second.
  - Mode 2:** *Normal, Point & Run* - Will beep 2 times every 10 seconds while dog is running and after dog is still 5 seconds, it will beep 1 time per second.
  - Mode 3:** *Hawk Mode* - Hawk Scream activated when still for 5 seconds. Double beep every 10 - seconds when running.


**To change mode:** Press and hold "ON" button until you hear chirps. Number of chirps in a sequence determines mode you are in. Release button when you hear mode desired (will remain in this operation mode until you change it or battery is changed):

- A. Mode 1 - 1 chirp
- B. Mode 2 - 2 chirps
- C. Mode 3 - 3 chirps

*Unit does not change mode when turned on/off.*

**Placing unit on dog:** Place collar on dog, with molded speaker on top of dog's neck and electronics unit snug beneath dog's neck. Adjust speaker & electronics unit so they are direct opposite of each other (speaker should ride in top center of dogs neck). Beeper collar can be placed in front of an ordinary collar. **Do Not Attach Leash To Beeper Collar!**

**To Change Battery:** Use a coin to unscrew battery compartment plug. Replace battery with a new 9 V Alkaline battery (it must be Alkaline). Screw plug straight into battery compartment until it is snug. It may be necessary to reset operating mode after changing battery.

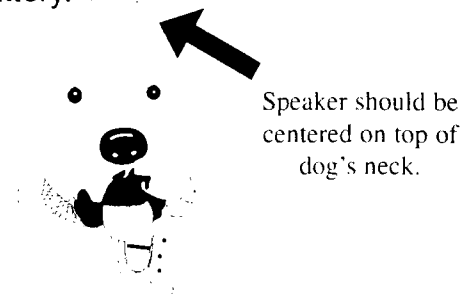

**\*REMINDER:** Use 9 volt "**ALKALINE**" batteries **ONLY!** When troubleshooting complications of *Lovett's Beeper* always check to make sure you are using **ALKALINE Batteries!!!**