


# 7tm-tour

TM 002

## Instructions for use:

For changing from the down hill mode to the climbing mode  
please switch the lock lever like indicated below.

**Very important:** make sure that the lock (1) clicks into the end position  
and the intended mode is adjusted. Otherwise an unintended  
release with the risk of injury or damage of binding parts could result.  
Please refer to the 7tm owners manual for complete instructions.

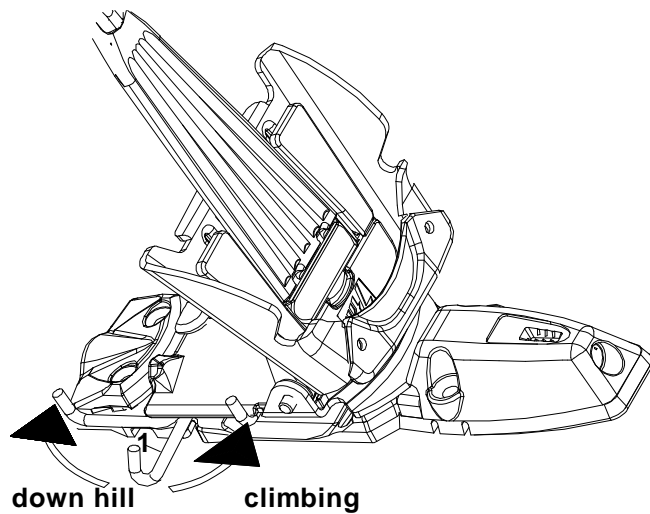

[www.telemarking.de](http://www.telemarking.de)