 


KRUPPS

Il Barista

Model #220

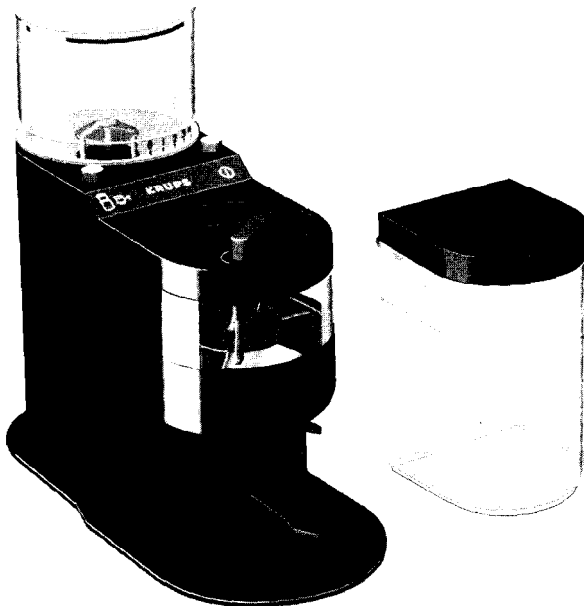

Instructions
for Use

Warranty

Guarantee of
Performance

IMPORTANT SAFEGUARDS


When using electrical appliances, basic safety precautions should always be observed, including the following:










- Read all instructions and information in this instruction book and any other literature included in this carton referring to this product before operating or using this appliance carefully.
- To protect against risk or electrical shock do not put unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before putting on or taking off parts, and before cleaning.
- Avoid contacting moving parts.
- Do not remove lid until grinding mechanism has stopped completely.
- Do not place fingers, hand, hair, etc. in or near grinding chambers.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been dropped or damaged in any manner. Return appliance to the nearest authorized KRUPS Service Center for examination, repair or electrical or mechanical adjustment.
- The use of attachments not recommended or sold by the appliance manufacturer may cause fire, electric shock or personal injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter. Do not let cord touch any hot surfaces, including the stove.
- Do not use appliance for other than intended use.
- Check inside of grinder for presence of foreign objects before using.
- This appliance is for household use. Any servicing other than cleaning and user maintenance should be performed by any authorized KRUPS Service Center (see Guarantee of Performance).










SAVE THESE INSTRUCTIONS

Krups Il Barista

- a: Grinder chamber
- b: Grinding dial
- c: ON/OFF-button
- d: Lock/Release-button
- e: Motor base
- f: Portion Control Dispenser w/lever
- g: Base tray
- h: Storage container lid
- i: Storage receiver
- j: Storage container
- k: Universal filter guide
- l: Cleaning brush

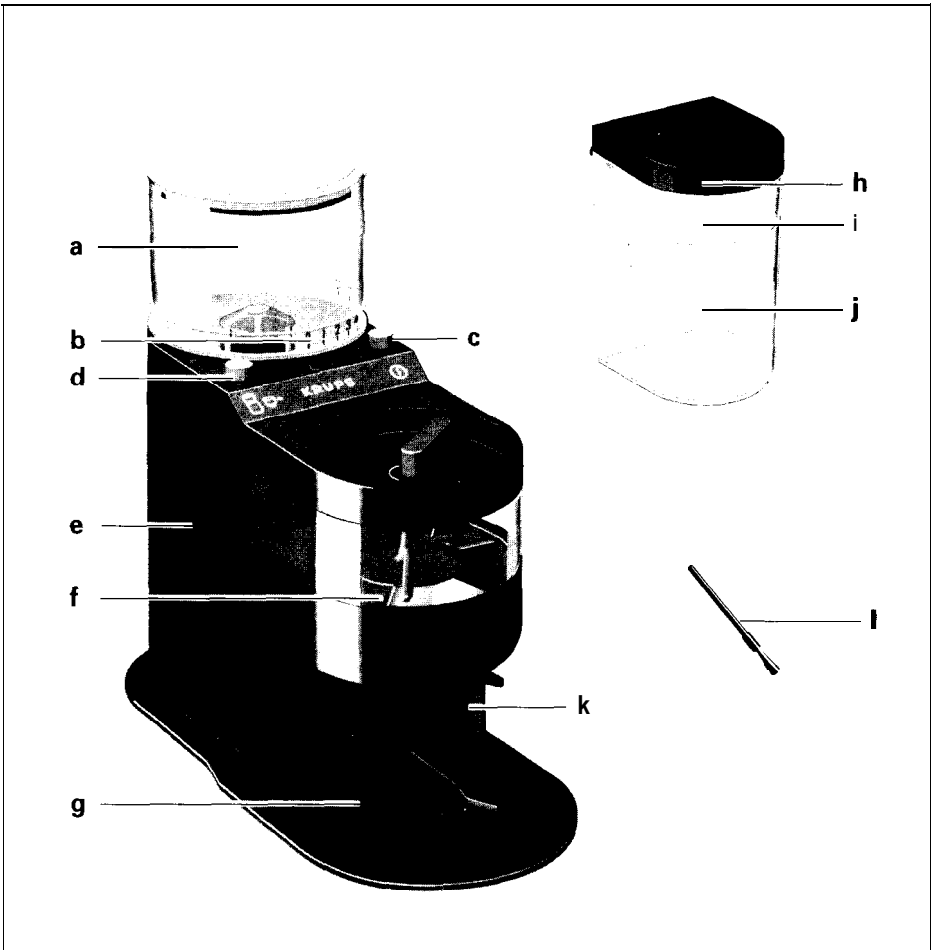

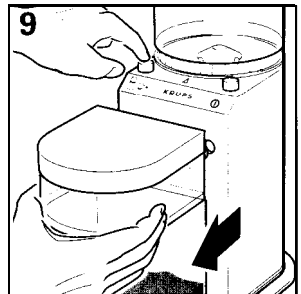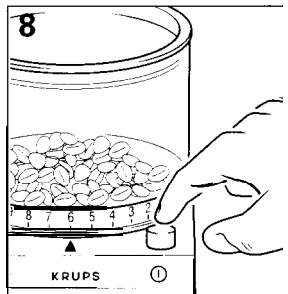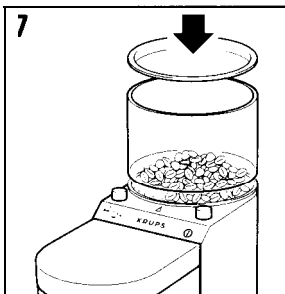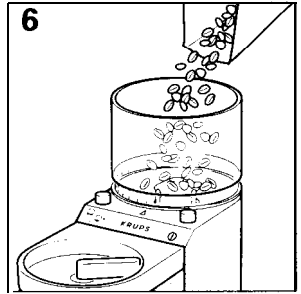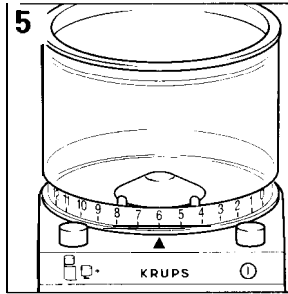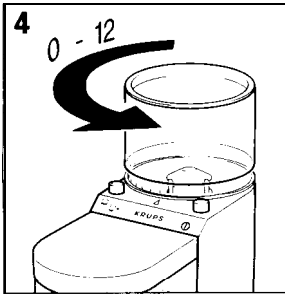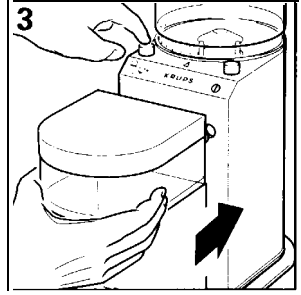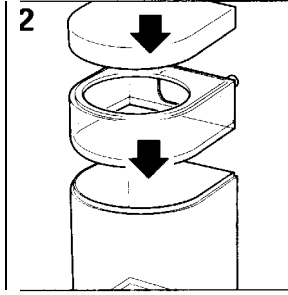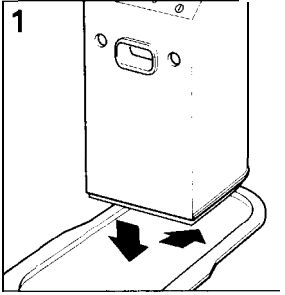

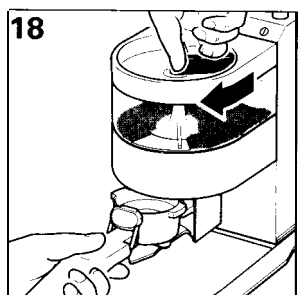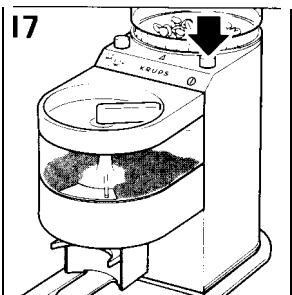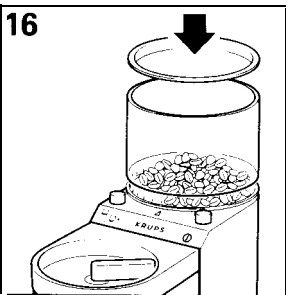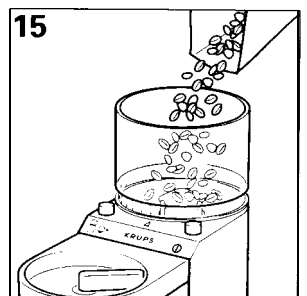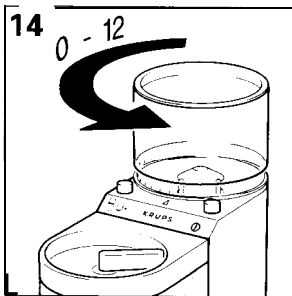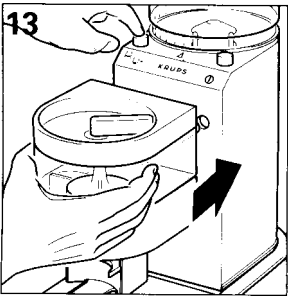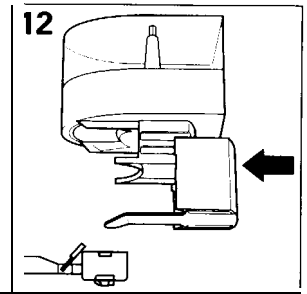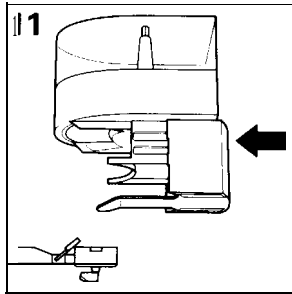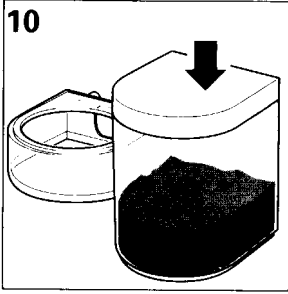

Your new KRUPS “Il Barista” professional espresso burr grinder is the ideal grinder for espresso use. The KRUPS “Il Barista” has the following features:

- Professional 150 watt professional style burr grinder is the ideal grinder for pump espresso use.
- 12 degree grinding dial to suit all your bean grinding needs, from very fine to very coarse.
- Large grinding chamber holds up to 7 oz. of beans at a time to grind large quantities.
- Portion control lever dispenses coffee directly into your filter holder, one shot at a time for even and precise measuring.
- Filter holder guide mounting accommodates most filter holders for direct portion dispensing into holder.
- Lock/release button to insert or remove portion control dispenser or coffee storage.
- Removable coffee storage container lets you grind a large quantity of beans at one time. Container holds up to 14 oz. of ground coffee.
- Stainless steel grinding discs are long lasting and produce fast, precise grinding results.
- Cleaning brush helps keep grinding discs clean and free from powder build-up. The brush is great for the hard to reach areas of the grinder.

Operating Instructions

Basic Grinder Assembly

Place the motor base (e) on the base tray (g) (see figure 1). The base tray serves as a sturdy bottom for the motor base and also catches loose grinds of coffee that may fall from the grinding chamber.

Inserting The Coffee Storage Container

Assemble the coffee storage container by placing the coffee storage receiver (i) on top of the storage container (j). Cover the storage container with the lid (h) (see figure 2).

To attach the coffee storage container to the motor base, align the pegs at the rear of the storage container with the holes in the motor base (see figure 3). Push inward until you hear a definitive “click”. The coffee storage container is now fully engaged.

Grinding Coffee Beans

Setting The Grinding Dial

The grinding dial lets you choose the degree of fineness to suit all tastes and needs.

At the bottom of the grinding chamber is a scale with markings ranging from 0 12.

0 7 = very fine results for espresso

8 - 12 = very coarse results for coffee

By turning the grinding dial to the left or right, you will vary the level of grinding results to suit Your needs (see figure 4). The grinding degree you have chosen should be in line with the arrow on the motor base, directly above the “KRUPS” logo (see figure 5).

Filling The Grinding Chamber

Remove the lid of the grinding chamber (a) and fill with coffee beans (see figure 6).

The maximum quantity the container holds is 7 oz. or 200 grams of beans. Do not exceed this quantity; otherwise, not all the beans will be ground. Place the lid back on the grinding chamber (see figure 7).

Turning The Machine On

Press the ON/OFF button (c) (see figure 8). The grinder should run until all beans have gone through the stainless steel grinding discs. Press the ON/OFF button to turn the grinder off.

Removing Coffee Grounds

To remove the coffee storage container from the motor base, press the lock/release button (d) (see figure 91). Detach the coffee storage container. Remove the storage receiver (i) and replace it with the storage container lid (h) (see figure 10). Cover should be properly secured to retain freshness.

Note: Some coffee grounds may remain in the chute and may be loosened and removed using the cleaning brush.

Portion Control Dispenser

The “IlBarista” features a portion control dispenser that will dispense directly into the filter holder of your espresso maker.

Please note that the filter holder guide is adjustable to two positions; the upper position accommodates small size filter holders, and the lower position accommodates larger size filter holders (see figure 11 and 12).

1. Attach the portion control dispenser(f) to the motor base (e), aligning the pegs in the dispenser with the holes in the motor base (see figure 13). Press inward until you hear a definitive “click”.
2. Select desired degree of grinding using the grinding dial (b) (see figure 14).
3. Place beans into the grinding chamber (see figure 15). Place the lid back onto the grinding chamber (see figure 16).
4. Turn the espresso grinder ON and run until all the beans have been ground. Turn the grinder OFF (see figure 17).

5. Insert the proper filter sleeve into the filter holder from your espresso machine (1 or 2 cups). Insert the filter holder under the portion control dispenser, so that it rests against the universal filter guide mounting (k) (see figure 18).

6. To dispense ground coffee into your espresso holder, place filter holder directly under the portion control dispenser. Pull the lever forward (clockwise) one full pull. Upon release of the lever, coffee will be dispensed into the filter holder.

One pull releases ground coffee for one cup of espresso. Two pulls releases enough ground coffee for two cups of espresso (see figure 18).

Note: To ensure that you release enough coffee into your filter holder, be sure to pull the lever completely forward each time.

7. To remove the portion control dispenser from the motor base, press the lock/release button (d).

Note: Overloading Safety Mechanism!

If the grinder should become too hot and overheat, turn the grinder off and let it cool for approximately 2 minutes. Once the unit has cooled, resume operation.

Cleaning

Always unplug the appliance before cleaning. Using the provided cleaning brush (I), gently sweep away any excess coffee powder or grinds from receptacles or tray. DO NOT use any cleaning agents or tools to clean the interior of the motor base. Motor base can be externally wiped with a soft damp cloth.

NEVER place portion control dispenser in water. Clean with provided brush only. Coffee storage container may be washed in mild soapy water or wiped with soft damp cloth. We do not recommend putting these, or any other pieces in the dishwasher.

NEVER immerse the motor base in water or hold it under running water!

Limited One Year Warranty

Your KRUPS #220 is covered by the following warranty:

If from date of purchase within one year this KRUPS product fails to function because of defects in materials or workmanship, KRUPS North America will, at its option, repair or replace the unit with our charge, provided the owner has a proof of date of purchase.

This warranty will be void if malfunction was caused by damage to the product by accident, misuse, use on frequency or voltage other than marked on the product and/or described in the instructions, abuse including tampering, damage in transit, or use for commercial purposes. This warranty gives you specific legal rights, and you may also have other rights which may vary from state to state.

CAUTION

This appliance is for household use. Any servicing other than cleaning and user maintenance should be performed by the nearest authorized KRUPS Service Center (see Guarantee of Performance).

Do not immerse base in water.

To reduce the risk of fire or electric shock, do not remove the base. No user serviceable parts inside. Repair should be done by an authorized KRUPS Service Center only.

SPECIAL CORD SET INSTRUCTIONS

Regarding your cord set:

- A. A short power-supply cord is provided to reduce risks resulting from becoming entangled in or tripping over a longer cord.
- B. Longer extension cords are available and may be used if care is exercised in their use.
- C. If a long extension cord is used, (1) the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance, (2) if the appliance is of the grounded type, the extension cord should be a grounding-type 3 wire cord, and (3) the longer cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over.
- D. This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fully fit in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician.
Do not attempt to defeat this safety feature.

GUARANTEE OF PERFORMANCE

This fine KRUPS product is manufactured according to a rigid code of quality standards, and, with minimum care, should give years of satisfying service.

However, should the need arise for repairs or for replacement parts within or after the warranty period, please call our **CONSUMER SERVICE DEPARTMENT:**

(800) 526-5377

24-hours a day, 7 days a week

You will be provided with specific instruction on how to get your product repaired, as well as the name and address of your nearest authorized KRUPS Service Center.

The department will also be able to answer any general product questions you may have.

Before calling the Consumer Service Department, please have the type number of your KRUPS appliance available.

You must have this information before calling our Consumer Service Department so that we may better answer your questions. The type number can be located by looking at the bottom of your appliance.

This product is Type #220

Any general correspondence can be addressed to:

KRUPS North America, Inc.

PO. Box 3900

Peoria, IL 61612