

Setting the Photocell

KR-Computer

Setting the Photocell

The photocell is set at the factory to 100. It is possible that during the transportation of the unit that the vibrations may cause a change to this setting. It is therefore necessary to check and adjust the photocell when the unit is installed.

Setting Test

Turn the unit on and wait for approx. 5 minutes to allow the lamp to warm up. After this warm up period press keys 1 and 3 simultaneously. This will open the shutter and a figure will be displayed in the EXP I window, after about a minute this figure should stabilize. The figure in the EXP I window should read 95 - 105 and a beeping tone should be heard. This would indicate that the photocell is at the correct setting. If this figure is different then be necessary to change the setting of the photocell.



Adjusting the Photocell

After testing the photocell it may be necessary to adjust the setting, this is done as follows: select the maximum light level at the intensity control switches. The computer should be put into the test mode by pushing the keys 1 and 3 simultaneously. Turn the screw on the side of the photocell with a screwdriver until you get a reading in the computer display of between 95 and 105 and you hear the continuous beeping signal. To leave the testing mode press the STOP - key on the computer.

Attention

All service procedures should be performed by a qualified technician
 Do not expose your eyes and skin to ultra-violet light.
 UV rays are hazardous to your health. Avoid direct and indirect exposure. Always use approved protection.

