

Location Criteria

The unit should always be located in accordance with the diagram information shown to the right. If the system is different then the unit should be fitted onto the cold water pipe to where the water is being heated, preferably without any 'T' off's after the unit.


The Hydropath Guarantee

Should any fault occur during the first three years of operation it will be replaced or repaired free of charge.

Do not attempt to carry out any unauthorised repair as this will invalidate the guarantee. Retain the proof of purchase and contact the supplier or place where the unit was purchased.

This guarantee does not affect the consumers statutory rights and does not include the cost of carriage.

Hydropath does not accept any responsibility for water leaks that may occur by the removal of lime scale or for any losses arising from the use of its water conditioners.

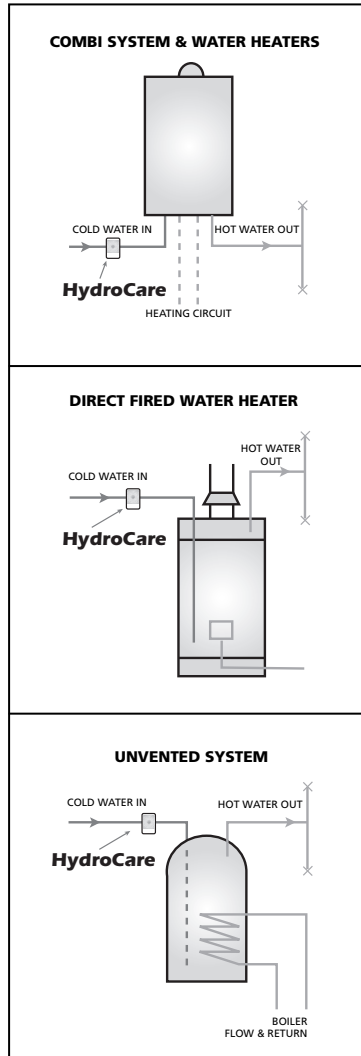


HydroCare Model HC38

INSTALLATION INSTRUCTIONS


INSTALLATION INSTRUCTIONS

Stage 1

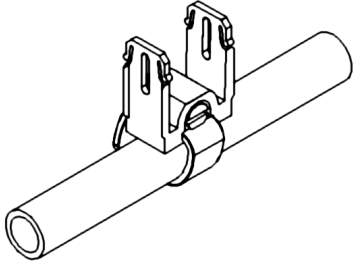


Screw the mounting bracket to the pipe work with a screwdriver.

Stage 2

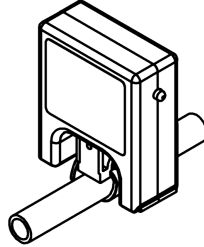


Push the top section firmly onto the bracket.

Stage 3

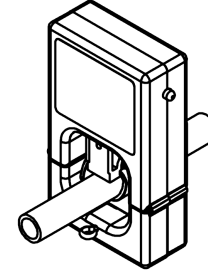

Clip on the lower section and withdraw the split pin

Stage 4

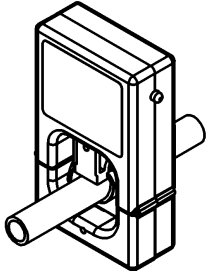

Plug in the low voltage cable into the unit and connect the transformer to the mains supply. The red light should glow brightly.

To remove the unit from the pipe replace the split pin and slide the lower section off then pull the top section off the pipe clamp.

FAULT FINDING

The red light on the side of the unit shows that the signal is being transmitted into the water. It should be bright, if this is not the case check the following.

1. The split pin has not been removed – ***remove the pin***
2. There is no electrical supply or the low voltage connector has not been fully inserted – ***check the mains supply is 'ON'***
3. The unit may be fitted in an electrical loop – this can be caused when the unit is fitted in a pipe work loop or where there is an earth bonding on either side of the unit – ***reinsert the split pin and remove the unit from the pipe, reassemble off the pipe and remove the split pin, if the light is now bright find a location out of the loop to fit the unit.***



NOTE: The E Version in-line power supply is fitted with a moulded on power plug if this is removed then this unit must only be installed by a qualified person in accordance with the latest wiring regulations