


Hands Free. Odor Free. Trouble Free.

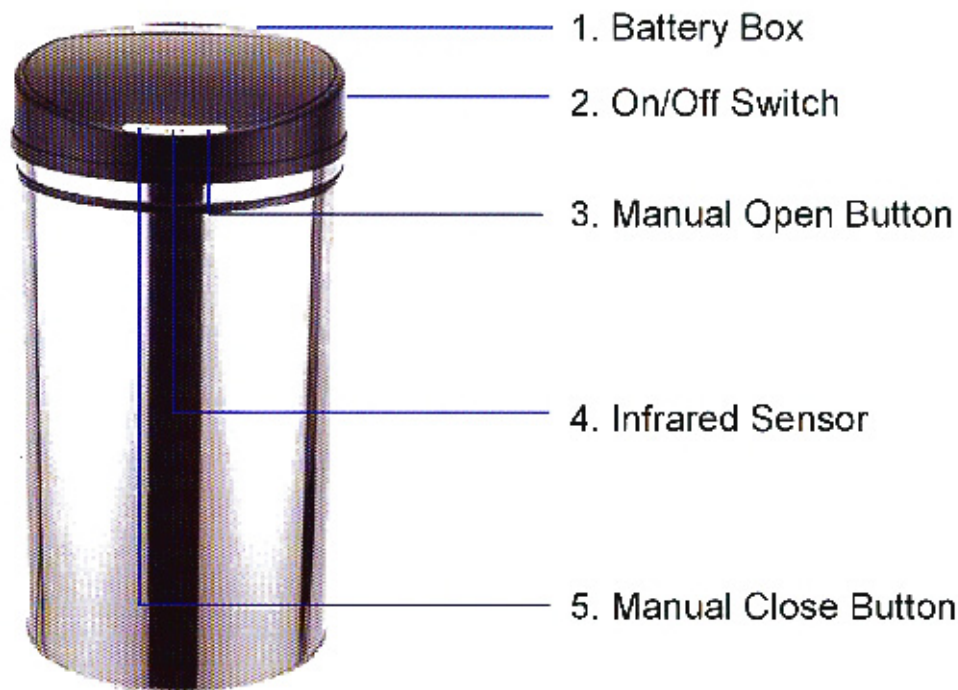

Using the Unit:

1. Deposit trash in the receptacle by moving your hand in front of the infrared sensor.
2. About a half a second later, the lid will open.
3. The lid will close three seconds after moving your hand away from the sensor.
4. As long as your hand remains in front of the sensor, the lid will stay open.

Manual Operation:

1. The trashcan will remain open if you press the OPEN button and will remain open until the CLOSE button is pressed.

When to replace the battery:

1. If the indicator light is blinking RED the unit is operating normally.
2. When the indicator light begins to blink YELLOW, the batteries need to be replaced.