

PULLMAN-HOLT

Operation & Care Instructions

Save For Future Reference

P5 PorterVac

This product is a high performance back pack vacuum for commercial/industrial use. All parts used in the manufacturing of this vacuum have passed rigid quality control standards prior to assembly, and an "each unit" final inspection prior to packaging is your assurance of proper assembly. This vacuum was protectively packed to prevent possible damage in transit. Should damage occur, please notify the transporting carrier immediately for loss and/or claim.



IMPORTANT SAFEGUARDS & OPERATIONS

WARNING:

To reduce the risk of fire, electric shock, or injury:

1. Do not leave appliance unattended when plugged in. Unplug from outlet when not in use and before servicing.
2. Do not use outdoors or on wet surfaces.
3. Do not try to recover any liquid with this vacuum. This vacuum is for DRY RECOVERY only.
4. Do not allow to be used as a toy. Close attention is necessary when used near children.
5. Use only as described in this manual. Use only manufacturer's recommended attachments.
6. Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
7. Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Keep cord away from heated surfaces.
8. Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
9. Do not handle plug or appliance with wet hands.
10. Do not put any object into openings. DO not use with any opening blocked; Keep free of dust, lint, hair, or anything that may reduce air flow.
11. Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
12. Turn off all controls before unplugging.
13. Use extra care when cleaning on stairs.
14. Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
15. Connect to a properly grounded outlet only. See grounding instructions.
16. Do not pick up any objects that are burning or smoking, such as cigarettes, matches, or hot ashes.
17. Do not use without a dust bag and/or filters in place. Do not operate with wet hands.

INSPECTION

Carefully unpack and inspect your new vacuum for shipping damage. Each unit is tested and thoroughly inspected before shipping.

WARNING


- DO NOT vacuum with a frayed, worn, or damaged cord.
- DO NOT vacuum liquids or expose the backpack vacuum to rain or water.
- DO NOT vacuum hazardous or toxic materials.
- DO NOT use to pick up flammable or hazardous materials.

GROUNDING INSTRUCTIONS

This appliance must be grounded. If it should malfunction or breakdown, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This appliance is equipped with a cord having an equipment-grounding conductor and grounding plug. The plug must be inserted into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

WARNING

Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or service person if you are in doubt as to whether the outlet is properly grounded. Do not modify the plug provided with the appliance. If it will not fit the outlet, have a proper outlet installed by a qualified electrician. This appliance is for use on a nominal 120-volt circuit and has a grounding attachment plug that looks like the plug illustrated in sketch A. Make sure that the appliance is connected to an outlet having the same configuration as the plug. No adaptor should be used with this appliance.

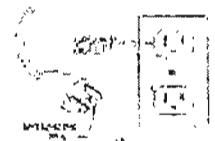

IMPORTANT SAFEGUARDS & OPERATIONS

THERMO-PROTECTION

This appliance is equipped with a self-resetting thermo-protector. Vacuum will shut off if the inlet is plugged or if the airflow is severely restricted. If this occurs, please allow a few minutes for the thermo-protector to cool and reset itself.

OPERATION INSTRUCTIONS

1. Pass the pigtail cord through the strap outside the left side of the waist belt. (Figure E.)
2. Place the pigtail switch box under the sewn strap and fasten the other strap round the switch box (Figure F & Figure G).
3. Fasten the waist belt and chest belt snugly and make sure the weight is resting comfortably on your hips. NOTE: The back-plate is adjustable up or down by removing the four screws that attach to the vacuum's body.



Figure E



Figure F



Figure G

WARNING

The following information is for use by qualified service personnel only and is to provide guidance for troubleshooting and maintenance.

- ▶ UNPLUG the vacuum when working on the motor or any electrical part.
- ▶ CHECK the condition of all electrical cords before each use.
- ▶ DO NOT lubricate the motor; it is equipped with sealed bearings.
- ▶ The appliance has NO user serviceable parts.

PROPER STORAGE

When the vacuum is not in use, it should be stored in a dry place.

ELECTRICAL CORD CARE

NEVER stretch the cord tightly between the vacuum and the outlet. A cord that is stretched or pulled will not function properly and creates a danger. After vacuuming, unplug the cord and wind it up loosely. DO NOT wind the cord up by wrapping around your hand and elbow.

PULLMAN-HOLT

10702 N 46th Street • Tampa, FL 33617
(813) 971-2223 • toll free (800) 237-7582
fax (813) 971-6090 • order entry fax (800) 833-8875
www.pullmanholtcorp.com

B600905 7/06

Cap
B230305

Cloth Bag
B704131

Clamp
B230306

Exhaust Damper
B704133


Harness
B230309

Switch
B230308

Motor Mounted Filter
(not shown)
B600903

Paper Bag
B704130

Complete Hose
Assembly
B230310

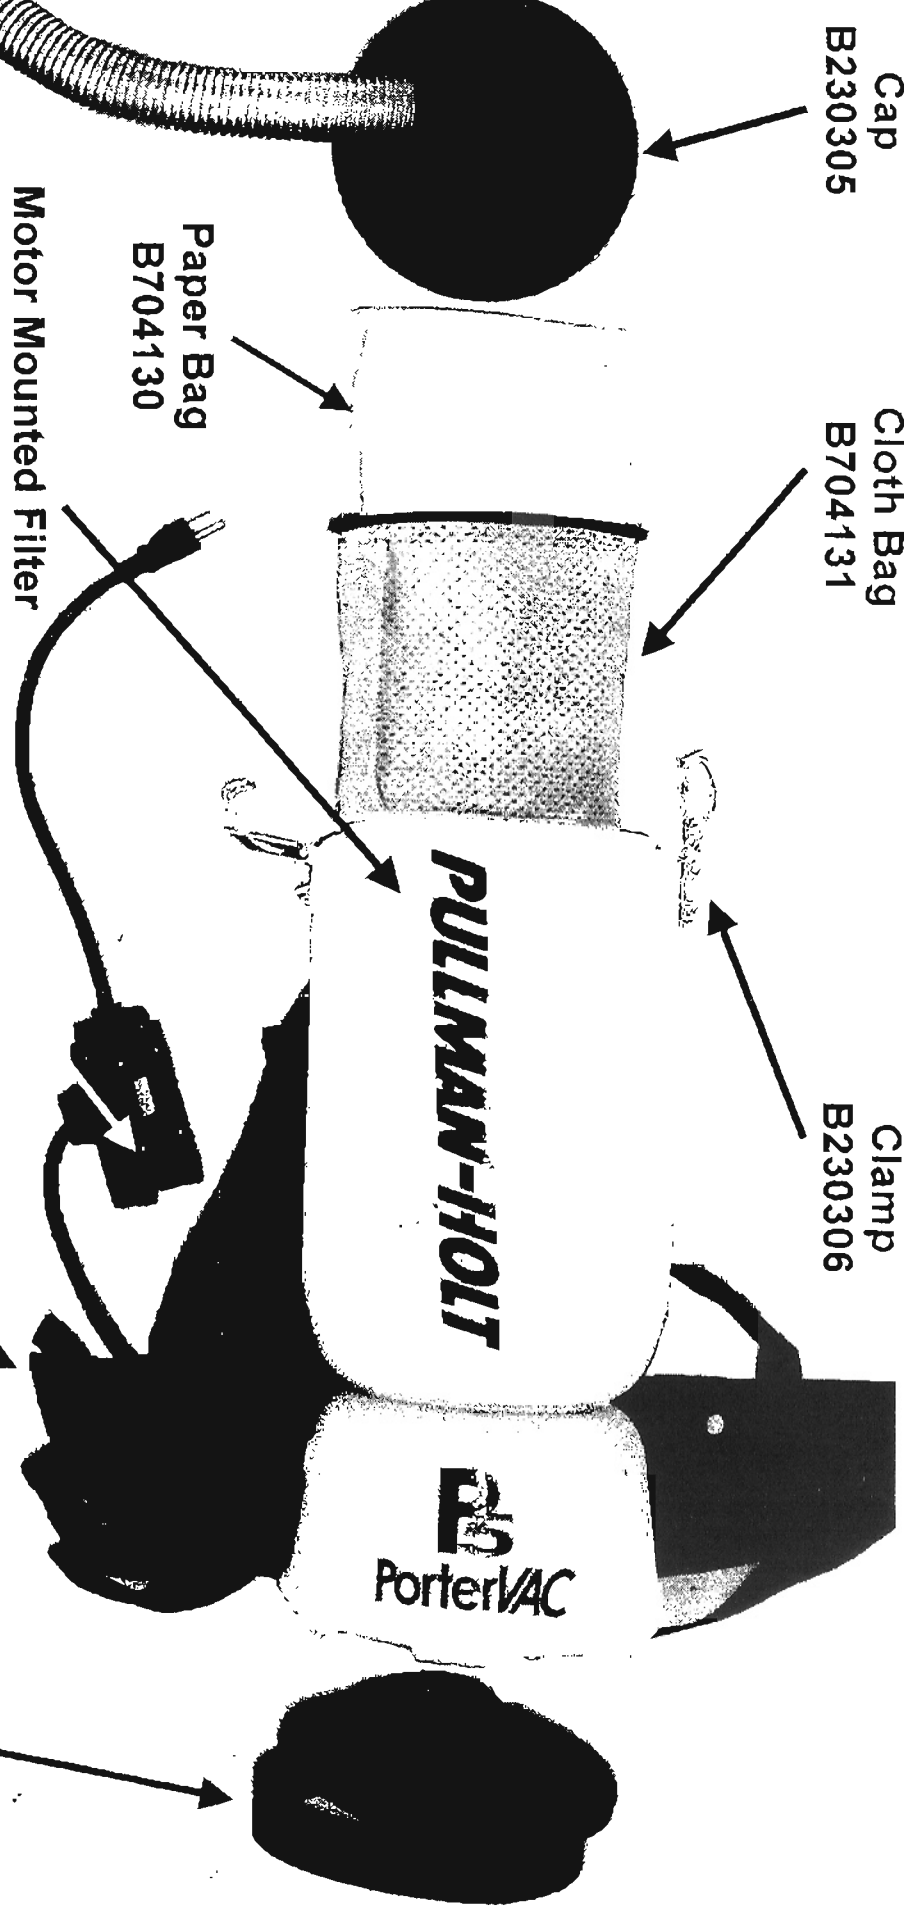

Model P5