
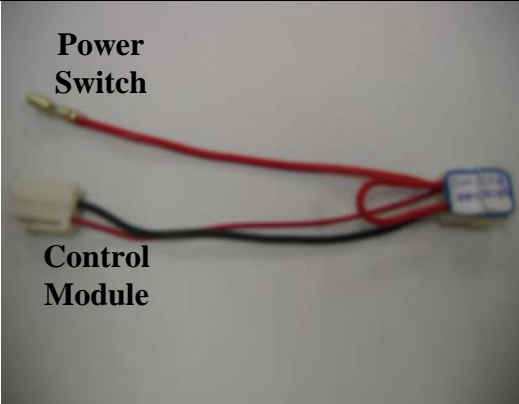






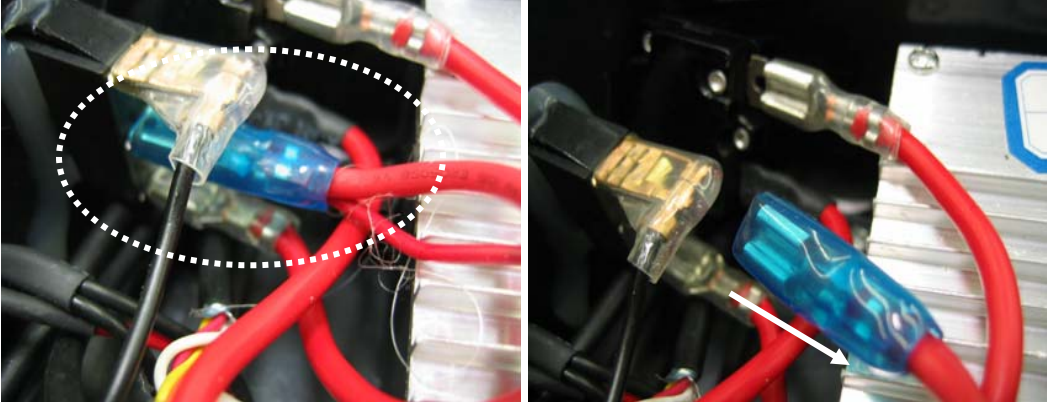
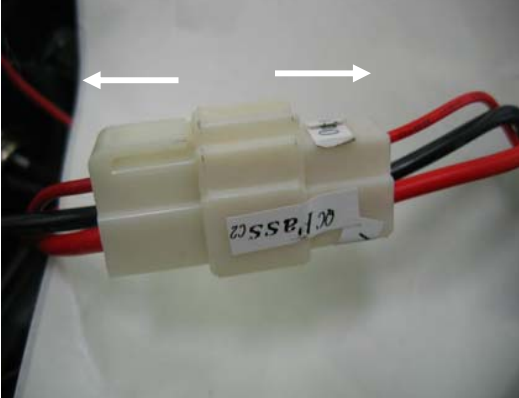
E200 and E300 Battery Replacement Procedures

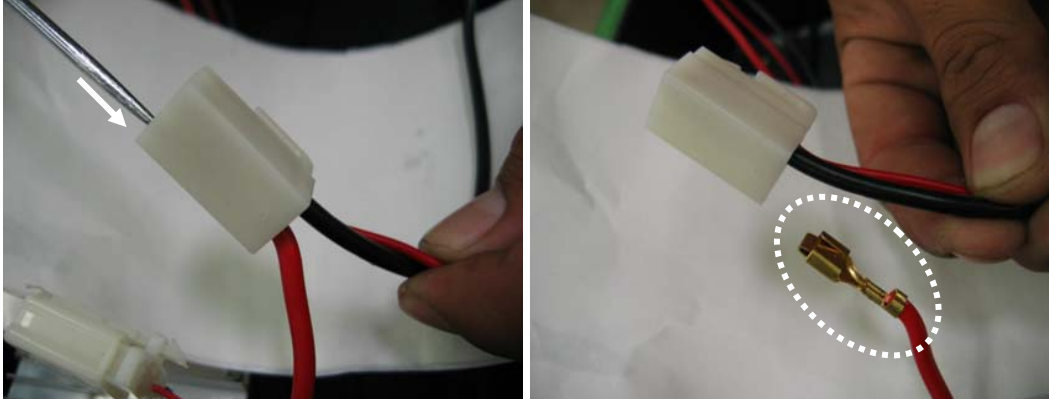

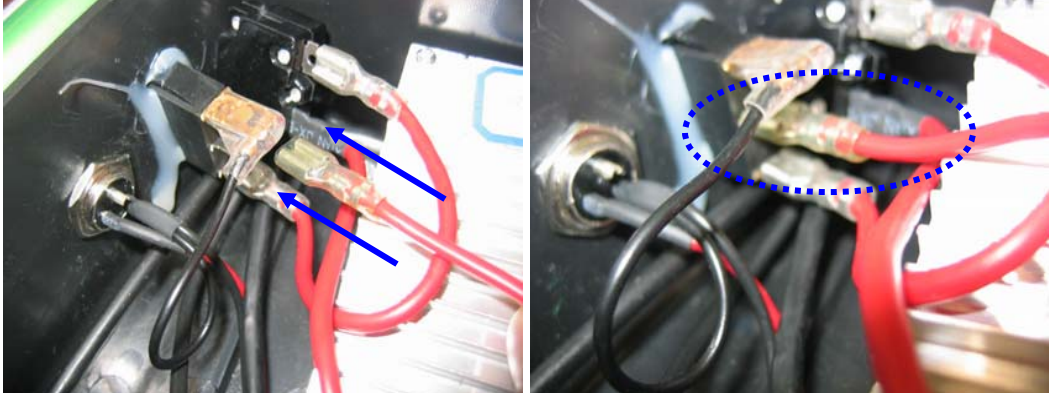
Old Battery Replaced by New Connector Battery (E200 Version 01 ~ 07; E300 Version 01 ~ 04)

Step	Process	Pictures
1	Turn off the Power Switch	
2	Get the Adapter	 <p data-bbox="919 743 1024 813">Power Switch</p> <p data-bbox="919 954 1024 1024">Control Module</p>
3	Open the Deck	



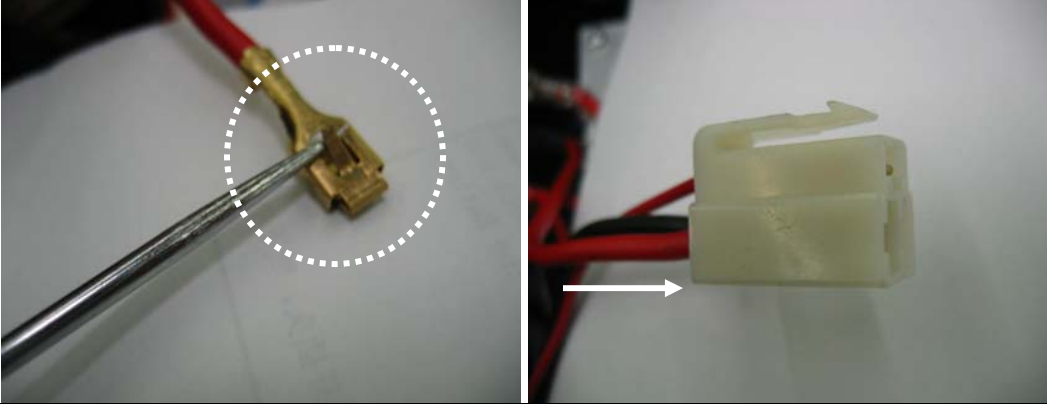
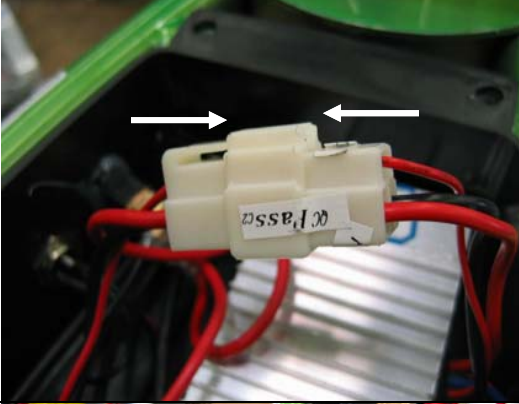
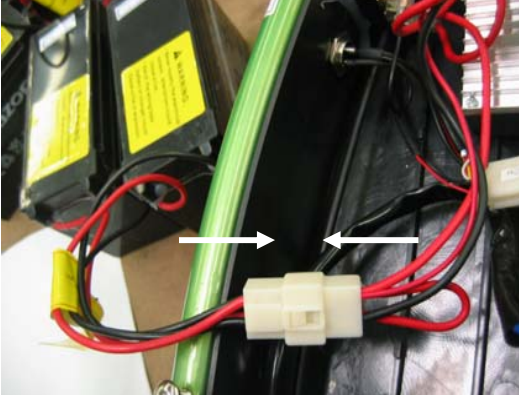
E200 and E300 Battery Replacement Procedures

Step	Process	Pictures
4	Move the Battery from the Tray	
5	Remove the Middle Red Wire from the Power Switch	
6	Disconnect the connector between Battery and Controller	

Step	Process	Pictures
7	Remove the thick red wire of Reset Button from Battery Connector Tool: Scribe	
8	Totally Remove the battery from the Tray	
9	Insert Adapter's Thick Red Wire to the Middle of the Power Switch	




E200 and E300 Battery Replacement Procedures

Step	Process	Pictures
10	Adjust the pins , then insert Reset Thick Red Wire to the Adapter's Male Connector Tool: Scribe	
11	Connect to the Controller	
12	Connect adapter to the Battery	






E200 and E300 Battery Replacement Procedures

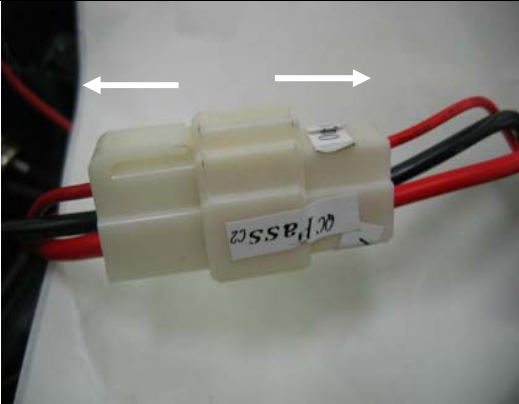
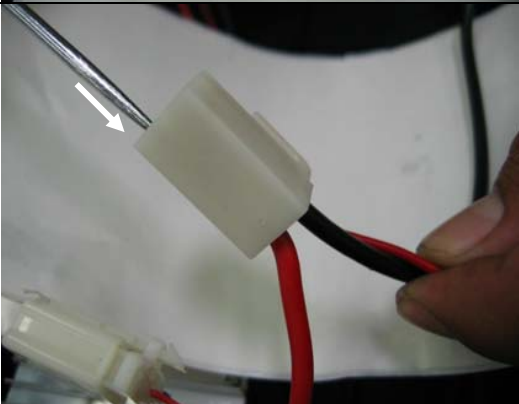
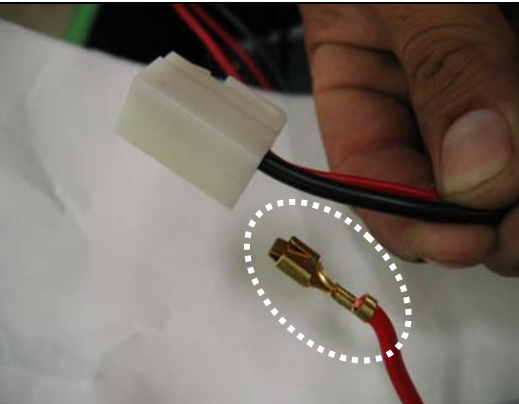
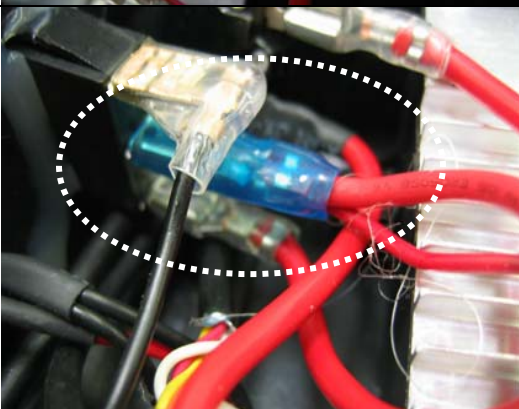

Step	Process	Pictures
13	Place the Battery into the Tray and Close the Deck	


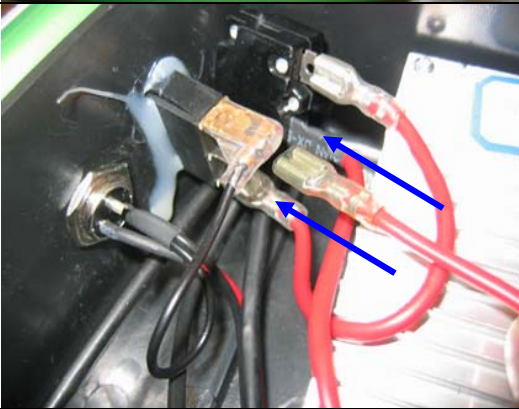
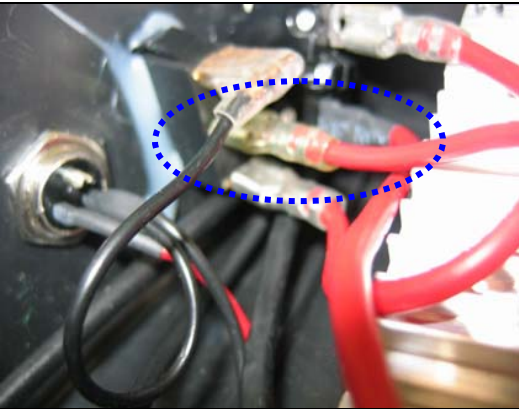
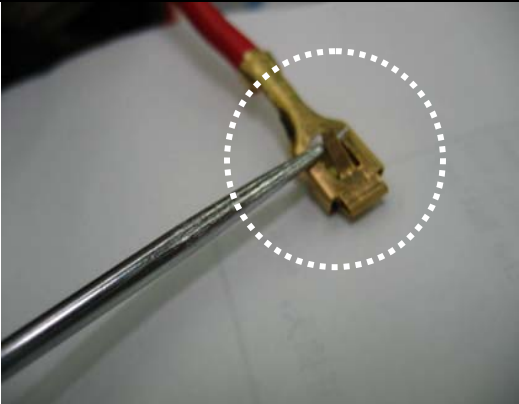
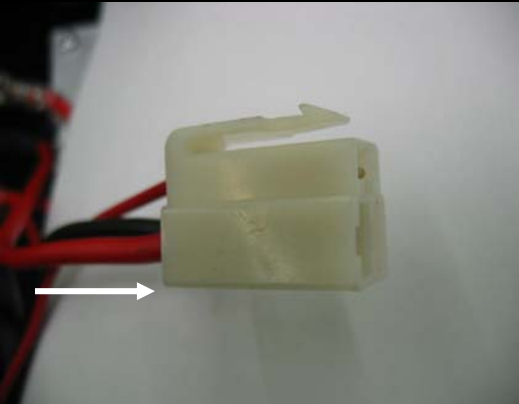


E200 and E300 Battery Replacement Procedures

Old Battery Replaced by Old Battery (E200 Version 01 ~ 07; E300 Version 01 ~ 04)



Step	Process	Pictures
1	Turn off the Power Switch	
2	Open the Deck	
3	Move the Battery from the Tray	

4	Disconnect the connector between Battery and Controller		
5	Remove the thick red wire of Reset Button from Battery Male Connector Tool: Scriber		
6	Remove the Middle Red Wire from the Power Switch		

7	Totally Remove the Battery from the Tray		
8	Insert Battery's Thick Red Wire to the Middle of the Power Switch		
9	Adjust the pins , then insert Reset Thick Red Wire to the Battery's Male Connector Tool: Scriber		






E200 and E300 Battery Replacement Procedures



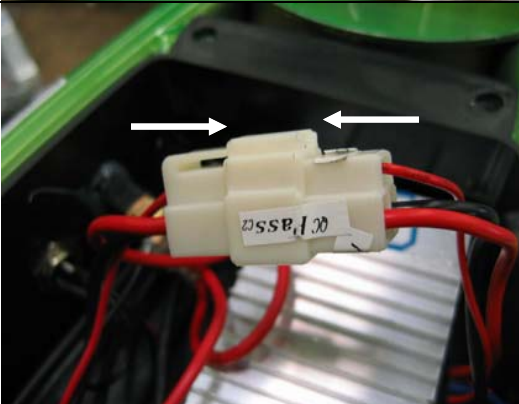
10	Connect to the Controller		
11	Place the Battery into the Tray and Close the Deck		



E200 and E300 Battery Replacement Procedures

New Battery Replaced by New Battery (E200 Version 08; E300 Version 05)

Step	Process	Pictures
1	Turn off the Power Switch	
2	Open the Deck	
3	Move the Battery from the Tray	

4	Disconnect the connector between Battery and Controller		
5	Totally Remove the Battery from the Tray		
6	Connect Battery to the Controller		



E200 and E300 Battery Replacement Procedures

7 Place the Battery into the Tray and Close the Deck

