

DIAGRAM 1.0


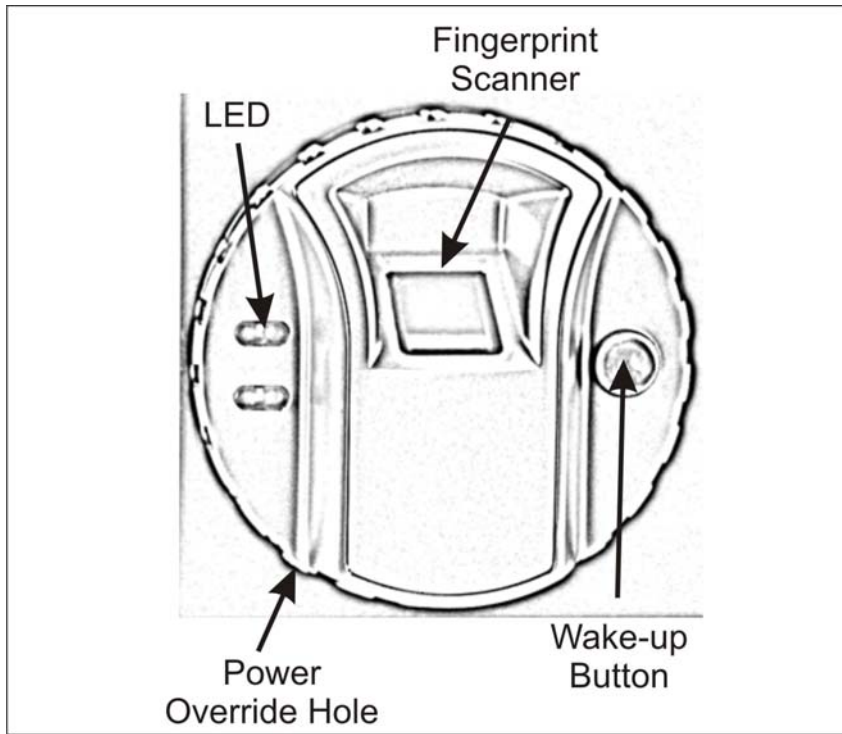


DIAGRAM 2.0

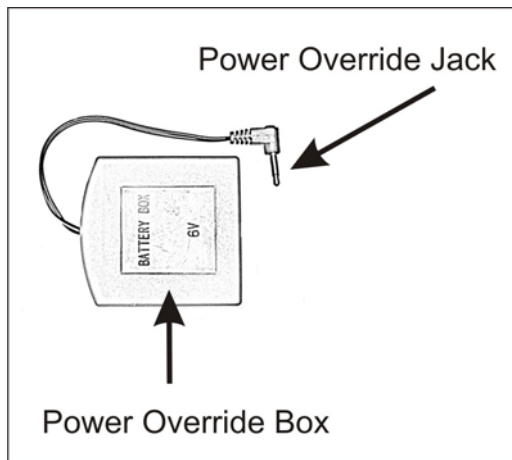

WELCOME:

STEP 1 – OPENING THE SAFE:

1. Install 4 new batteries in the **Power Override Box** and plug the **Power Override Jack** into the **Power Override Hole**.
2. Press the **Wake-Up Button**.
3. Place your finger on the **Fingerprint Scanner** until the **LED** turns **GREEN** followed by a long beep.
4. Remove your finger from the **Fingerprint Scanner**.
5. Turn the **Knob** clockwise (right) and open the door.

**NOTE:** safe will open with any finger if no fingerprint is enrolled.

**Now you are ready to enroll your own fingerprint.**

ENROLLING:

STEP 2 – ENROLLING FINGERPRINTS

1. Open the safe by following **Step 1**.
2. Press the **Setup Button** (Located inside safe, on the back of the door, next to hinges), the **Fingerprint Scanner** will flash **RED**.
3. Now: (while scanner light is flashing **RED**)
  - a. Place your finger on the **Fingerprint Scanner**, wait for one beep and **LED** turns **GREEN**.
  - b. Remove your finger from the **Fingerprint Scanner** for one second.
  - c. Place your finger on the **Fingerprint Scanner** for the second time, wait for two beeps and the **LED** flashes **GREEN** twice.
  - d. Remove your finger from the **Fingerprint Scanner**.
  - e. The fingerprint is enrolled.

**NOTE:** To add additional fingerprints, repeat **Step 2**.

## DELETING:

### STEP 3 – DELETING FINGERPRINTS:

1. Please follow **Initialization Process**.

**NOTE:** You cannot delete individual users. You must delete all users.

## INITIALIZING:

### RESTORING FACTORY SETTING:

1. Open the safe by following **Step 1**.
2. Open battery cover. (back of the door)
3. Remove one battery from the battery tray.
4. Press and hold the **Wake-up Button** for three seconds, then release.
5. Press and hold the **Setup Button**. While holding the **Setup Button** insert the battery back to the battery tray.
6. Keep holding the **Setup Button** until the **LED** flashes **GREEN** twice and 2 beeps will sound.
7. Release the **Setup Button** and the safe is initialized!

## EMERGENCY OPENING:

### KEY OVERRIDE:

1. Gently unscrew the Chrome Keyhole Cap (located near the keypad), this will reveal the Keyhole.
2. Insert the key with notch pointing upwards and turn the key counter-clockwise (left) to open the safe.

### POWER OVERRIDE:

1. Install 4 new batteries in the **Power Override Box** and plug the **Power Override Jack** into the **Power Override Hole**.
2. Open the safe by following **Step 1**.
3. Open battery cover and install 4 new batteries.
4. Close battery cover, the safe goes back to normal operation mode.

**NOTE:** The safe keeps the fingerprints in memory up to 6 months without power.



# User Manual For Fingerprint Safe

## Models:

HZ-30

HZ-34

HZ-53