


NYRIUS Global Talking Translator (ENTOURAGE11)

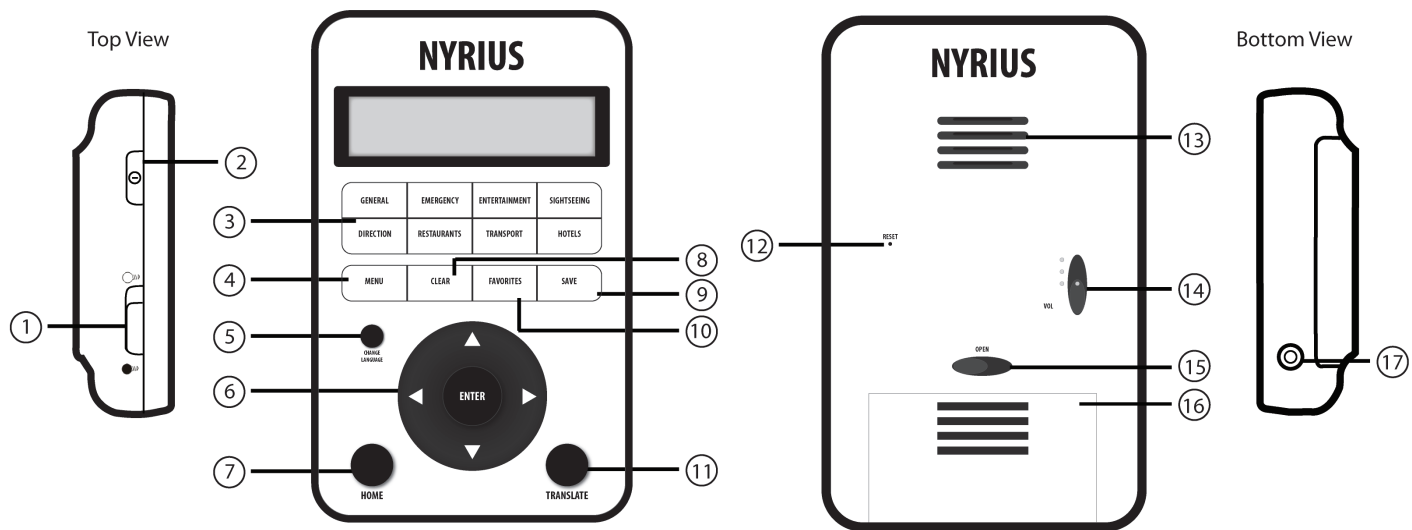

- 1 - Backlight switch
- 2 - Power Button
- 3 - Topic Buttons

- 4 - Menu Button
- 5 - Change Language
- 6 - Enter Button

- 7 - Home Button
- 8 - Clear Button
- 9 - Save Button

- 10 - Favorites Button
- 11 - Translate Button
- 12 - Reset Button

- 13 - Speaker
- 14 - Volume Switch
- 15 - Open Switch

- 16 - Battery Door
- 17 - Earphone Jack

Instructions

To Switch The Power On And Off

1. Press ❶ to turn the translator ON or OFF.
2. The unit will automatically turn off if it is idle for 5 minutes.

To Turn The Backlight On And Off

1. Move the switch to position to turn the Green Backlit LCD on.
2. Move the switch to position to turn the Green Backlit LCD off.

To Adjust The LCD Contrast

1. Press the MENU key until the screen shows Setup; then press ▼ until you see contrast. Press ENTER.
2. Press ◀ or ▶ to adjust the LCD level of darkness, then press ENTER to confirm (◀ is lighter, ▶ is darker).

To Switch Key Tone On And Off

1. Press the MENU key until the screen shows Setup; then press ▲ until you see KEYTONE. Press and ENTER.
2. Press ▼ or ▲ to turn the Key Tone ON or OFF, then press ENTER to confirm.

To Set Home And Target Language

1. Press the MENU key until the screen shows Setup. Press ENTER. Press ▼ or ▲ to select your Home language, then press ENTER.
2. The screen will show: "Target." Press ▼ or ▲ to select the desired Target language then press ENTER to confirm. You can choose between: English (ENG), French (FRE), German (GER), Turkish (TUR), Dutch (DUT), Swedish (SWE), Russian (RUS), Spanish (SPA), Italian (ITA), Japanese (JAP), and Mandarin Chinese (CHA).

Easy Target Language Switching

Press the CHANGE LANGUAGE button to scroll through the optional languages until you have selected the target language of your choice.

To Operate Translation

1. Press one of the eight topic buttons — General, Emergency, Entertainment, Sightseeing, Direction, Restaurant, Transport, or Hotel, Press the topic button until a desired sub-topic appears on screen, then press ENTER to continue.
2. Use ▼ or ▲ to search for a desired sentence (you can also press and hold the ▼ or ▲ for faster search).
3. Press ENTER to view the translated sentence.
4. You can press TRANSLATE to hear the sentence in the Target language or press HOME to hear the sentence in your own language.

To Adjust Voice Volume Level

Slide the VOLUME switch to (—) for Low, (—) for Medium or (—) for High.

To Save Frequently Used Sentences

When the screen shows the desired sentence, press SAVE once. You will see "SAVED OK!" or "SAVED BEFORE!" if you have already saved the sentence.

To Recall The Stored Sentences

Press FAVORITES, then ▼ or ▲ to search stored sentences. Pressing ENTER will display the sentence in the target language and pressing TRANSLATE will speak the sentence in the target language.

To Delete Stored Sentences

When the stored sentence is shown, press CLEAR once to delete the stored sentence.

Instructions

To Select Functions

Press successively the MENU key to choose either HOME TIME – WORLD TIME – DAILY ALARM TIME – DATA FILE or PASSWORD LOCK SETUP.

To Set Home Time

1. Press MENU until the screen shows the date and time.
2. Press and hold ENTER for 2 seconds, you will see the city name begin to blink.
3. Press ▼ or ▲ to select the home city name then press ENTER to confirm.
4. Press ▼ or ▲ to select the year then press ENTER to confirm.
5. Repeat the above procedure to set the Month, Day and Time.

To View World Time

In Home Time mode, press ▼ or ▲ to view World Time and Calendar for 24 cities.

- | | | |
|-------------------|---------------------|------------------------|
| • Moscow (MCW) | • Sydney (SYD) | • Toronto (TOR) |
| • Karachi (KHI) | • Wellington (WLG) | • Rio de Janeiro (RIO) |
| • Bangkok (BKK) | • Honolulu (HNL) | • London (LON) |
| • Jakarta (JKT) | • Los Angeles (LAX) | • Paris (PAR) |
| • Beijing (BEI) | • Denver (DEV) | • Rome (ROM) |
| • Hong Kong (HKG) | • Chicago (CHI) | • Berlin (BLN) |
| • Tokyo (TYO) | • Mexico City (MXC) | • Frankfurt (FRA) |
| • Seoul (SEL) | • New York (NYC) | • Cairo (CAI) |

To Enable Daily Alarm

1. Press MENU until the screen shows "ALARM -- : --", then press ENTER to enable the alarm function.
2. When hour digit blinks, press ▼ or ▲ to set Hour and Minutes (◀ and ▶ to shift position) then press ENTER to confirm.

To Disable Daily Alarm

1. Press MENU until the screen shows the ALARM Time.
2. Press ▼ or ▲ until the screen says OFF. Press ENTER to confirm.

To Stop Alarm Sound

1. When the alarm time is reached, the alarm will sound for 60 seconds. Press any key to stop the alarm sound.
2. The alarm will sound again at same time each day until cancelled.

To Store Information in the Address Book (max 60 Phone Numbers)

1. Press MENU until the screen shows DATA FILE, then press ENTER once so that the left cursor blinks.
2. Press ▼ or ▲ to search from A~Z, a~z and 0~9, (◀ and ▶ to shift position) then press ENTER to confirm.
3. NO. will appear in the right corner and the left cursor will blink, press ▼ or ▲ to search and input numbers.
4. It is recommended that all phone number data are stored in hard copy to prevent data loss.

To Search Through The Address Book

Press MENU until DATA FILE is displayed. Press ▼ or ▲ to search through records. Press ▶ to view the phone number.

To Edit Entries In The Address Book

Search to the desired record, press ENTER once, the left character will blink, then use ▼ or ▲ to correct, ◀ and ▶ to shift position. Press ENTER to confirm.

To Delete Stored Entries In The Address Book

When the stored record is shown, press CLEAR once and select YES (▲) or NO (▼) to delete the stored record.

To Enable Password Lock

1. Press MENU until the screen shows LOCK? ____.
2. Use ▼, ▲, ◀ and ▶ to enter a 4-digit password, then press ENTER to confirm the password.

To Temporarily Unlock

1. If Data File is locked, a "LOCKED" message will be shown on the display when trying to access the DATAFILE.
2. Input the 4-digit password. Press ENTER, and the Data File will be temporarily unlocked.
3. After viewing or editing the record(s), DATA FILE will lock again automatically.

To Permanently Unlock

1. Press MENU until the screen shows "UNLOCK? ____".
2. Input the 4-digit password, and the lock will be permanently removed until next time you set a password.

Reset

If the LCD display malfunctions, press the RESET key located on the back of the unit to reset the translator.

CAUTION: *Personal set up and all stored phone data will be permanently erased.*

Earphone Installation (not included)

Plug the earphone into the socket which is located on the left side of the unit. Turn the Volume to LOW to avoid any harm to hearing.

Battery Installation

This translator is operated by two Lithium batteries (#CR2032). Batteries should be replaced when display looks dim or voices become distorted.

To insert or replace the batteries, turn the power off and move the case back battery door lock to OPEN, slide the battery door away, insert two new batteries, making sure that polarity is correct. Put the battery door back on the main unit and shut the battery door lock firmly. To retain phonebook records in the Data File, battery replacement process must be completed within 60 seconds. Alternatively, you can save the data elsewhere at your own choice.

Operating Temperature And Environment

To prevent malfunction, the translator should not be exposed to extreme temperatures such as below -10 °F or higher than 40 °F. Do not immerse the translator in water.

Warning

In an environment with high electrostatic discharge, the product may not operate normally. It may be necessary to reset the unit.