 


SAFETY

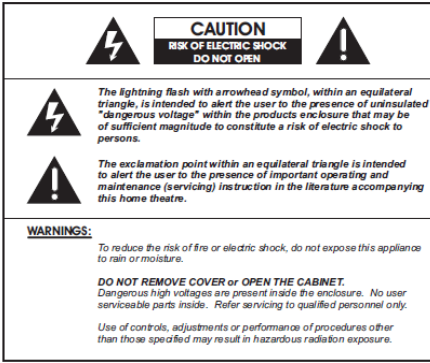

IMPORTANT SAFETY INSTRUCTIONS

- Read these instructions
- Keep these instructions
- Heed all warnings
- Follow all instructions
- Do not use this apparatus near water
- Clean only with dry cloth
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat
- Protect the power adapter from being walked on or pinched particularly at plugs, convenience receptacles and the point where they exit from the apparatus
- Only use attachments/accessories specified by the manufacturer
- Unplug this apparatus during lightning storms or when unused for long periods of time
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as when the power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally or has been dropped
- Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus
- The main plug is used as the disconnect device. It shall remain readily operable and should not be obstructed during intended use. To be completely disconnected from the power supply, the main plug of the apparatus shall be disconnected from the outlet completely

Burden

Do not place a heavy object on, or step on the product. The object may fall, causing serious personal injury and serious damage to the product.

Damage Requiring Service

Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- When the power-supply cord or plug is damaged.
- If liquid has been spilled or objects have fallen into the product.
- If the product has been exposed to rain or water.
- If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions. Improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
- If the product has been dropped or damaged.
- When the product exhibits a distinct change in performance - this indicates a need for service.

Servicing

Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

Replacement Parts

When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards.

Accessories

Do not place this product on an unstable cart, stand, tripod, bracket or table. The product may fall causing serious injury to a child or adult and serious damage to the product. Use only with a cart, stand, tripod, bracket or table recommended by the manufacturer or sold with the product. Any mounting of the product should follow the manufacturer's instructions and should use a mounting accessory recommended by the manufacturer.

Safety Check

Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.

INSTALLATION


- Install your unit on a stable flat surface. There must be sufficient room in front of the unit for the drawer to be opened and the unit should be positioned so that it can see the remote control.
- Do not expose your media fusion dock to extreme temperature or humidity.
- Avoid placing it on top of hot surfaces or other hot running equipment and ensure that there is adequate ventilation to the unit.

PACKAGE

Examine the contents for the box for your unit. There should be the following:


- Main Unit
- IR Remote Control
- AV Cable
- Instruction Manual
- Power Adapter

TOP AND SIDE PANEL

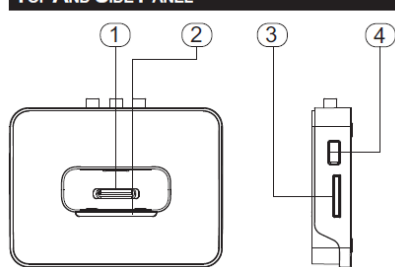


- iPod/iPhone Dock** - insert the iPod/iPhone into this jack using the supplied dock adapters
- Light Guide** - when unit is powered on, this area will be lit
- Card Socket** - insert your SD/MMC/MS/MS Pro card into this socket
- USB Jack** - connect external USB devices into this jack

FRONT/REAR PANEL

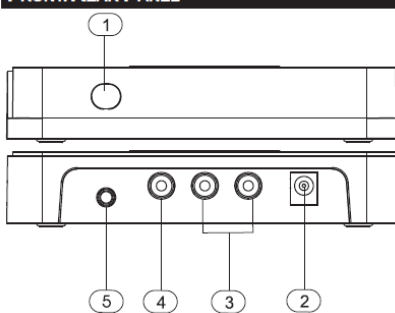

- Infra-Red Receiver Window** - receive the signal from the remote control
- DC in** - connect the power adapter to this port
- Audio Output** - connect audio cable from TV
- Video Output** - connect to the VIDEO IN jack on the TV using included video cable
- AUX in** - Connect an external device into this jack

CONNECTIONS

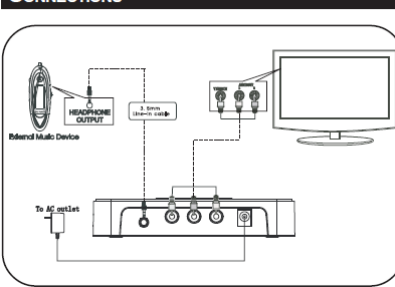


TV Connection - Connect the AV Cable to the TV video input. Yellow is for video, white for audio channel left and red for audio channel right.

Audio In Connection - Connect the Aux in jack of the dock to the headphone jack of your music device.


USB - Connect your USB device to the USB port.

SD/MMC/MS - Insert your SD/MMC card here.

iPod/iPhone - Connect your iPod/iPhone to the dock.

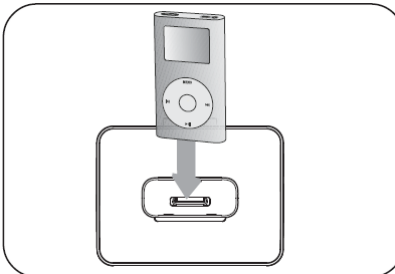

REMOTE CONTROL

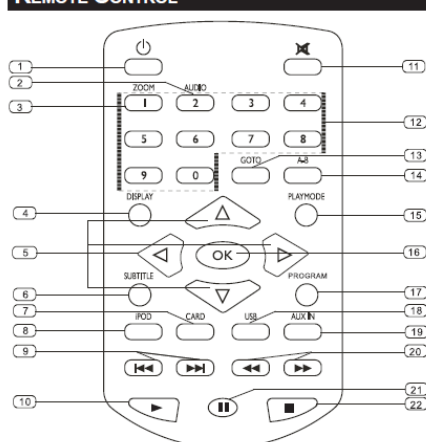

- Standby/On** - Toggle between operating and standby mode
- Audio** - Change the audio channel during MPEG or MPEG4 playback
- Zoom** - Zoom in or zoom out of the picture during JPEG and MPEG4 playback
- Display** - Switch between SIMPLE MODE and EXTENDED MODE for iPod/iPhone playback
- Navigation buttons** - Used to navigate menus
- Subtitle** - Change subtitles during MPEG4 playback
- Card** - Select card reader input
- iPod** - Select iPod/iPhone docking mode
- Skip** - Skip to previous or next track
- Play** - Start playback
- Mute** - Mute or restore sound
- 0-9** - Enter track number, time in setup menus or directly select a track
- GoTo** - Direct jump to a specific location of the song or video clip
- A-B** - Setup or clear point-to-point repeat playback during MP3, WMA, MPEG and MPEG4 playback
- Play Mode** - Card/USB - press to select the play mode REP OFF, REP 1, REP DIR, REP ALL - iPod/iPhone press to select the play mode among REP OFF, REP1, REP ALL
- OK** - Confirm selection
- Program** - Enter the program menu during card/USB playback
- USB** - Select USB input
- Aux In** - Select the external device connected to the media fusion dock
- Search** - Search back or forwards
- Pause** - Pause playback
- Stop** - Stop playback

GET STARTED

Once your devices are connected, power on your media fusion dock, and your TV. Be sure to set your TV to the correct video-in channel.

USING THE REMOTE CONTROL



- Remove the plastic protective sheet
 - Replacing Lithium-Ion battery (Lithium CR2025)
 - Pull battery out of battery compartment
 - Insert new battery, with correct polarity
 - Close cover
- CAUTION!**
- Remove battery when it has been depleted
 - Batteries contain chemical substances - dispose of them properly
 - Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

PLAYING THE iPod

- Connect the power. (Plug the included AC power adapter into the back of the unit, and the other end into an available AC power outlet) Press the power button on the remote, the unit will power on.
 - When you insert your iPod/iPhone into the unit it will be automatically identified. When successful, "connect OK" will appear on the screen and the files in the iPod/iPhone will be accessible.
 - From the home menu, select **iPod/iPhone mode** then press **OK** or **Play** to enter the iPod/iPhone menu.
-
- Press the **navigation key right** or **OK** key to confirm.
 - Press the **DISPLAY** button on the remote control to switch between **EXTENDED MODE** and the **SIMPLE MODE**.

NOTE: When the media fusion dock is first powered on, you will be operating in **EXTENDED MODE**.

EXTENDED MODE:

- You can select the music or video through the on screen TV menu by remote control. Your iPod/iPhone controls will no longer control the iPod/iPhone.
- NOTE:** If you want to view the photo/camera video, you must switch to simple mode.

SIMPLE MODE:

- The on screen TV menu will not operate in this mode. You will need to use your iPod/iPhone menu screen to navigate

PLAYING PHOTOS ON THE TV

- Insert your iPod/iPhone into the dock.
- Turn on the unit and then press the **DISPLAY** button on the remote control to select the **SIMPLE MODE**. The on screen TV menu does not function anymore under this mode.
- In the home menu of your iPod/iPhone, select Photos -> Photo library to select the photo you wish to view then press **OK** on the remote to confirm.
- If you want to start a slide show of your photos, press **PLAY** or the **OK** key again.
- To return to the previous menu, press the **back navigation** key on the remote control.

USING AN iPhone/iPod TOUCH

For viewing pictures on your iPhone/iPod Touch you will have to use **SIMPLE MODE**.

OPERATION OF MUSIC AND VIDEO PLAYBACK:

- Select "photos" option via the touch screen on your iPhone/iPod Touch, press the "Play" icon at the screen bottom to start the slideshow
- Press **stop** to stop playback
- Press **pause** to pause playback
- Skip** to advance to the next or previous track
- Press the **DISPLAY** button to switch between **EXTENDED MODE** and **SIMPLE MODE**

NOTE:

- Update your iPod/iPhone firmware to get the best compatibility with the media fusion dock

Setting - Use the **navigation keys** on the remote control to operate the settings menu. **Up** and **down** to navigate through the menus and **left** and **right** to adjust the options.

Shuffle - There are several shuffle options available to you on the media fusion dock: shuffle off, shuffle songs and shuffle albums.

Repeat - This option permits you multiple repeat options: repeat off, repeat one track or repeat entire file list.

TV System - The media fusion dock supports different TV outputs: NTSC (North America) and PAL (Europe and Asia).

Language - Change the language of the OSD to English, French or German.


Screen Saver - Turn the screen saver on or off. The screen saver will appear when in play or stop mode for more than 3 minutes to avoid the TV screen from being damaged.

PLAYING MP3/WMA/MPEG4

USB and Card (SD, MMC, MS, MS PRO)
MP3, WMA, MPEG and MPEG4 files on your USB or card can be played by inserting them into the corresponding USB or card slots.



- Select **USB** or **CARD** from the media fusion dock menu or from the remote control.
- A playlist menu will appear displaying all files located on your memory device. Scroll through the menu with the **up** and **down** navigation keys and confirm and cancel selections with **right** and **left** navigation keys.

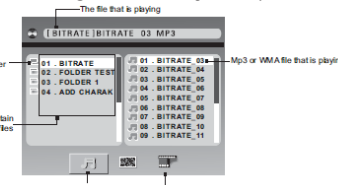

Once you have selected a file for playback, the media fusion dock will play all files. Pressing **STOP** once will stop playback, pressing it twice will return to the music menu.

Display Function

While the MP3/WMA/MPEG/MPEG4 file is playing, press the **DISPLAY** button to check the playback information.



TRK (track info) - Displays the number of tracks being played from your storage device.

Sound Icon - Displays if sound is muted or not.

Repeat Mode - Displays set repeat modes.

Elapsed Time - Displays the elapsed time from the beginning of the track being played.

GoTo Function

Selecting a Specific Track - A specific track can be jumped to by directly selecting the track number.

- Press **GOTO**
- Use **navigation keys left** and **right** or **0-9** to scroll through to the desired track
- Press **OK** or **PLAY** to select track

Locating a Specific Time

- Press **GOTO**
- Use **navigation keys left** and **right** to highlight time
- Press the **0-9** keys to input the time the track should start
 - First two digits are for hours
 - Next two digits are for minutes
 - Last two are for seconds

Repeat Function - During playback of MP3, WMA, MPEG or MPEG4 files press the **PLAY MODE** button on the remote control and you can select the repeat options: REP OFF, REP 1, REP DIR or REP ALL.

Select Audio/Subtitle for MPEG4

- Press **AUDIO** to select desired audio language
- Press **SUBTITLE** to turn subtitles on or off

NOTE: Please download or create the subtitle files with the following file name extensions: .srt, .smi, .sub, .ssa, .ass. The subtitle filename has to be the same as the filename of the movie.


A-B Repeat Function

A-B repeat playback allows material between selected points to be repeated.

- Press **A-B** button to set the beginning point of repetition.
- Press **A-B** button again to set the end point of repetition.
- Press **A-B** button to clear the programmed repeat playback and return to normal playback mode.

Programming Playback

MP3, WMA, MPEG or MPEG4 files on the USB or Card can be played in a selected order.

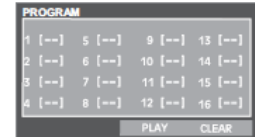

- Press the **PROGRAM** button to bring up the programming menu.
- Input the two digit track number you'd like to input.
- Use the **navigation keys** to move to another entry point.
- Repeat the above steps until you have completed desired program.
- Select **PLAY** to begin playing your programmed file list.
- Select **CLEAR** to erase your programmed list.
- Press **PROGRAM** button to cancel programmed playback and return to normal playback mode.

PLAYING JPEG ON THE USB/CARD

JPEG files on USB or Card can also be viewed with the media fusion dock.

- Scroll through the file list with the **up** and **down** navigation keys and use the **right** and **left** keys to select or cancel playback.
- Additionally, press **0-9** to select a specific JPEG file on your media fusion dock.
- If you wish to view all files on your storage device, press the **play** button to prompt automatic sequencing.
- While in auto sequencing press **pause** to pause playback, **play** to resume and **stop** to return to the menu.

NOTE: Loading time of the JPEG files depends on the resolution of the image. Images with higher resolution will take longer time to decode. Pictures above 3MB will take around 5 seconds to load. The max file size supported is 10MB.

Skip Function

During automatic sequencing, press the **skip forward** or **skip back** to toggle through pictures.

Slideshow Mode

During automatic sequencing for JPEG, press **PROGRAM** to switch to slideshow mode.

Flipping and Rotating a Still Picture

While viewing a picture:

- Press **Up** to flip the picture vertically
- Press **down** to flip the picture horizontally
- Press **left** to rotate the picture 90 deg counter-clockwise
- Press **right** to rotate the picture 90 deg clockwise

Note: This function is not available when zooming in on pictures

Music & Photo Slideshow

You can play music during the photo slideshow by:

- Select MP3/WMA files and press **PLAY** from the music menu
- Select JPEG files from the photo menu and press **PLAY** to start slideshow
- Press **STOP** to stop music in the slideshow

NOTE: Once you have selected to stop music during a slideshow, you must return to the music menu to commence music playback.

Zoom Function

You can zoom in and out of pictures during playback.

- During playback mode, press the **ZOOM** button repeatedly to toggle zoom x2, x3, x4, x3/4, x2/3, x1/2 and OFF
- While and image is magnified, use the **navigation keys** to shift image around.
- Return to original view by pressing the **ZOOM** button until **ZOOM: OFF** is indicated on screen.

TROUBLESHOOTING

NO POWER

- Check that the power button on the remote control is set to ON
- Check that the power adapter is properly connected to the media fusion dock and AC power socket
- Check that there is power coming from AC power socket by testing another appliance

iPod/iPhone DOES NOT RESPOND TO MEDIA DOCK

- Make sure the iPod/iPhone is properly connected to iPod/iPhone adapter socket
- Remove the iPod/iPhone from the dock and ensure there are no obstructions on the connections of your iPod/iPhone or the media fusion dock
- Please make sure your iPod/iPhone is properly functioning before using media fusion dock

UNIT DOES NOT RESPOND TO REMOTE CONTROL

- Aim remote control directly at the IR sensor on the front of the media fusion dock
- Avoid any obstacles which may block the remote signal
- Inspect or replace the batteries

NO PICTURE

- Check if the TV is powered on
- Check if the source channel is set to AV
- Check the video cable connection between the unit and TV

NO SOUND

- Check if the volume is at minimum setting
- Check if it is muted by the remote control

FUNCTION DISTURBED

- The normal function of the unit may be disturbed by external interference. Simply reset the device (disconnect power cord, wait 20 seconds, then reconnect power cord) to resume normal operation

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to a supply outlet different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.