




## **BoomTube H<sub>2</sub>O<sub>1</sub> Portable Speakers for MP3 Players, Cell Phones, Computers and PDAs Quick Start Guide**


The BoomTube H<sub>2</sub>O<sub>1</sub> is the perfect accessory for today's music-lover on the go. Now you can even share the tunes with your friends. Check out these features:

- ❖ **40 Total Watt system with two detachable Satellite Speakers for well-defined stereo separation and an individual Bass Unit for excellent bass response.**
- ❖ **AC Power Adapter/Charger, to play your BoomTube on regular house current or charge the batteries and take the music with you.**
- ❖ **Built-in rechargeable Lithium-Ion battery pack with up to 5 hours of continuous playing.**
- ❖ **Completely portable; Bass Unit and Speakers twist together to make one easy to carry piece. A Carrying Case is even included.**
- ❖ **Standard 3.5mm audio jack to fit most MP3 players, PDAs, computers and laptops.**
- ❖ **Included 2.5mm adapter audio jack to fit most major brands of cell phones.**


**Included in the box:**

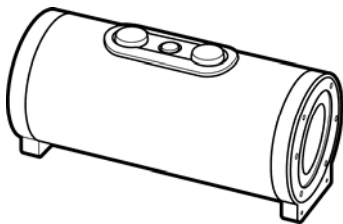

Bass unit

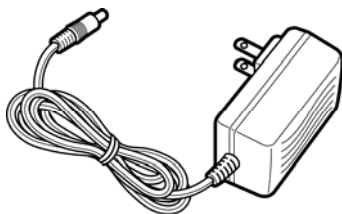


AC power adapter/charger

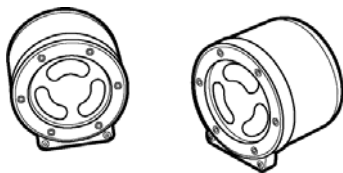


2 Satellite speakers



Carrying case

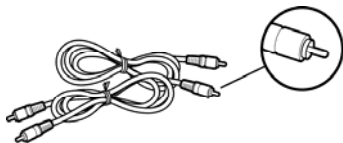

2 speaker cables

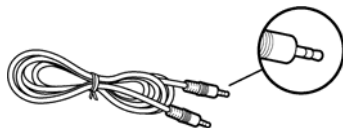


Audio input cable w/ 3.5 mm jack




2.5mm adapter jack


1. Plug your BoomTube into AC power for 4 hours to charge the battery. To charge the battery, please ensure the unit is turned off and not in use.

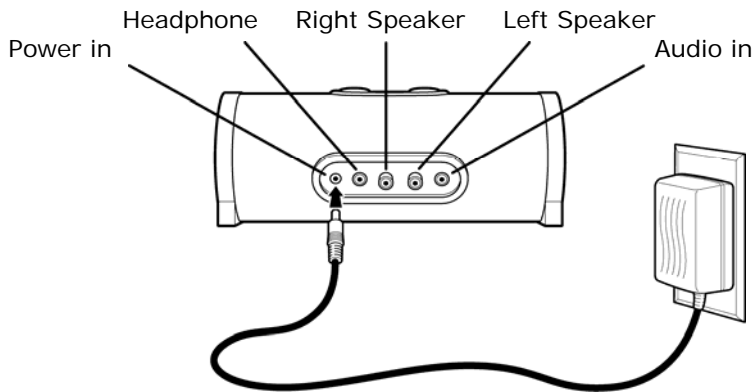


2. Twist the speakers off the bass tube.

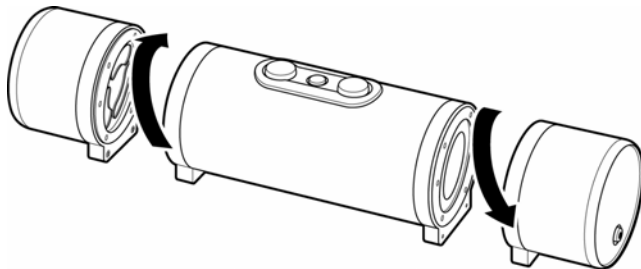

3. Plug in the speaker cables.

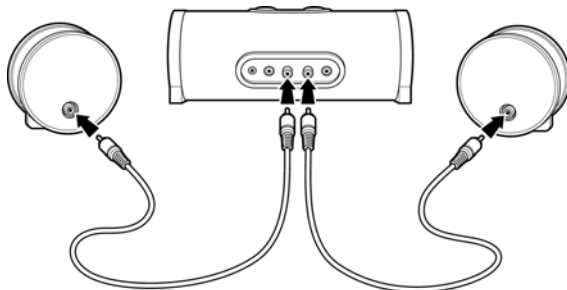


4. Connect your audio player. Use the standard jack for your MP3 player, computer, laptop or PDA. Use the smaller adapter jack for your cell phone. Press and hold the On/Off button to turn on.

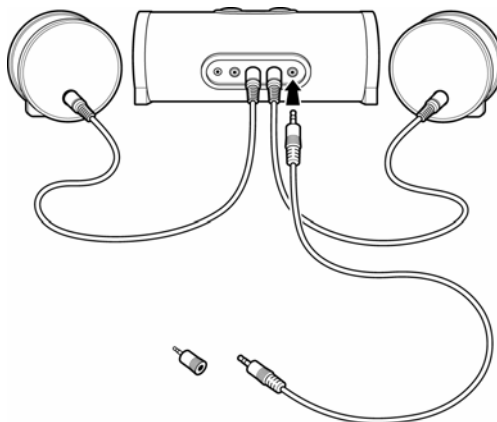


**For the best results:**


Place the BoomTube on a hard, flat surface with the speakers at least 3 feet apart.

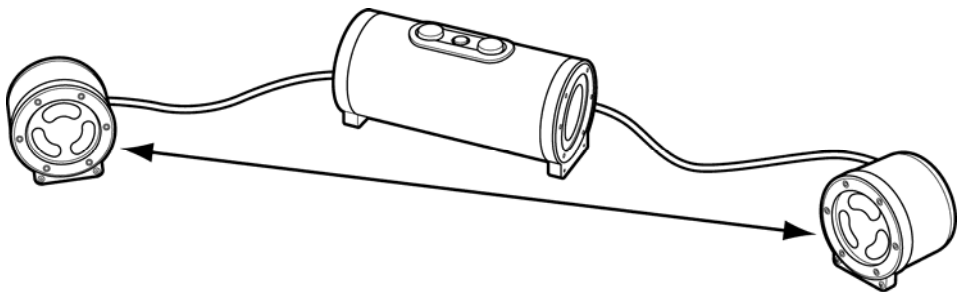

**To reassemble your BoomTube:**

1. Line up the markers on the speakers and the bass unit.
2. Twist the speakers clockwise to lock them.

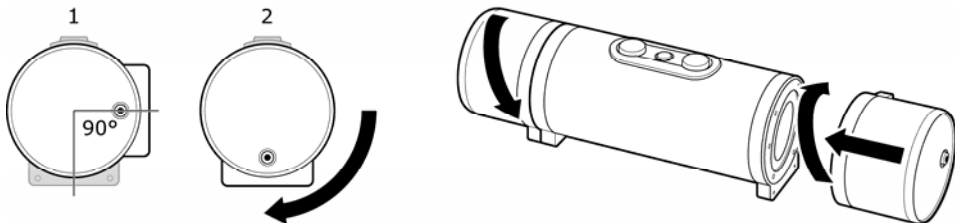

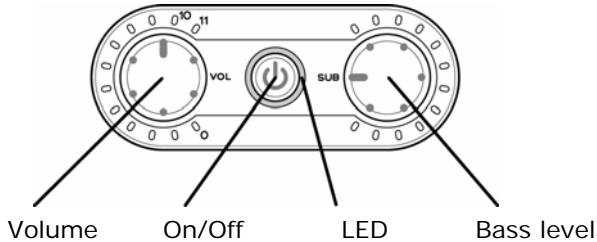

**The colored LED gives the status of the BoomTube's power:**

LED, off

- ❖ BoomTube off, connected to AC power. Battery is fully charged.

Green, steady on

- ❖ BoomTube on, connected to AC power.

Green, blinking

- ❖ BoomTube off, connected to AC power, battery is charging.

Amber

- ❖ Running on battery power, at least 10% of the charge remains.

## Troubleshooting

No power:

- ❖ Make sure the power is on.
- ❖ Check the LED to see if the battery is low.

No sound from the speakers:

- ❖ Make sure all the cables are firmly connected.
- ❖ Check the volume.
- ❖ Make sure your audio player is working properly.
- ❖ Headphones attached to the bass tube? Unplug them.
- ❖ If your cell phone came with an audio adapter, try using it first.

Sound only from one speaker:

- ❖ Make sure all the cables are firmly connected.
- ❖ If your cell phone came with an audio adapter, try using it first.

Crackling sound from speakers:

- ❖ Make sure all the cables are firmly connected.
- ❖ Make sure your audio player is working properly.

Sound is distorted:

- ❖ Turn down the volume slightly.
- ❖ Make sure your audio player is working properly.

Hum or noise in speaker output:

- ❖ Make sure all the cables are firmly connected.
- ❖ Move the BoomTube away from interference, like a TV.

Sound suddenly stops:

- ❖ Make sure all the cables are firmly connected.

## Warranty

Think Outside warrants this product against defects in materials and workmanship under normal use for a period of one (1) year from the date of original retail purchase. Think Outside's and its suppliers' entire liability, and your exclusive remedy, if you discover a defect and return the product with proof of purchase to Think Outside during the warranty period, is that Think Outside will, at its option, repair, replace, or refund the purchase price of the product to you at no charge. This limited warranty is void if the defect results from accident, alteration, abuse, improper use, or exposure to water or extreme temperature. TO THE MAXIMUM EXTENT PERMITTED BY LAW, THIS LIMITED WARRANTY IS EXCLUSIVE AND THINK OUTSIDE DISCLAIMS ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, TITLE AND NON-INFRINGEMENT. THINK OUTSIDE IS NOT RESPONSIBLE FOR SPECIAL, INCIDENTAL, INDIRECT OR CONSEQUENTIAL DAMAGES (INCLUDING WITHOUT LIMITATION, DAMAGES FOR LOST PROFITS, LOST SAVINGS, OR OTHER DAMAGES) ARISING OUT OF THE USE OR INABILITY TO USE THE PRODUCT OR THE BREACH OF ANY EXPRESS OR IMPLIED WARRANTY, EVEN IF THINK OUTSIDE HAS BEEN ADVISED OF THE POSSIBILITY OF THOSE DAMAGES. Because some jurisdictions do not permit the exclusion or limitations set forth above, they may not apply in all cases. This warranty is governed by the laws of the State of California.

## **Obtaining warranty service**

Customer must contact Think Outside within the applicable warranty period to obtain warranty service authorization. Dated proof of original purchase will be required for warranty service, repair, or replacement. Products or parts shipped by Customer to Think Outside must be sent postage-paid and packaged appropriately for safe shipment. Think Outside is not responsible for Customer products received without a warranty service authorization and such shipments may be rejected. Repaired or replacement products will be shipped to Customer at the expense of Think Outside. All products or parts that were replaced become the property of Think Outside. The repair and replacement process for products or parts in locations outside of the United States will vary depending on Customer's location.

Support@ThinkOutside.com

Think Outside, Inc.  
10 South Third Street  
Fifth Floor  
San Jose, California 95113  
United States of America  
www.thinkoutside.com  
September 1, 2005

## **Registering your product**

To register your BoomTube product, please visit:

**<https://www.thinkoutside.com/registration/registration.html>**  
and complete the online form.

## Safety precautions

- ❖ Do not expose the unit to direct sunlight for long periods of time.
- ❖ Do not store or use in areas exceeding 45°C or 113°F.
- ❖ Do not subject the unit to excessive force or impact.
- ❖ Do not expose the unit to strong magnetic fields.
- ❖ Do not expose the unit to excessive moisture.
- ❖ Do not disassemble the unit. Refer servicing to qualified personnel only.
- ❖ Use only the power adapter provided with the unit.
- ❖ Do not expose to heat or fire.
- ❖ Do not pierce or crush.

## Specifications

Model	STWBT21
Number of Drivers	4
Total Watts	40
MaxxBass	Yes
Battery	Rechargeable Li-Ion battery
Battery Life	Approximately 5 hours
Dimensions	2.75" diameter x 12" length (70mm x 305mm)
Weight	3.2 pounds (1.45 kilograms)