



QUIK SHADE® Summit & Commercial Set-Up and Safety Instructions

Please read completely before setting up your QUIK SHADE® Instant Canopy

It is your responsibility to read and save these instructions before attempting to set up your QUIK SHADE® Instant Canopy. We would also like to suggest that you follow these safety precautions, care and maintenance tips when using your QUIK SHADE®:

1. Never set up or continue to use in any rain, wind or storm conditions, especially lightning storms. Damage can occur to your QUIK SHADE® and put you and others in potential danger.
2. We suggest that you take your time in order to avoid bending the frame or pinching your fingers or hands while opening and closing the frame.
3. Avoid setting up your QUIK SHADE® on steep inclines.
4. Always use the provided stakes to secure your QUIK SHADE® to the ground unless you set up on concrete or asphalt.
5. Do not use your QUIK SHADE® for permanent shelter. It was designed for temporary use only.
6. Keep your QUIK SHADE® canopy away from heat and flames at all times. Do not barbecue or build fires under your QUIK SHADE®.
7. Never leave your QUIK SHADE® unattended.
8. Hand wash the canopy using only mild soap and water. Never use harsh detergents, abrasives or bleach. Do not machine wash.
9. Never fold or store your QUIK SHADE® when it is wet or damp. Let it dry completely to avoid mildew.
10. **ALWAYS USE COMMON SENSE.**

If you have any questions about your QUIK SHADE® Instant Canopy, please call our customer service representatives at (800) 248-5327.

WARNING: KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC. This tent meets the flammability requirements of CPAI-84. The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame resistant properties ineffective.

Do not call store regarding set up issues, missing parts or any questions. Instead, please contact Bravo Sports directly at (800)-248-5327.



©2007 Bravo Sports. All Rights Reserved.
U.S. Patent #4,779,635

Limited Warranty

Subject to the following limitations, in addition to any imposed by virtue of applicable law, Bravo Sports warrants this QUIK SHADE® Canopy to be free of defects in material or workmanship for a period of one year from the date of original purchase. This warranty is limited to the repair and/or replacement of defective parts only.

1. This Limited Warranty will apply only if the QUIK SHADE® and/or its parts are properly returned to the Bravo Sports customer service department listed below and are determined by Bravo Sports in its sole discretion, to be defective.
2. This Limited Warranty applies only to QUIK SHADE® Multi-Purpose Canopies purchased from authorized dealers. This Limited Warranty is extended only to the original consumer purchaser and is not transferable.
3. Be sure to retain your original purchase sales receipt for any warranty claim. All warranty claims must be accompanied by the original purchase receipt from the authorized dealer.
4. Before returning any QUIK SHADE® Canopy and/or parts to Bravo Sports for warranty inspection, the consumer purchaser must obtain prior authorization from Bravo Sports. Such authorization can be obtained by calling our customer service representatives at the toll-free numbers listed below, or writing to the Bravo Sports customer service department at the address listed below. Customer is responsible for shipping costs.
5. Certain regions of the country have environmental conditions that are extremely hard on canopy covers of any kind. If you live in Arizona, Florida, Nevada, New Mexico, Texas, or in high altitudes [above 3000 feet], the warranty period for your canopy top will be limited to six months from the date of original purchase. [After expiration of that six month period and up to a period of one year following date of original purchase, you may purchase a replacement canopy top at a reduced price from our customer services department.]
6. This Limited Warranty does not cover damage or loss from: wind, rain, fire, snow, ice, or other forces of nature; accident; normal wear; improper assembly, disassembly, or adjustment during set-up or take-down; or any abuse, neglect or misuse of this QUIK SHADE® Canopy and/or its parts.
7. To the extent allowed by applicable law, any implied warranty of merchantability or fitness applicable to this QUIK SHADE® Canopy is limited to the duration of this Limited Warranty. Bravo Sports does not warrant against, and in no event shall Bravo Sports or its authorized agents be liable for, any personal loss, injury, or direct or indirect incidental or consequential damage resulting from the use of this product. Please note that some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This Limited Warranty gives you specific legal rights and you may have other rights which vary from state to state.
8. Upon receipt of authorization from our customer service department, you must submit your warranty claim to the address below, shipped prepaid and accompanied by the original dated purchase receipt. Do not return this product to the place of

purchase. For warranty service, or for missing parts, replacement parts or any other problems, call or write to our customer service department below. We will send any replacement parts via Fed Ex Ground.

9. If you purchased your QUIK SHADE® with rope lights, the lights have a 90 day limited warranty.

QUIK SHADE® Summit & Commercial Set-Up and Safety Instructions

Do not call store regarding set up issues, missing parts or any questions. Instead, please contact Bravo Sports directly at 800-248-5327

Before proceeding with the assembly of your QUIK SHADE® Instant Canopy, please make yourself familiar with its parts and how they make your QUIK SHADE® function.

The following parts are inside your QUIK SHADE® box:

- 1 QUIK SHADE® Assembled Frame
- 1 Wheeled Bag
- 1 Wall Accessory *
- 1 Canopy Top (3 pcs)
- 4 Stakes

Set Up

Step 1

Place your QUIK SHADE® in the center of the set-up area. With a partner on the opposite side of the frame, hold onto the two outer legs and lift slightly for clearance. Take a few steps backward until you have extended the frame a full arm's length - approx. 4 feet (figure A). To improve the opening and closing action of your QUIK SHADE®, spray some silicone lubricant on the outer legs.



Step 2

To attach the top with a three-piece Supervent system, open each steel vents on the frame by sliding the plastic sleeves (fig B & C).



Step 3

Attach the topmost fabric first by sliding the vent arm ends into the pockets (fig D).

Step 4

Open the canopy to about 80% (fig E).



Step 5

Attach the center fabric (fig F) making sure the top fabric overlaps it outside (fig G).



Step 6

Attach the bottom main fabric to the frame again making sure the center fabric is on top of this (fig H).

Step 7

Open the frame completely pulling the four sliders up until they click into place (fig I).



Step 8

Make sure the fabric positions are correct. The top fabric on top of middle on top of main bottom fabric (fig J).

Step 9

Pull the inner leg out to extend the height of the canopy to the first level. The latch should click into place (fig K).



Step 10

If your canopy comes with a wall accessory, attach these to the frame using the snaps (fig L).

Step 11

Extend the height of your canopy to your desired height (fig M). Use stakes to secure frame to the ground if necessary.



Take Down

Note: The canopy top may remain in place for easier subsequent set-up. However, to prolong the life of the canopy top, we recommend that you remove the top when storing your canopy.

WARNING: Before storing your QUIK SHADE®, be sure the canopy top is not wet or damp. Storing your QUIK SHADE® while it is even slightly damp may cause mildew. Allow your canopy top to completely dry before taking it down. If you must take down your QUIK SHADE® while the canopy is damp, remove the canopy top from the frame by unfastening the hook and loop straps. Fold up the frame and lay the canopy top down, fully open, as soon as possible and allow it to completely dry.

Step 1

Remove stakes from ground. Reduce each leg to its shortest position (fig N).



Step 2

If you have a wall accessory installed, remove this first. Then, at each corner, pull the rings where indicated. Be careful not to pinch your hands by staying away from the bottom part of the slider (where the plastic ends), the slider may move fast once released. If the slider is hard, relieve the ceiling assembly a little by lifting the tubes attached to the slider upwards. Your unit may come with pull pin sliders, if so, simply pull the slider ring to release the canopy ceiling (fig O).



Step 3

Hold the top of the center frame section where it says "CLOSE". Lift slightly and slowly walk towards partner as the frame folds in (fig P). Keep walking until the frame is about halfway closed. Be sure to avoid pinching your hands or fingers. Hold outside legs and continue closing canopy as you walk towards your partner. The completely folded canopy should stand up on it's own.



Step 4

With the canopy standing, (fig Q) unzip the wheeled bag and slide bag down slowly (fig R) until entire canopy is in. Invert the canopy and zipper shut (fig S).



Wheeled Bag



* Not all canopies come with a wall accessory. Please check box for a list of contents.

Bravo Sports, 12801 Carmenita Rd, Santa Fe Springs, CA 90670
Customer Service Dept. Phone (800) 248-5327

email: consumer@bravosportscorp.com Check us out at www.bravosportscorp.com