



UPR 94-04 Steering Wheel Air Bag Delete Installation

UPR Products does not recommend or suggest that you remove your air bags from your street vehicle.

This air bag delete should be used in cases where the car is used as a race car only.

Parts:

(1) UPR Steering Wheel Air Bag Delete

Directions:

1. Disconnect negative terminal on battery.
2. Remove two plastic caps on backside of steering wheel with a smooth flat head screw driver.
3. Remove the two bolts holding the steering wheel center cover to the steering wheel while holding the cover in place so it does not fall.
4. Once the two bolts are removed, gently pull the cover away from the steering wheel and disconnect the electrical plug connecting the cover to the wheel then remove cover from vehicle.
5. Put the steering wheel air bag delete panel in place, lining up the two bolts.
6. Re-install the two factory bolts to secure the cover to the steering wheel.
7. Re-install the two plastic plugs, which hide the bolts.