

## Entrance Pin Code ( this number can be changed )

Press [ 1 2 3 4 ] ( door is unlocked, 1 beep, green light on )

## Start Program Mode

Press [ \* ] + [ 9 9 0 1 0 1 ] , 2 beeps green on ( this number can be changed )

- Choose a Function 1-5 you would like to change and follow the steps. -  
Example: Add a Card or Fob ...Function 1

### Function 1 : Add a Card or Fob

Press [ 5 ] + [ present card or fob ] , 3 beeps  
present another card or fob , 3 beeps or EXIT PROGRAM MODE  
(Press [ \* ], 2 beeps)

### Function 2 : Delete a Card or Fob

Press [ 7 ] + [ present card or fob ] , 3 beeps  
present another card or fob , 3 beeps or EXIT PROGRAM MODE  
(Press [ \* ], 2 beeps)

### Function 3 : Delete All Cards/Fobs ( restore factory default )

Press [ 8 6 ] , 3 beeps  
( all cards must be added back using Function 1 )  
( If cards are not available type in the 8 digit card # on file )  
EXIT PROGRAM MODE (Press [ \* ], 2 beeps)

### Function 4 : Open door with PIN Code -or- Card/Fob

Press [ 1 ] + [ 0 ]  
EXIT PROGRAM MODE (Press [ \* ], 2 beeps)

### Function 5 : Open door with PIN Code -and- Card/Fob

Press [ 1 ] + [ 1 ]  
EXIT PROGRAM MODE (Press [ \* ], 2 beeps)

**EXIT PROGRAM MODE ---Press [ \* ] , 2 beeps---**

You can also see Detailed Instructions for these Functions:

- Set Lock Open Time ( more time for entry)
- Set Anti-Break Alarm (sound when vandalised)
- Set Alarm On/Off (when door is left open)
- Change 4 digit Pin Code at top of page
- Change Program Mode 6 digit number