


INSTALLATION INSTRUCTIONS for the PUSH BUTTON LOCK

FOR SURFACE TYPE SERIES

I. THIS PUSH BUTTON LOCK IS MADE FOR RIGHT-HAND DOORS


IF YOU HAVE A LEFT-HAND DOOR, FOLLOW THESE INSTRUCTIONS AND CHANGE THE PIN BY:

- A) REMOVE 2 BLUE MARKED SCREWS, TAKE OFF RECTANGULAR LID.
- B) PULL UP THE PIN, INSERT IT IN THE RIGHT HOLE. (SEE FIG. 1)
- C) RESET THE LID WITH TWO (2) ORIGINAL BLUE SCREWS.

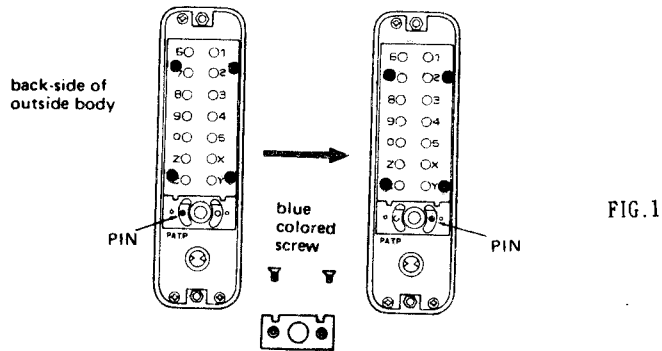

II. INSTALLING THE LOCK

- A) APPLY THE PROPER TEMPLATE TO THE EDGE OF THE DOOR, AND MARK FOR HOLE.
- B) FOR SURFACE SERIES, DRILL THREE 5/16" ϕ HOLE THRU THE DOOR.
- C) PLACE RUBBER ESCUTCHEON OUTSIDE OF DOOR, INSERT (2) HEXAGONAL LEGS OF THE OUTSIDE LOCK BODY INTO THE HOLES. (SEE FIG. 2)
- D) SELECT PROPER LENGTH SPINDLE AND INSERT THIS IN THE SLOT LOCK BODY FROM THE INSIDE OF DOOR. SPINDLE MUST BE INSERTED TO THE SLOT OF THE OUTSIDE LOCK BODY, THRU THE SLOT OF THE DEADBOLT.

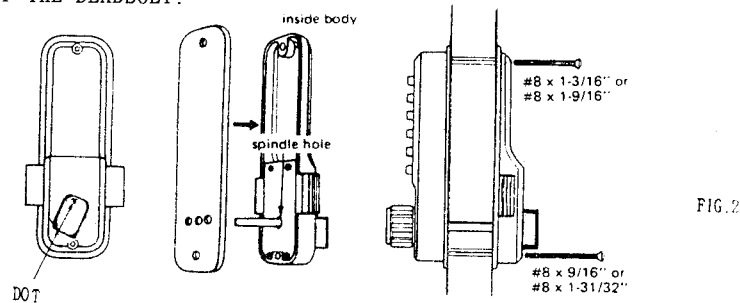

- E) SELECT THE PROPER SPINDLE TO FIT DIFFERENT DOOR THICKNESSES.
FOR SURFACE SERIES:
USE 3" SPINDLE FOR A DOOR 1" TO 1-3/8" THICK.
USE 3-3/8" SPINDLE FOR A DOOR 1-3/8" TO 1-3/4" THICK.
USE 3-3/4" SPINDLE FOR A DOOR 1-3/4" TO 2" THICK.

- F) PLACE RUBBER ESCUTCHEON ON INSIDE OF DOOR. INSTALL INSIDE BACK PLATE TO THE DOOR SO THE DOT MARK ON THE KNOB IS ALIGNED WITH THE RIGHT DOT MARK ON THE BACK PLATE. AND FASTEN SCREWS. (MAKE SURE SPINDLE ENTERS SLOT OF INSIDE BACK PLATE).
- G) IF THE SURFACE BOLT ON THE SURFACE SERIES IS NOT FLUSH WITH THE STRIKE, USE THE TWO (2) TYPES OF SPACERS PROVIDED TO ADJUST THE HEIGHT TO THIS BY PLACING SPACERS TO EITHER THE BOTTOM BACK PLATE OR SURFACE STRIKE PLATE.

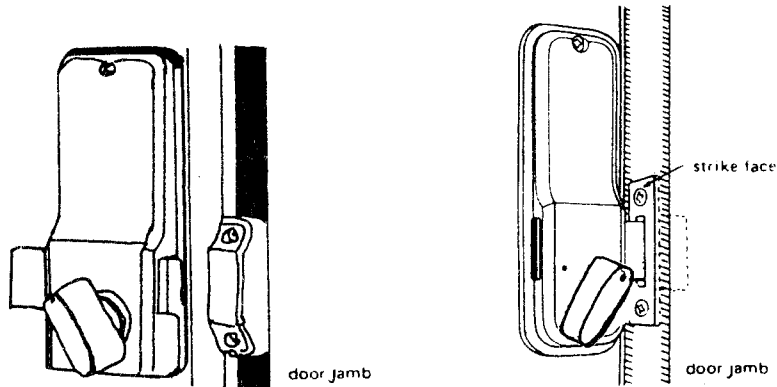


FIG.3

III. TO OPERATE DIGITAL LOCK.

- A) THE INSIDE IS ALWAYS OPERABLE BY TURNING THE INSIDE KNOB.
- B) TO ENTER LOCK, PUSH THE SET CODES ON BUTTONS AND TURN THE OUTSIDE KNOB (IF YOU RESET THE CODE, REFER TO THE ATTACHED SHEET, " HOW TO RESET THE CODE ").
- C) TO LOCK, SIMPLE CLOSE THE DOOR, AND TURN THE OUTSIDE KNOB TO LOCK THE DEADBOLT.

REMARKS:

- A) ALWAYS PRESS BUTTON " C " (CLEAR) BEFORE USING PUSHBUTTON FOR ENTRY.
- B) ALWAYS PRESS BUTTON " C " (CLEAR) AFTER LOCKING THE DEADBOLT.