

## I. Selecting Your Combination

Please look at the front of the keybox. You will see buttons numbered 1 through 0. You will also see an OPEN button and a CLEAR Button.

There is no preset combination on your keybox. You will select your own combination. Keep the combination in a safe place.


For best results, select between four and seven numbers in your combination. Each number can only be used one time. Do not use number combinations that can be easily guessed such as your phone number, vehicle license plate or street address.

Select a combination and record it below.

<input type="radio"/>				
1	2	3	4	5
<input type="radio"/>				
6	7	8	9	0

## II. Setting Your Combination


**WARNING!**  
*Improperly setting the combination is not covered under the warranty. Do not remove the screws on the back of the lid. Doing so will void the warranty.*

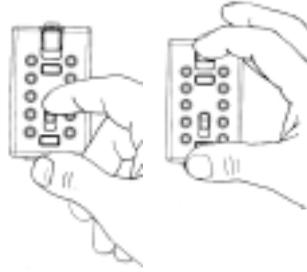


Press down on CLEAR.

Then press down on OPEN button and pull out on the lid.

- 1) Remove the plastic card from the back of the lid by lifting from the center of the edges.

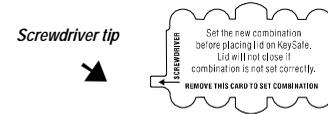

- 2) You will see ten numbered gray buttons with arrows. Turn the lid in your hand so the back is facing you and the number "1" is in the upper left corner of the lid as shown below. (These numbers correspond to the numbered buttons on the front of the lid.)

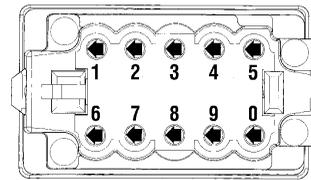

- 3) All the arrows on the screws point to the left because there is no preset combination.



Arrows pointing to the left are not part of combination.

- 4) Use the screwdriver tip on the plastic card or a small screwdriver to push and rotate the arrows. For each number in your combination, apply light pressure and rotate a half turn so that the arrow points to the right and snaps up.



Arrows rotated a half turn to the right are part of your combination.

- 5) Check to make sure that the arrow of any number that is not in the combination is pointing LEFT.

### CAUTION

*Arrows must point either to the left or to the right. An arrow pointing to the left is not a number in the combination. An arrow pointing to the right is a number in the combination. If any arrow is pointing up, down or has not snapped up, the combination will not work. Test the combination before putting the lid on the box.*

- 6) Replace the plastic card on the back of the lid.

- 7) Place up to 2 keys on the key clip.

## III. Testing Your Combination

Test before putting the lid on the keybox.

- 1) On the front of the lid, push in the numbered buttons that are in your combination.
- 2) Press down on the OPEN button. If the combination is set correctly, the OPEN button will slide down fully. If the combination was set incorrectly, the OPEN button will not slide down.
- 3) If set incorrectly, DO NOT RETURN THE LID TO THE KEYBOX. Press the CLEAR button and refer to section II. Setting Your Combination.

#### IV. Mounting Your Keybox

##### **Permanent & Slimline Models:**

- 1) Remove the lid.
- 2) Find a convenient flat surface.
- 3) Mount with screws provided.
- 4) Replace the lid.

##### **Automotive Model:**

 
- 1) Partially lower (open) the vehicle window.
- 2) Hang the bracket over top of the window.
- 3) Roll up (close) window completely to retain keybox in place.
- 4) Close and lock the vehicle door.

##### **Portable Model:**


- 1) Remove the lid. Notice the lift tab.
- 2) To release the shackle lift and hold the LIFT tab while



*Slimline Keybox*



*Permanent Keybox*

 

*Automotive Keybox*


- 3) Release the LIFT tab. Place the shackle over or around the object where the keybox will hang (such as a door knob) and push the shackle down.

##### **Door Model:**

 - 1) Hang bracket over the top or to the side at the hinge of the door.
- 2) Close and lock the door to secure the keybox.

##### **Protective Cover:** (Sold Separately)


- 1) Attach to Automotive or Portable Model with the notches on top.
- 2) To remove, pull tabs at top of cover.



*Portable Keybox*



 *Door Keybox*



*Protective Cover*

#### V. Opening and Using Your Keybox Once your combination has been set:

- 1) Push in the buttons that correspond to the combination you have set. Buttons may be pushed in any order.
- 2) Push down the OPEN button and while holding it down pull the lid out from the keybox. If you have entered an incorrect combination, you can return the buttons to their original setting by sliding down the CLEAR button.
- 3) When you release the OPEN button, the combination will clear.
- 4) To replace the lid, push in the buttons that correspond to the combination you have set. Place the lid into the keybox by first setting the bottom of the lid into the vault. Push down and hold the OPEN button as you return the lid to the closed position. The lid will lock into place, and the combination will clear when the OPEN button is released.

#### Limited Warranty

Supra Products, P.O. Box 3167, 2611 Pringle Road SE, Salem, Oregon 97302

(Tel. 1-800-547-0252) ("Supra") warrants to the original buyer of its products for a period of 1 year after the date of purchase that the products are free from defects in workmanship and materials. This warranty does not cover forgotten or incorrectly set combinations. Supra will, without charge to the buyer, repair or replace, at its option, any defective product returned by the original buyer to Supra (at the buyer's cost) at its service and repair facilities located at the above address within 1 year of the date of purchase. The foregoing warranty does not cover damage caused by abuse or misuse. Supra does not warrant that this product cannot be broken into.

SUPRA LIMITS THE DURATION OF ANY LEGALLY IMPLIED WARRANTIES, INCLUDING IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, TO THE DURATION OF THIS WARRANTY. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

As an accommodation, product items returned following expiration of the warranty period will be repaired if, in Supra's judgement,

repair is possible. Repair will be completed for a charge (\$12 minimum) covering parts, labor and shipping. If repair is not possible, the unit will be returned to the buyer.

Except to the extent that such limitation may be prohibited or limited by federal or state law, the foregoing repair/replacement remedy is the exclusive remedy for defects in products. IN NO EVENT WILL SUPRA BE LIABLE FOR LOSS OF USE, LOST PROFITS, THEFT, PROPERTY DAMAGE, OR SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES OF ANY SORT. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU. IN THE EVENT ANY OF THE ABOVE LIMITATIONS ARE HELD UNENFORCEABLE, SUPRA'S LIABILITY FOR ANY DAMAGES TO YOU OR ANY PARTY SHALL NOT EXCEED THE PURCHASE PRICE YOU PAID, REGARDLESS OF THE FORM OF ANY CLAIM. IN NO EVENT MAY A CLAIM OF ANY SORT BE ASSERTED AGAINST SUPRA MORE THAN ONE YEAR AFTER THE ACCRUAL OF THE CLAIM.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.



PUSHBUTTON INSTRUCTIONS

***Read instructions and test before placing lid on the keybox. Lid will not work if combination is set incorrectly. For greater security, please change combination periodically.***

*1 Year Warranty  
Details Enclosed.*

PN 4336401-B