

Connecting the Tough Dance Pad

1. Make sure the Wii™/GC, Playstation®, PS One™, Playstation®2, or Xbox® game console is turned off before connecting the Tough Dance Pad to the console; PC/Mac USB can be directly inserted.
2. Connect Tough Pad (A) to Game Console (See Diagram).
3. After everything is connected, turn on the console, insert your dancing game and follow the on-screen instructions for the game.

⚠ WARNING

Be sure to use the appropriate connector as shown above. Do not connect more than one connector at the same time for each dance pad. Failure to comply may result in permanent damage to your gaming system and dance pad.



Choose one Console

A



Using DDRgame Tough Dance Pad

Please Read the Following Safety Precautions Before Using the DDRGAME Tough Dance Pad.

⚠ WARNING

If you have heart, respiratory, or other physical impairments that limit your physical activity, DO NOT use the Tough Dance Pad. Should you have any doubts, consult with a physician.

- The Tough Dance Pad must be used with care to avoid injuries.
- DDRGAME will not be liable for any injuries resulting from improper use of the Tough Dance Pad.
- The Tough Dance Pad should be used on a clean, flat surface. Remove furniture or other objects in close proximity to the Tough Dance Pad.
- The Tough Dance Pad is for indoor use only and should be kept away from open flames or other heating sources.
- Bare feet should be used to operate the Tough Dance Pad, do not use with shoes or socks.
- Do not use the Tough Dance Pad on a wet or slippery surface.
- Do not use the Tough Dance Pad under the influence of drugs or alcohol as it could impair your sense of balance and coordination.
- Small children should be monitored at all times when using the Tough Dance Pad.
- The cord for the Tough Dance Pad should be neatly stowed to avoid wire tripping anyone.
- When using two Tough Dance Pads, make sure the Tough Dance Pads are far apart to avoid injuries to players.
- Do not modify the Tough Dance Pad under any circumstances.
- When not in use, make sure the Tough Dance Pad is removed from the playing area and is properly stored.

How to take care of your Tough Dance Pad

- When using the Tough Dance Pad, please keep it away from furniture, walls, windows, and any sharp or fragile objects.
- Please do not attempt to dismantle any main components from the Tough Dance Pad, doing so will lead to the platform being damaged and will void your warranty.
- Disconnect the Tough Dance Pad from your console when not in use.
- Do not use the Tough Dance Pad if its damaged in any way.
- Parental supervision is advised when young children are using the Tough Dance Pad.