


Assembly of Genius Baby Musical Infant Stimulation Mobile

- 1-Crib Base Plate and attachment Wheel with Upright A
- 1- Upright extension B
- 1-Top Curved Upright Arm C
- 1-Circular Music Block with hook D
- 1-Crossbar (top) E
- 1-Crossbar (bottom)Note: Darker in color F
- 4-Geometric black, white and red cloth shapes with strings G
- 1-bagged set of Reversible infant stimulation graphic/ baby EQ cards. H

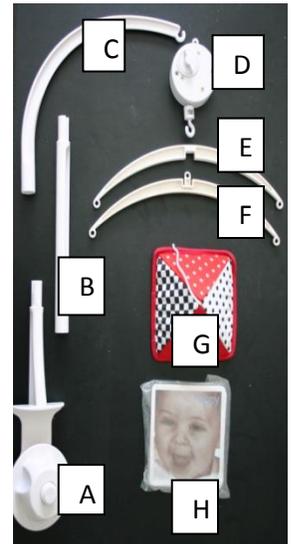

Mobile Assembly: Must be assembled and operated by an Adult.

Suggested Use: Birth - 5 months.

1-Insert upright extension(B) to Crib Base Plate and attachment Wheel (A)

2-Insert Top Curved Upright Arm(C) to upright extension(B)

3-Attach the crib base attachment wheel securely to the crib railing.

- Pass threaded rod through bars to the outside of crib.
- Rest lip of crib base on top of crib railing; position plate against crib bars.
- Tighten attachment wheel firmly in place.

4-Attach the hole at the top of the Music Box to the Hook on the Curved upright arm. this will be a tight fit so the music box will not accidentally fall into the crib.

5-attach the 2 crossbar pieces to each other (E) and (F)

6-attach the hole on top of the crossbars to the hook on the bottom of the Music Box, this will be a tight fit so the music box will not accidentally fall into the crib.

7-attach the 4 Geometric black, white and red cloth shapes(G) with strings to the holes in the crossbars knotting each twice.

8-Slide infant stimulation graphic cards (H) into vinyl pockets facing baby. Simpler cards at first. Baby will enjoy the Mobile more, if you change the cards occasionally. By 2 months, you may like to replace the simple graphics to more complex cards. i.e. expressive bay graphics.

Note: Family pictures may be added.

9-Please do not over wind music box mechanism.

***** CAUTION *****

Possible entanglement injury. Keep out of baby's reach. REMOVE mobile from crib or playpen when baby begins to push up on hands and knees.