
Artesian Use & Care Instructions – Page One

Congratulations!

You have just purchased a quality multi-purpose table, manufactured with pride by TouchAmerica. The unique Artesian Table is designed so you can easily perform many wellness services. Facial, Pedicure, Spa Treatments, Manicure and light Massage are some of the many services and treatments practical to deliver on the Artesian. The following instructions are intended only to make operation of the table easy and safe. They are not intended as instructions for performing the service or treatment. You should consult professional educators to learn these procedures.

Before attempting to use your Artesian, please take the time to make yourself familiar with these instructions and the features of the table.

Warning!

Do not lift or carry the table by the upholstered top. Always lift the table from the frame. TouchAmerica will not be held responsible for any damage that may occur from improper lifting or handling of this table. The weight of this table is 250 pounds.

Electrical Connection

The Artesian is an electric-powered table. Locate the power cord and connect it to a properly grounded outlet. ***Important – Use only a GFC outlet!*** The power cord is connected to a surge protector/power strip located inside the table. Confirm the surge protector/power strip switch is in the *on* position. The power supply for the motors and optional jet pump are all connected to the power supply.

Table Height and Top Adjustment

The Artesian table height, back tilt and leg tilt can all be adjusted. Each is controlled separately by the hand control that came with the table. To raise or lower the table or top sections, simply depress the button controlling the table part to be activated. The motors controlling the table parts will stop automatically when they have reached the extent of their adjustment range. Adjustments can be made with or without a person on the table.

Foot Sink Cover

To make the Artesian useful as a multi-purpose treatment table, the foot sink is covered with a padded top section. With the padded top section in place, the foot sink is hidden from sight and the Artesian top looks like a regular treatment table. It is necessary to remove the padded foot section of the top to expose the foot sink. Simply release the Velcro tabs located under the edge of the padded foot section and lift the padded section from the foot sink. The Artesian is now transformed into a pedicure spa.




Artesian Use & Care Instructions – Page Two

Filling Foot Sink

The Artesian comes supplied with a combination shutoff and mixing valve, located at the foot end of the table (see right-hand photo below). To utilize the mixing valve, the table must be connected to a hot/cold water supply and wastewater drain (see separate Supply Plumbing Layout instructions). Locate the mixing valve and turn the lever clockwise to turn the water on. Water temperature is controlled by continuing to turn the lever in a clockwise direction. The filling faucet is located on the top edge of the sink, on the edge closest to the end of the table. Make sure the faucet is clear of obstructions so water can enter the sink. Begin filling the foot sink with the drain open until water reaches the desired temperature. You can then close the drain valve and fill the foot sink. Fill the sink to the low point of the first ridge inside of sink. Do not overfill the sink, or water will spill over the edge of the top when a client places her feet in the foot sink or when the foot sink is elevated at an angle. Once foot sink is filled to the desired depth, turn the mixing valve lever counterclockwise to shut off the flow of water.

Manual Fill Option: The foot sink can be filled from a remote water source if hot/cold water supply is not accessible to the table and mixing valve.

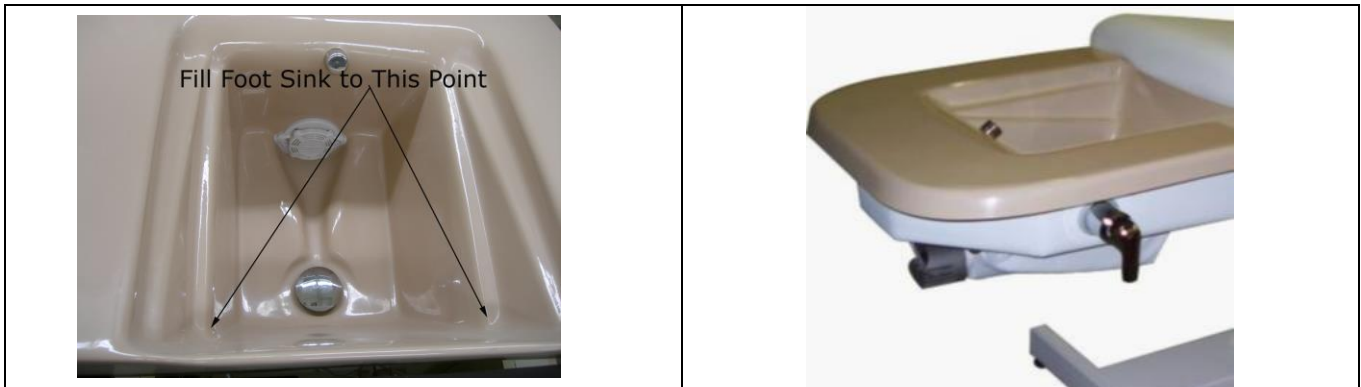

Foot Sink Drain

The foot sink drain is located in the bottom of the sink. The Artesian comes with a flexible drain hose connected to the bottom of the foot sink. Slide drain hose over discharge tube and tighten with clamps provided. The drain is manually closed and opened from inside the foot sink. To close the drain, push the drain cover down. The drain cover will lock in the “down” position to seal the opening. To open the drain, push the drain cover down, then release. The drain cover will spring up to “open”. Drain into floor drain or bucket. **IMPORTANT!** Drain the foot tub as soon as possible after each session and avoid using with padded cover over a tub full of water for any longer than necessary to complete a treatment. This will prevent moisture from causing mold or other damage to the plywood backing.



Artesian Use & Care Instructions – Page Three

Foot Sink Jet System (If Installed)

Your Artesian may be equipped with a pipeless jet system, if this option was selected at time of order. This creates a pedicure unit that is sanitary during use and easy to clean between clients. Because there are no remote pumps, water lines, or valves, there are no places where dirty water can be trapped, thus preventing contamination of clean water from treatment to treatment. The jet can be operated once the foot sink is filled with water. The button to operate the jet is located at the foot end, on the opposite side from the mixing valve. Press the button once to start the jet and once to stop the jet. To clean the foot sink between treatments, remove the jet cover by twisting it counterclockwise to release. Wipe the entire interior of the foot sink, jet and jet cover with a sanitizing solution. Replace the jet cover, and the foot sink is sanitized and ready for the next treatment.



Maintenance

The Artesian is constructed to provide many years of dependable service if routine maintenance is provided. Maintenance or repair questions can be addressed to info@touchamerica.com.

Fasteners

Check all accessible bolts and screws for tightness once per month. Tighten any that appear loose, but do not over-tighten.

Plumbing

Important! Because the Artesian is height adjustable, it is important to inspect all plumbing connections, hoses and drain connections for leaks once per month. Tighten any leaking connections, and consult a licensed plumber if leak continues.

Electrical

Check all cords and electrical connections for fraying or loose connections. All frayed or damaged electrical cords should be repaired immediately. Contact a licensed electrician to repair cord, or contact TouchAmerica Tech Support for replacement parts. Tighten any connection that is loose.

Cleaning

Upholstery

Clean with a soap-and-water mixture or a mild, water-based cleaner. Avoid the use of alcohol-based cleaners and harsh solvents. For sanitization, use non-staining, alcohol-free sanitizing solutions on the upholstery.

Foot Sink

Clean with a soft cloth or sponge, using non-abrasive cleaners. Abrasive cleaners will scratch the fiberglass surface of the sink. Foot sink may be sanitized with any non-abrasive sanitizing solution, typically used for tubs or showers. Scratches can be removed with rubbing compound, formulated for use on cars. This must be done very carefully, preferably by an experienced person, to avoid sanding through the color coat on the foot sink.