




NAME	DRAWING	QTY
A	BASE	1
B	CASTER	5
C	GAS CYLINDER	1
D	SEAT CUSHION	1
E	BACKREST	1
F	MECHANISM	1
G	ARMREST	2
H	HEADREST (Y9489 ONLY)	1
I	BOLT	4
J	BOLT	4
K	ARMREST STOP BLOCK	1
L	SCREW FOR STOP BLOCK	2
M	SCREW FOR HEADREST	2

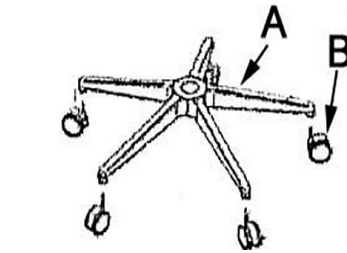


1. Pop casters into base by hand. Casters will snap & lock into place

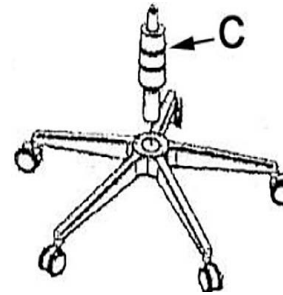


2. Insert gas cylinder into center of base.

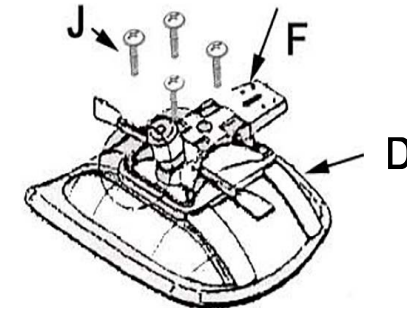


3.) Attach mechanism to seat cushion using four J bolts.

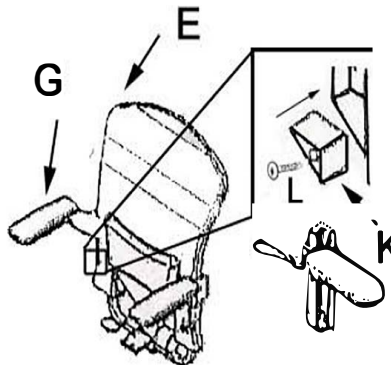

4. Slide armrests onto notched sides of backrest & screw in both K - Armrest Stoppers using one L screw each.

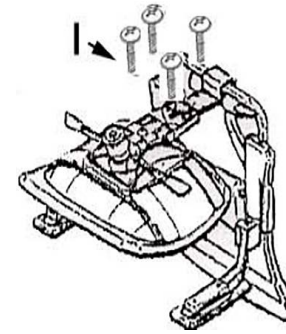


5.) Connect backrest to mechanism using four I bolts.

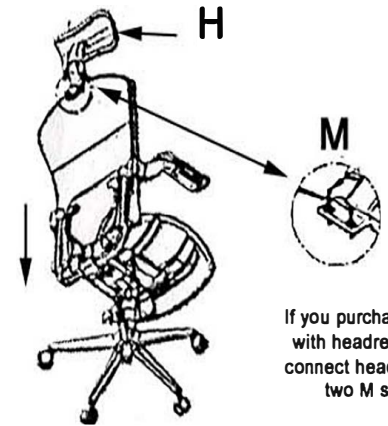


If you purchased a chair with headrest (Y9489) connect headrest using two M screws.

6.) Connect the seat/back upper portion and base/gas cylinder lower portion together by lining up with hole in mechanism. Set upper portion over lower portion and push down. Carefully sit in the chair to pressure fit together.

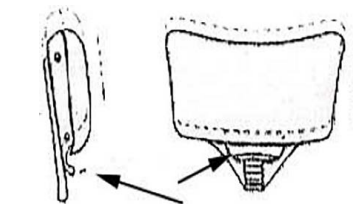


TO ADJUST LUMBAR SUPPORT PILLOW

Pull out on handle located on the bottom of the pillow and push the pillow up or down to adjust.

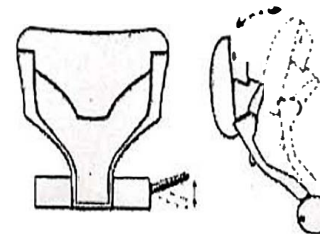

TO MOVE LUMBAR PILLOW FORE/AFT

Locate paddle under the right side of the seat cushion and flip down to release. Move pillow in/out and flip up paddle to lock into place.

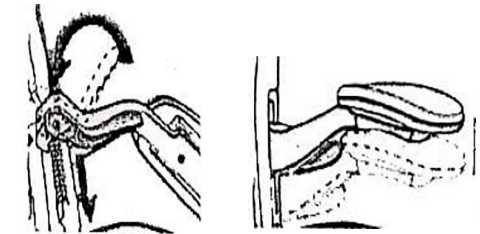

TO ADJUST HEIGHT OF ARMRESTS

Locate lever on armrest and pull out to release. Manually move armrest up/down and push in lever to lock.