


**INSTALLATION INSTRUCTIONS**

**High Clearance A-Arms:  
 for Can-Am Maverick X3**

Item	Description	Item	Description
A	Upper A-Arm, Driver	C	Lower A-Arm, Passenger
B	Upper A-Arm, Passenger	D	Lower A-Arm, Driver

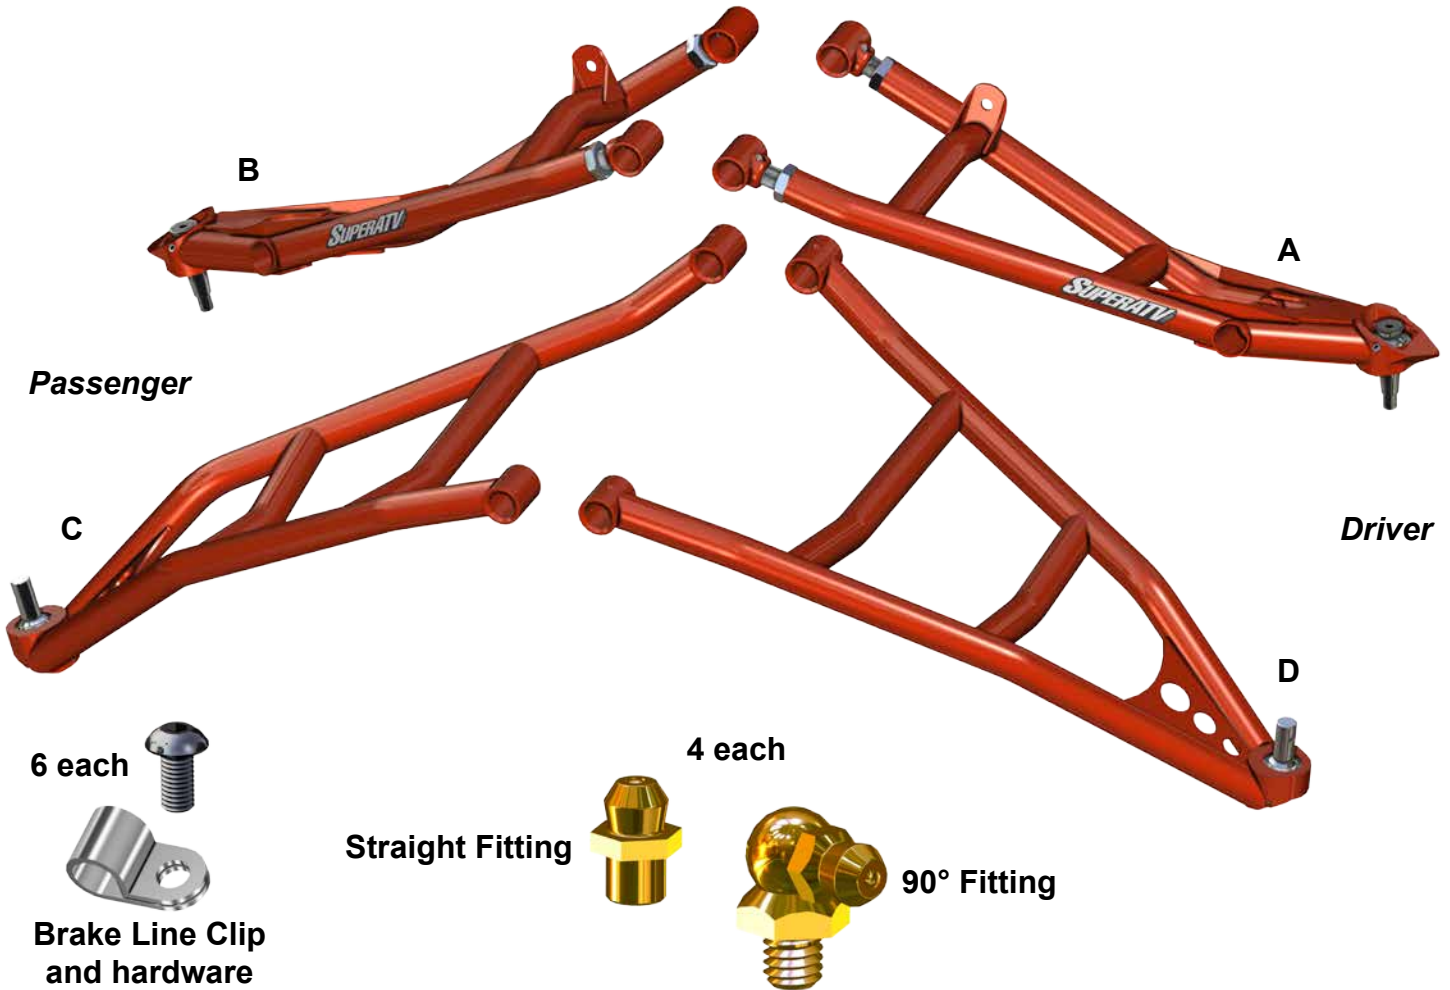

**Read instructions and view illustrations before beginning.**

**Need help with your installation?**



sales@superatv.com



www.superatv.com



1-812-574-7777



8:00am - 9:00pm EST M-Th  
 8:00am - 7:00pm EST Friday  
 9:00am - 2:00pm EST Saturday

*Thank You  
 For Choosing*

**Liability Statement**




SuperATV's<sup>®</sup> products are designed to best fit user's ATV/UTV under stock conditions. Adding, modifying, or fabricating any factory or aftermarket parts will void any warranty provided by SuperATV<sup>®</sup> and is not recommended. SuperATV's<sup>®</sup> products could interfere with other aftermarket accessories. If user has aftermarket products on machine, contact SuperATV<sup>®</sup> to verify that they will work together.

Although SuperATV<sup>®</sup> has thousands of satisfied customers, user should be aware that installing lift kits, long travel, or suspension kits, tires, etc. will change the ride of machine and may increase maintenance and part wear. Operating any off-road machine while, or after, consuming alcohol and/or drugs increases risk of bodily harm or death. No warranty or representation is made as to this product's ability to protect user from severe injury or death. SuperATV<sup>®</sup> urges operators and occupants to wear a helmet and appropriate riding gear at all times.


By purchasing and installing SuperATV<sup>®</sup> products, user agrees that should damages occur, SuperATV<sup>®</sup> will not be held responsible for loss of time, use, labor fees, replacement parts, or freight charges. SuperATV<sup>®</sup>, nor any 3rd party, will not be held responsible for any direct, indirect, incidental, special, or consequential damages that result from any product purchased from SuperATV<sup>®</sup>. The total liability of seller to user for all damages, losses, and causes of action, if any, shall not exceed the total purchase price paid for the product that gave rise to the claim.

SuperATV<sup>®</sup> will warranty only parts provided by SuperATV<sup>®</sup>. Any damage or problems with OEM housings, bearings, seals, or other manufacturers' products will not be covered by SuperATV<sup>®</sup>. SuperATV<sup>®</sup> parts and products are not warranted if item was not installed properly, misused, or modified.

**Removal: Keep all components removed from machine.**

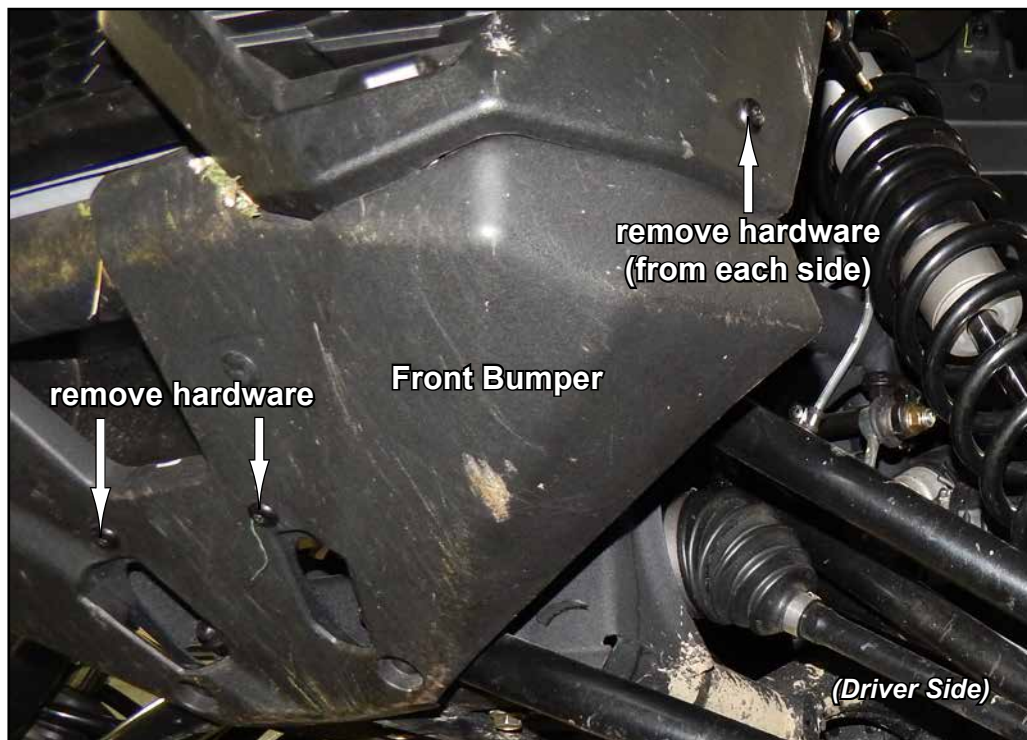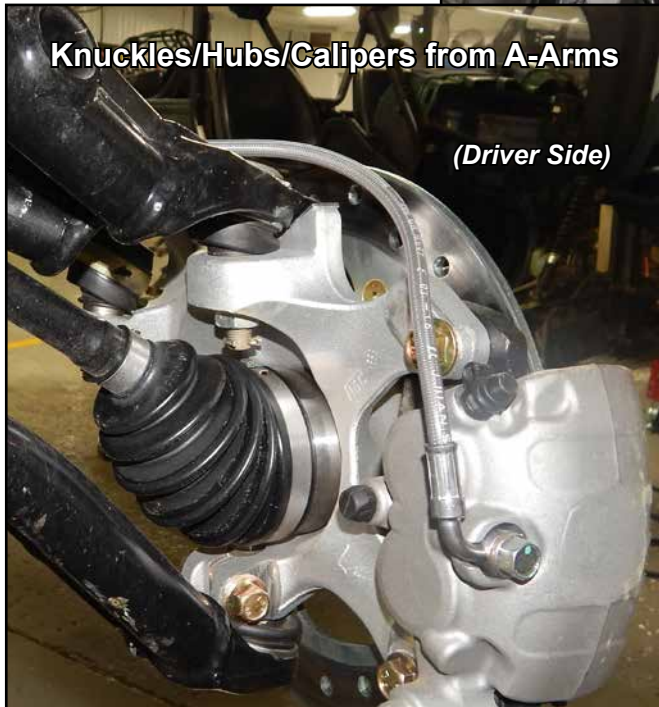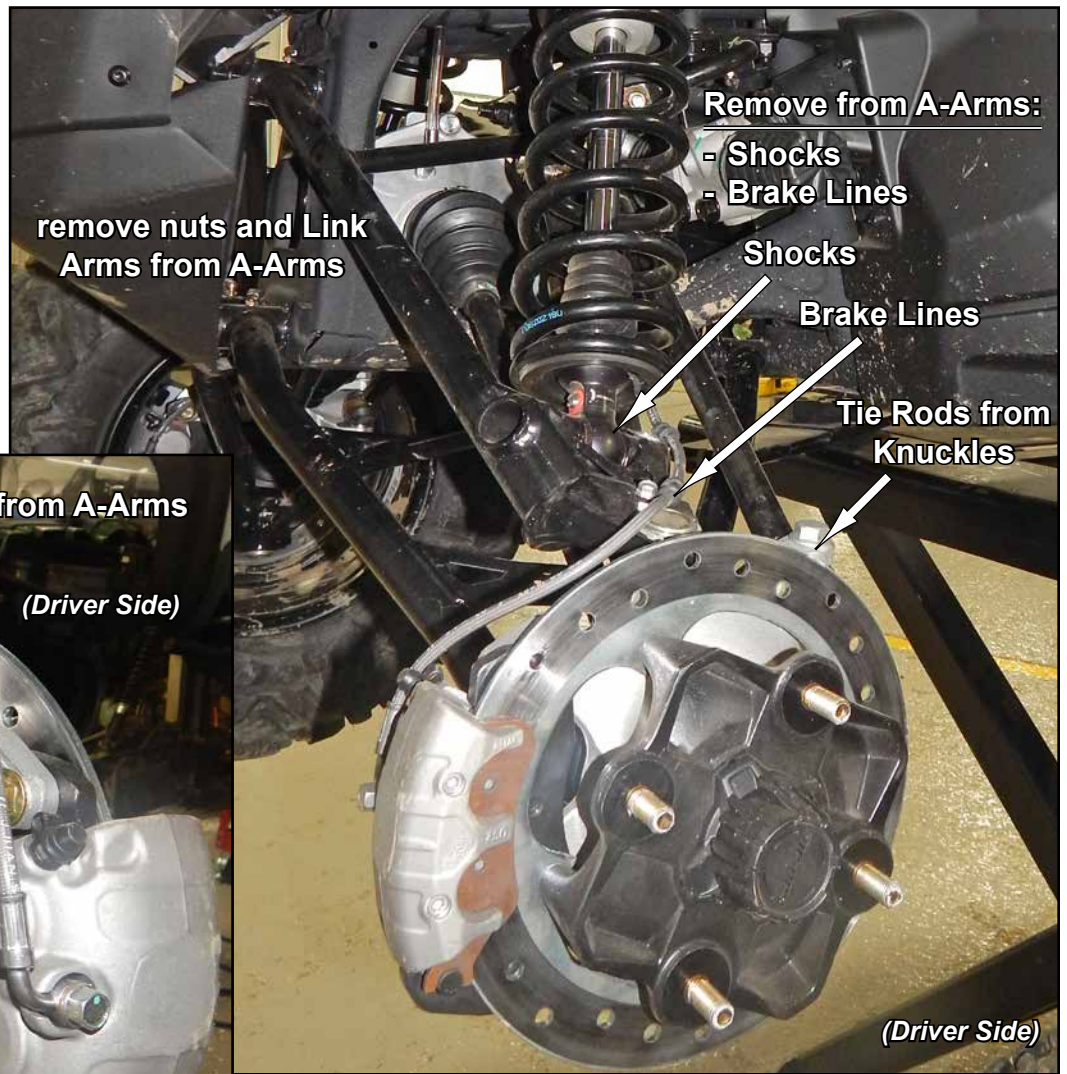




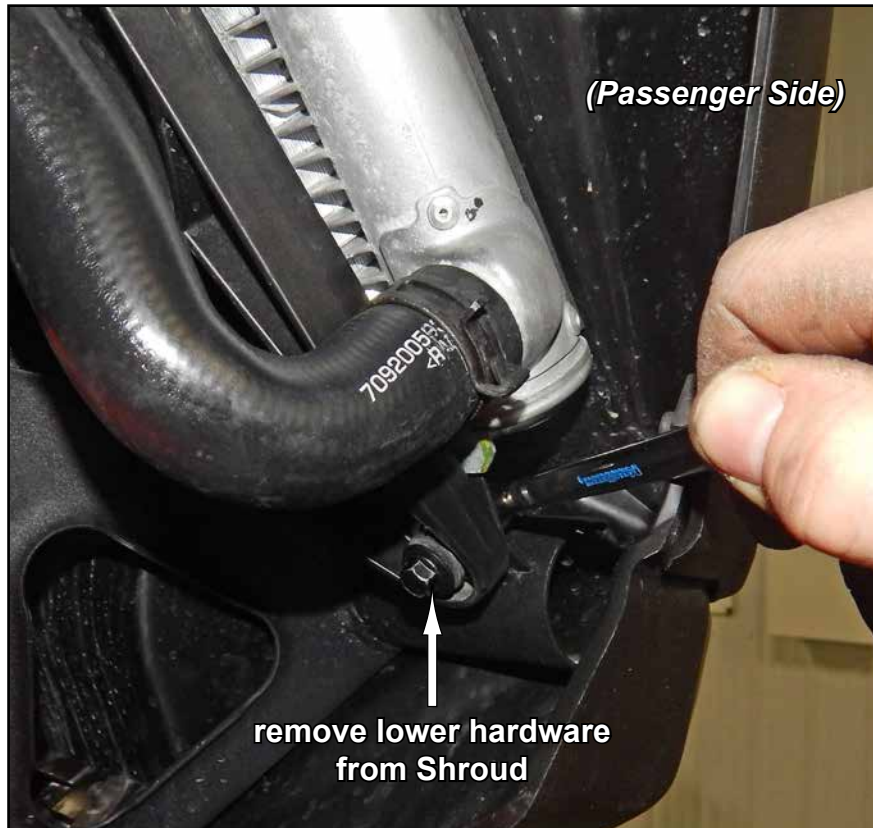


**Remove A-Arms from machine.**

**Prep:**



- Install stock Cushions and Wear Plates into new A-Arms.
- Install stock Ball Joints into new A-Arms.

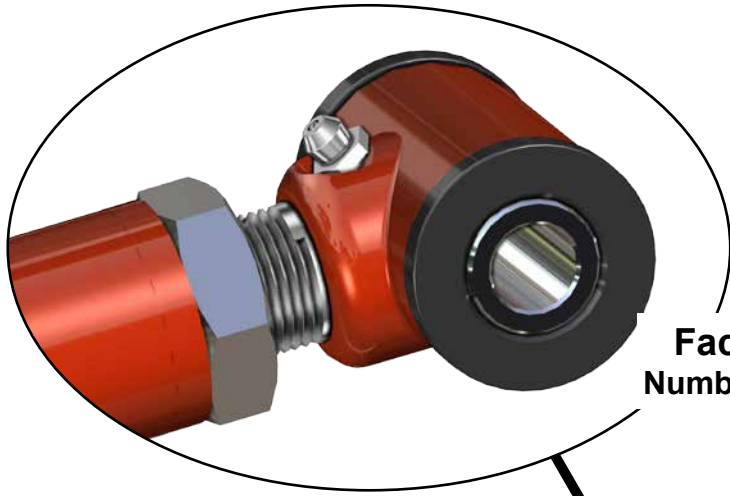

**Face of Nuts to Pivot Blocks: 10mm**  
Number may differ slightly for users machine.

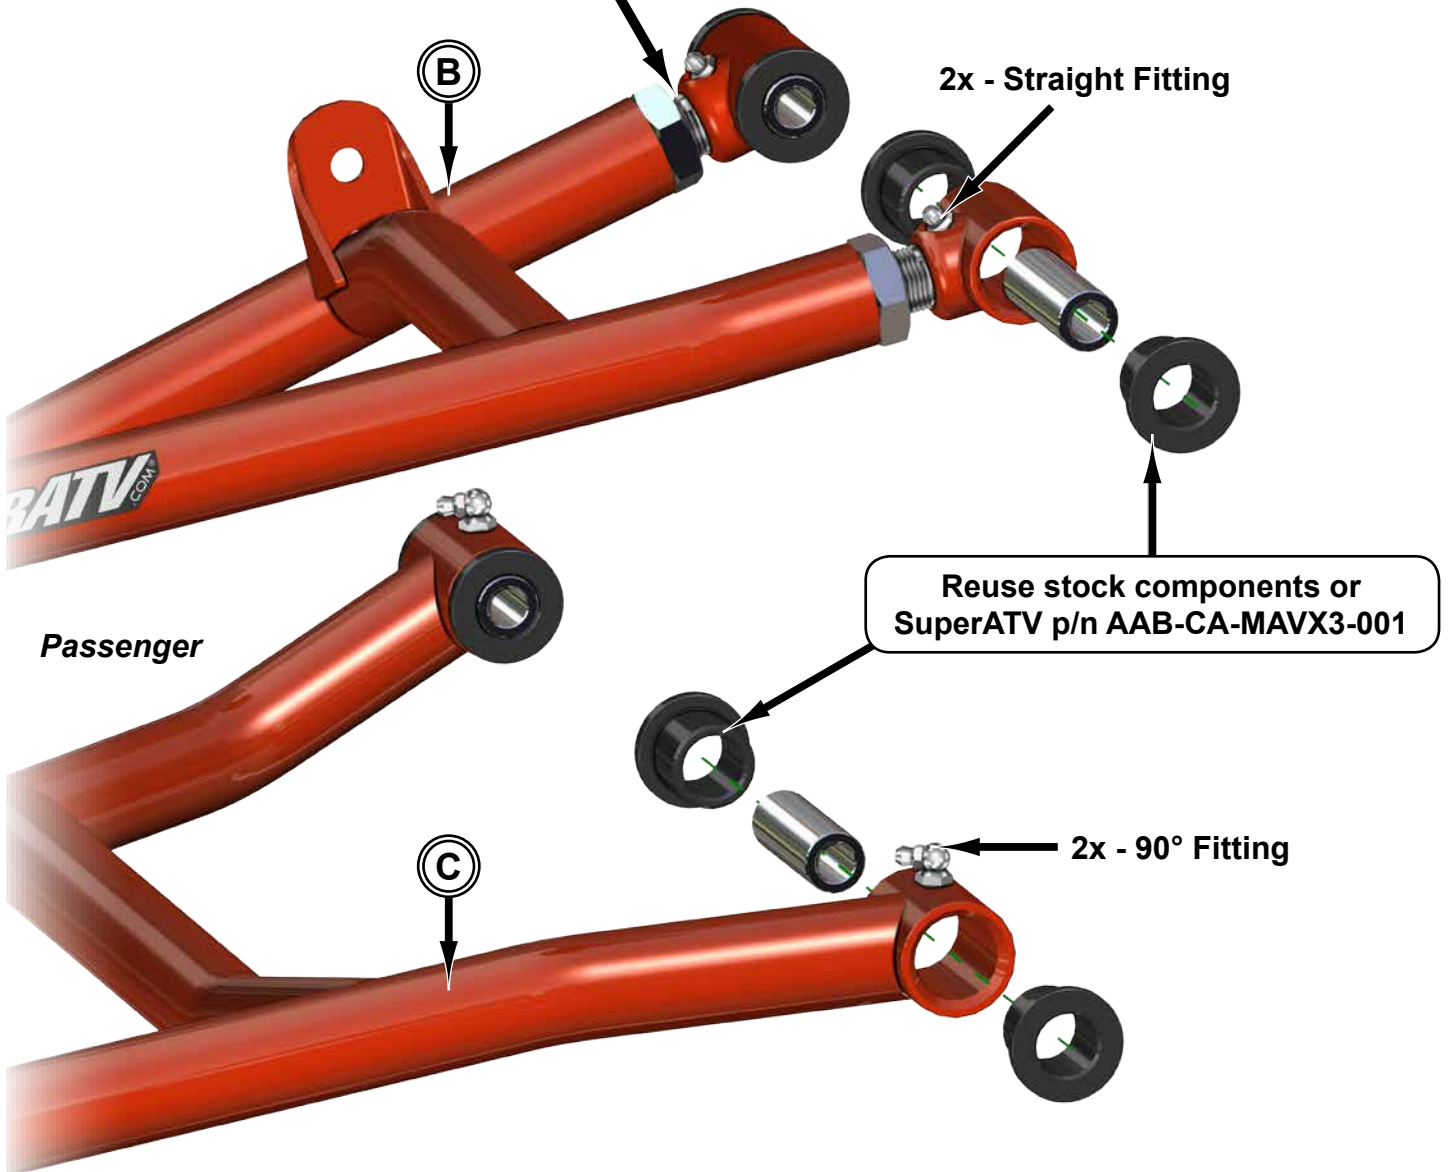

- Install Lower A-Arms (C)(D) and stock Lower Link Arm onto stock bolts.

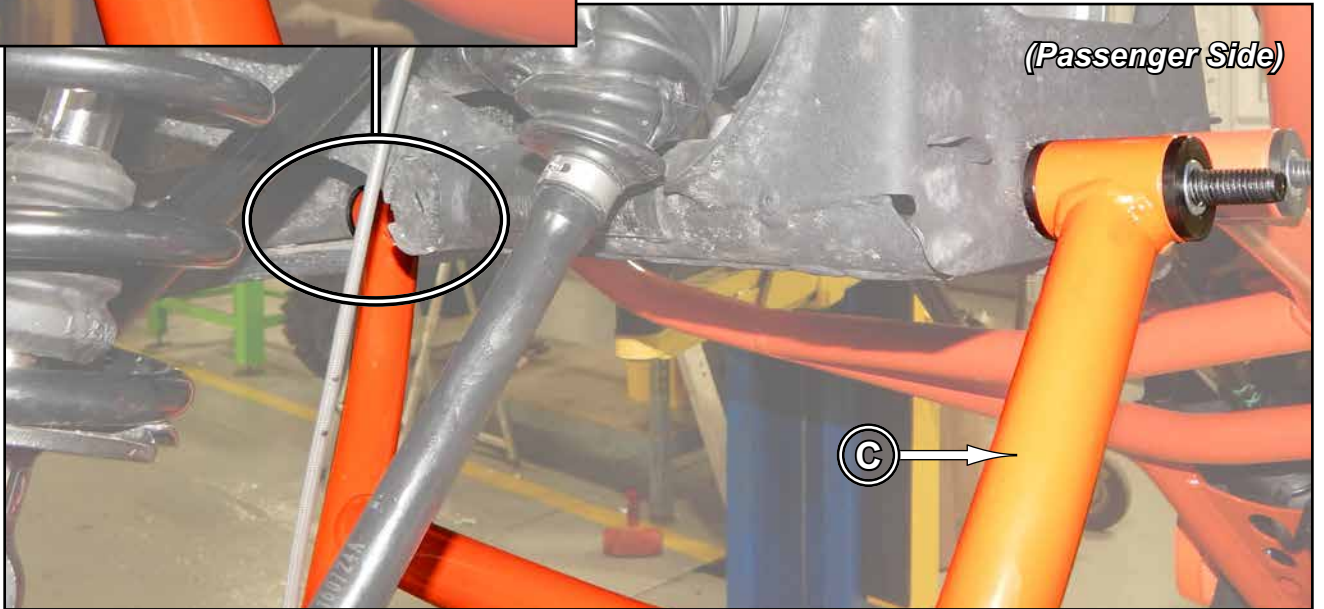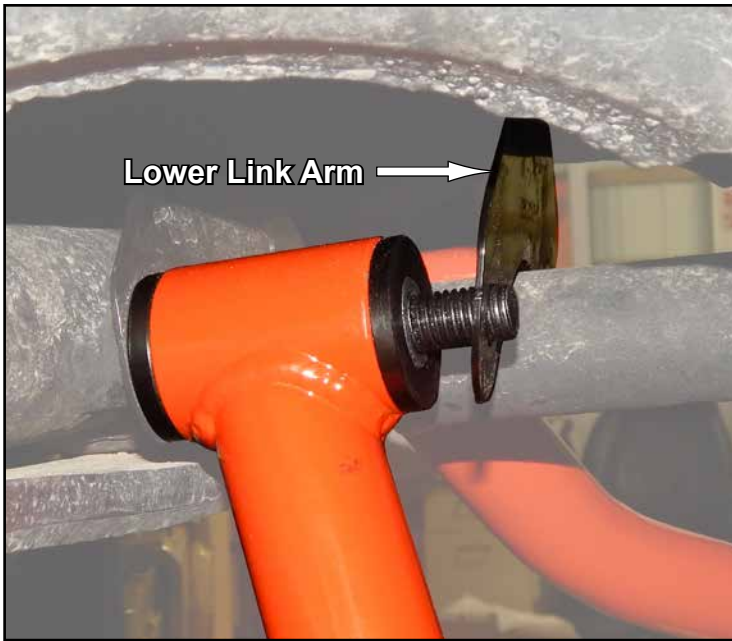



- Install Upper A-Arms (A)(B) and Upper Link Arm onto stock bolts.
- Reinstall stock Upper Link Arm.




- Remove Socket/Spacer and place Front Bumper onto stock bolts.






- Secure A-Arms with stock nuts. *SuperATV recommends using thread-locker.*
- Tighten completely.

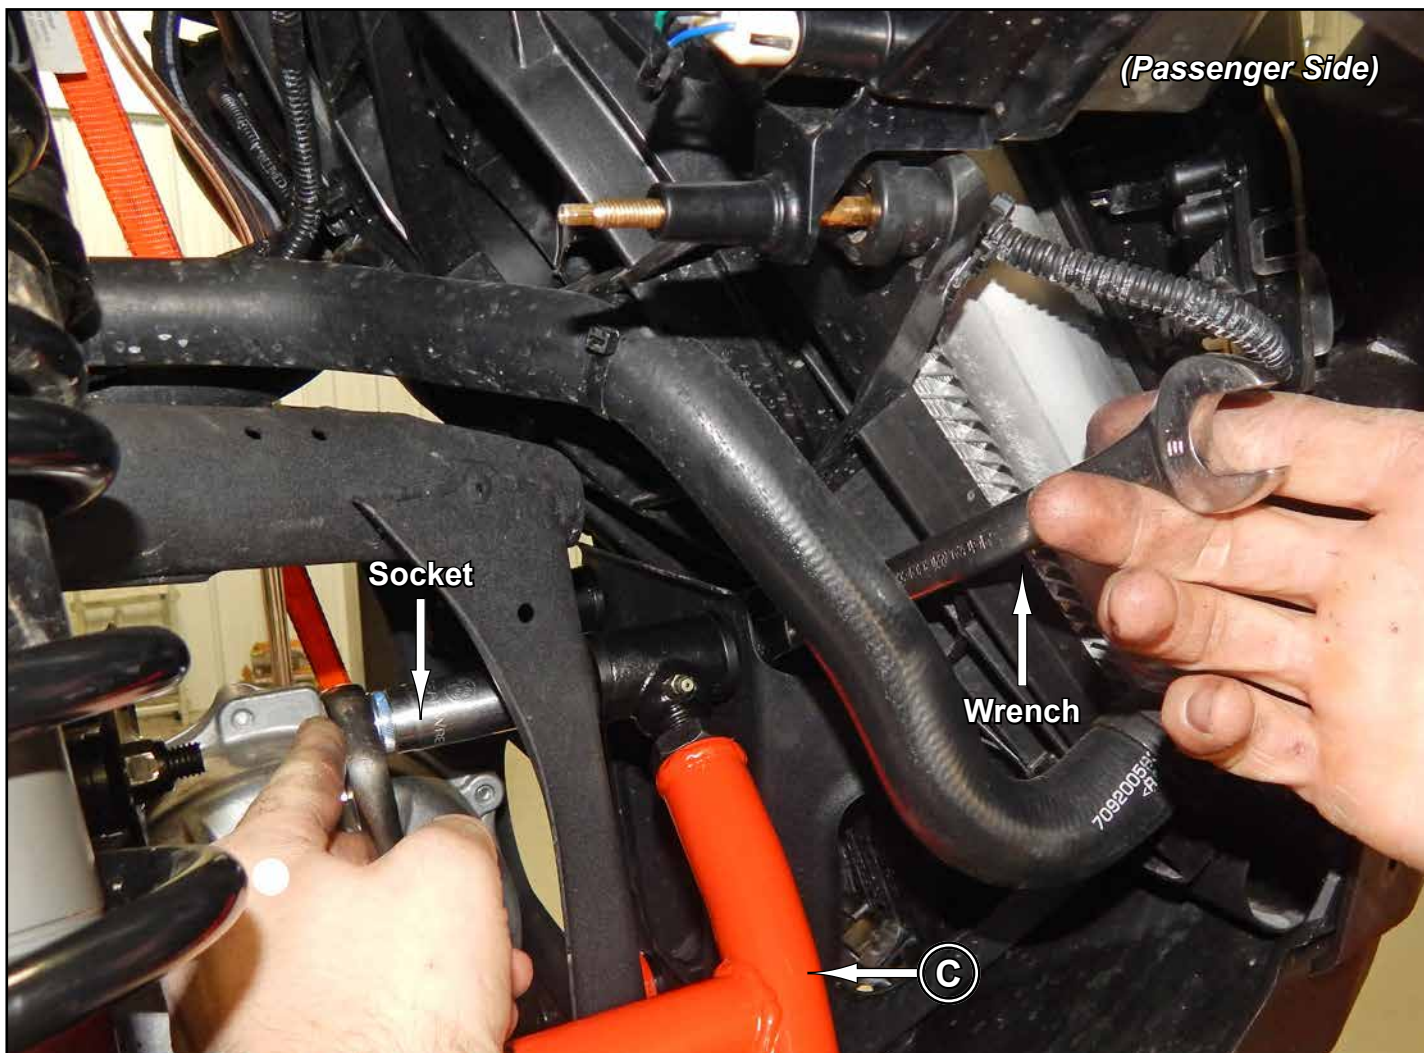


- Resecure Shroud. Tighten completely.

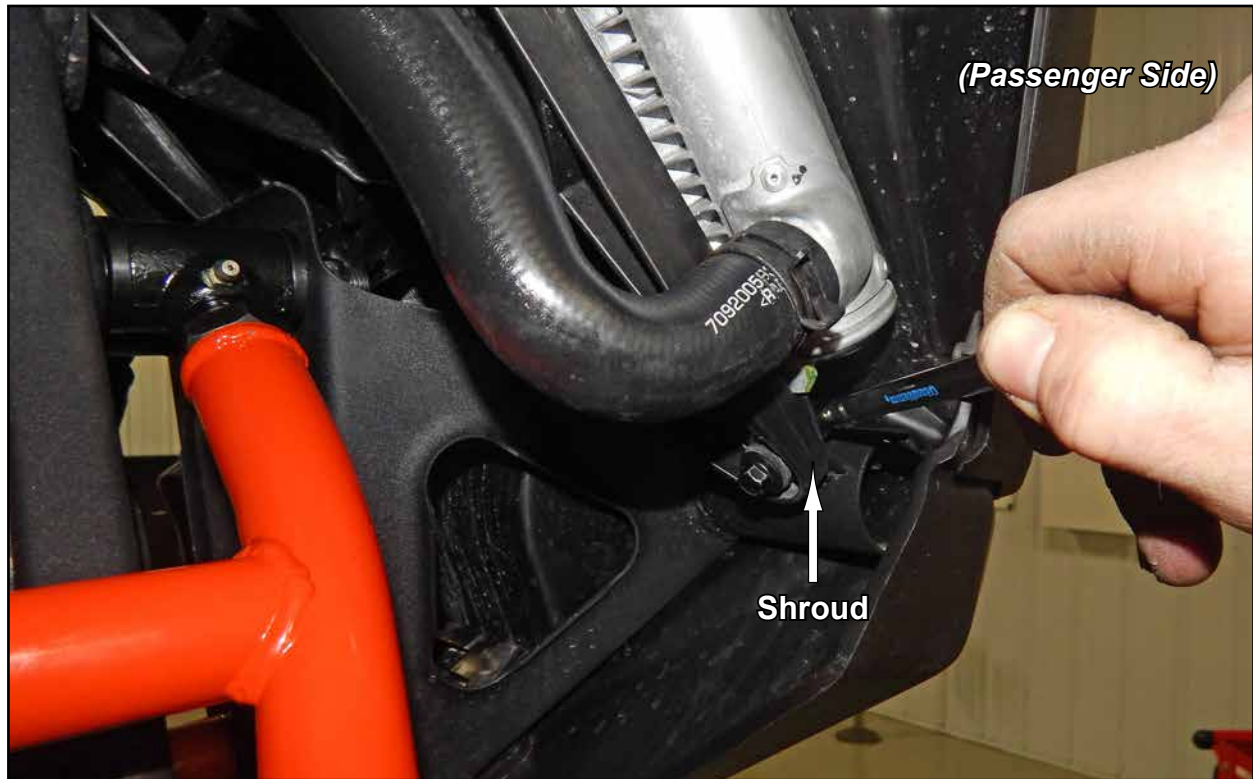



- Secure Shocks, Sway Bar Links, and Tie Rod Ends with stock hardware.
- Secure Brake Lines to Upper A-Arms with hardware shown.

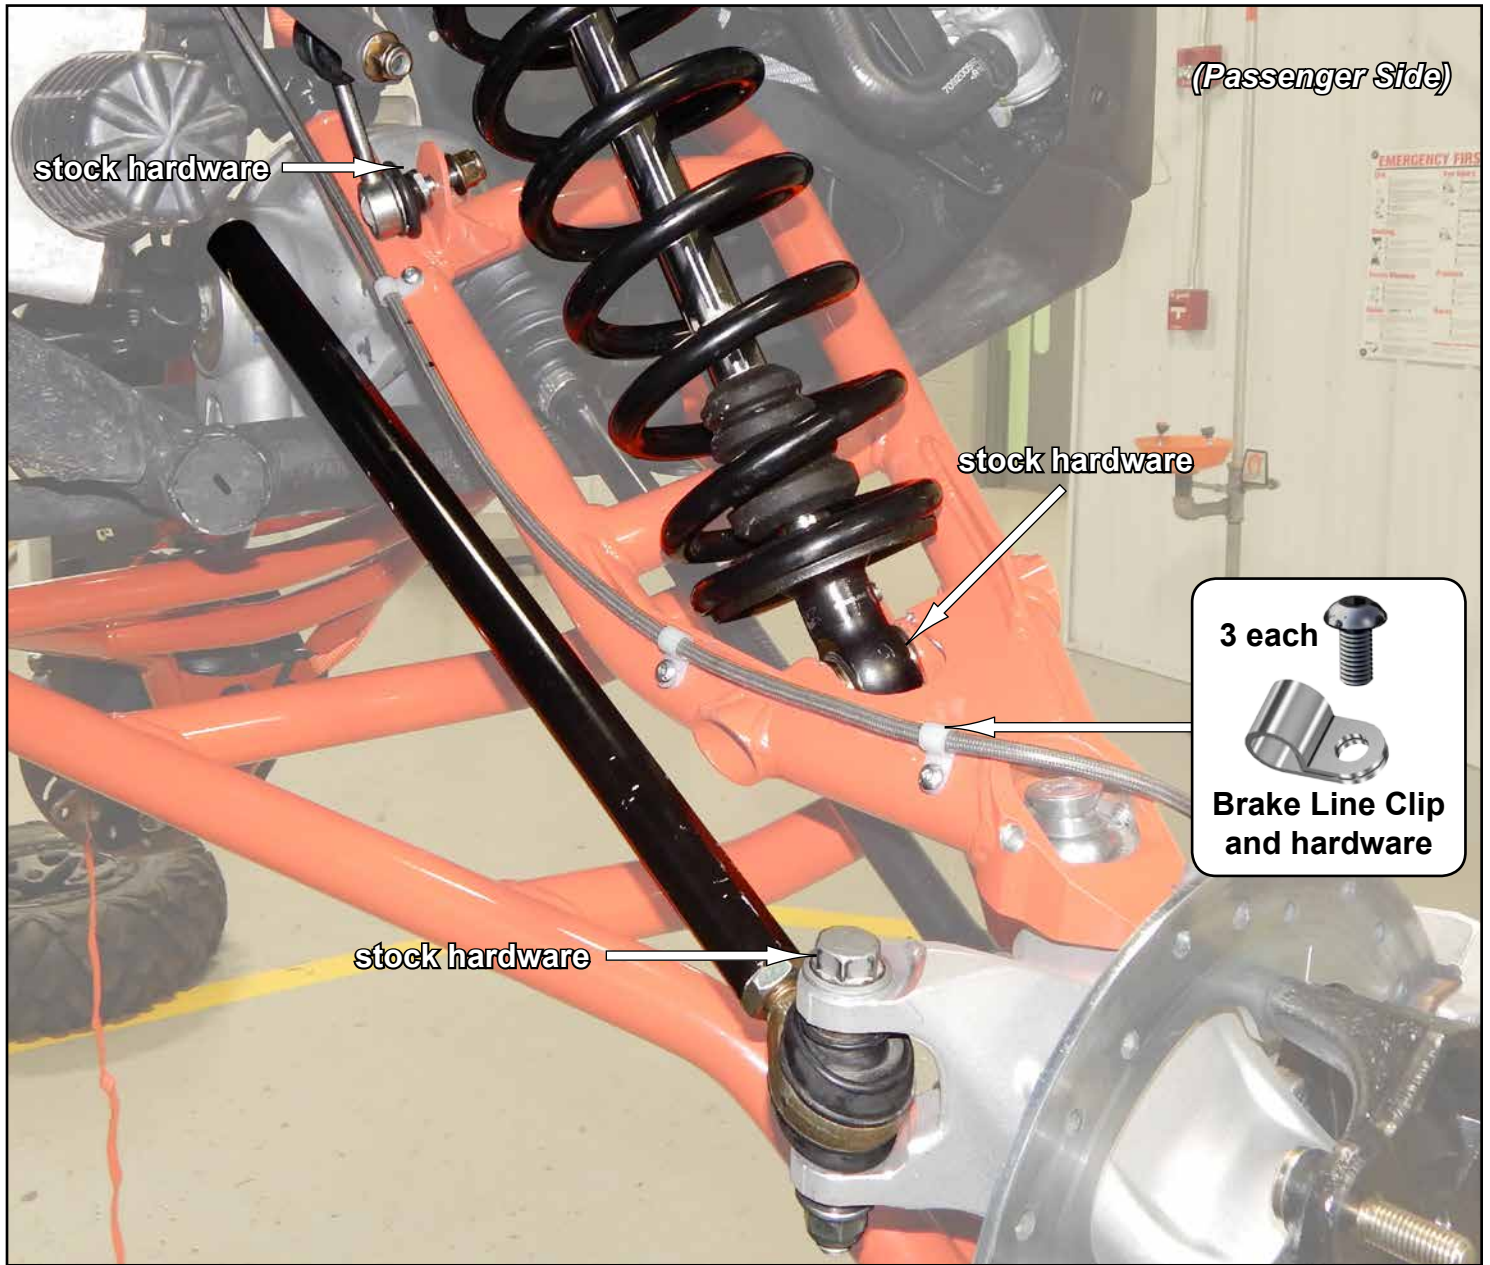


## CAMBER



Perform adjustments in small increments.




Adjustments are to be made after all suspension components have been completely assembled.  
*Tires must not be in contact with ground when making adjustments.*

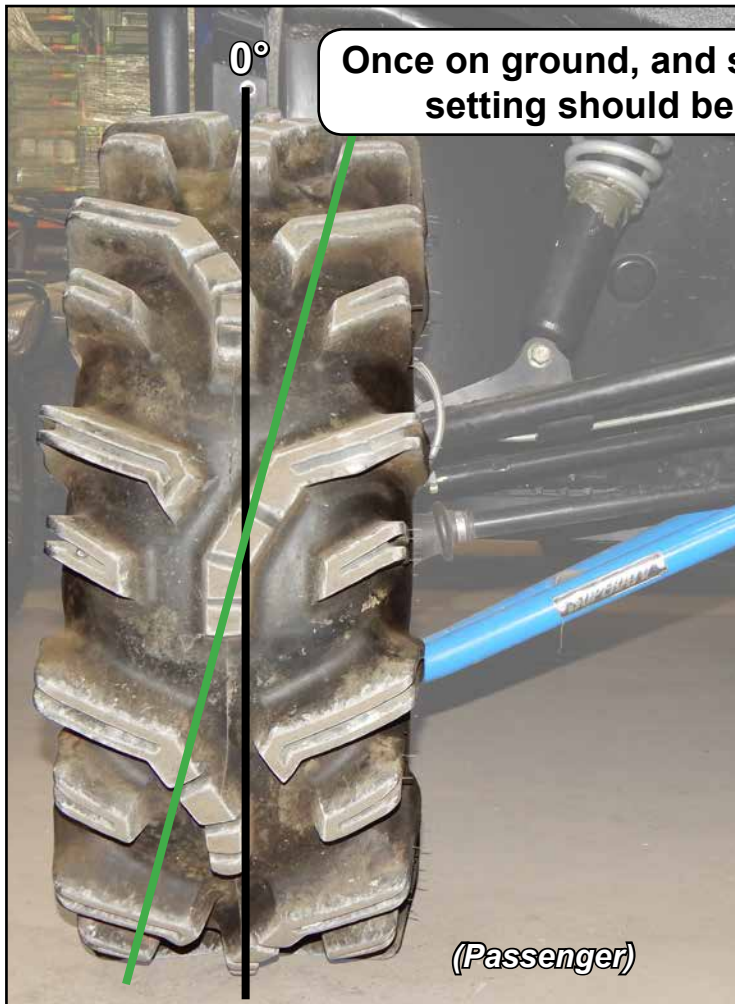

Once on ground, and suspension is settled,  
setting should be: negative 1° - 2°

1. Raise machine so that tires are off ground.
  2. Turn Pivot Blocks to adjust camber.
  3. Lower machine and settle suspension components by rolling machine back and forth several feet at a time.
  4. Check settings and make small adjustments as needed.
- Each time an adjustment is made, machine must be rolled back and forth to settle suspension components.

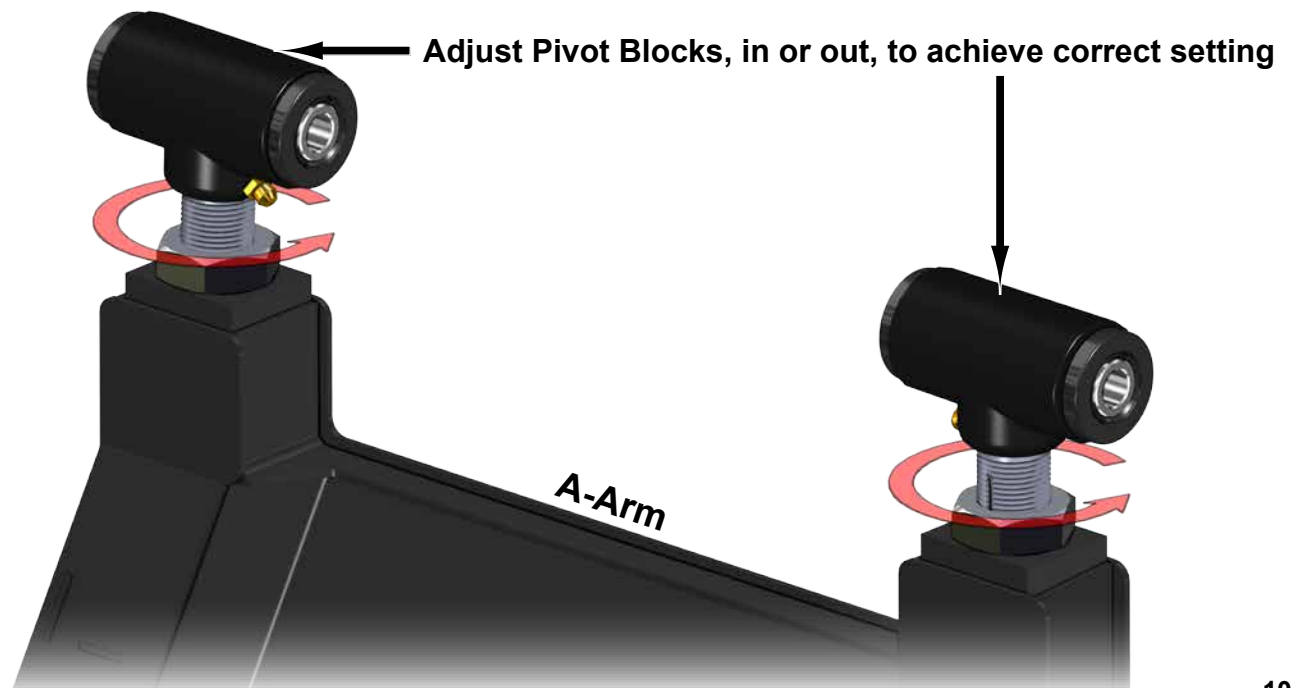



## CASTER




Perform adjustments in small increments.



Adjustments are to be made after all suspension components have been completely assembled.  
*Tires must not be in contact with ground when making adjustments.*

1. Raise machine so that tires are off ground.
  2. Turn Pivot Blocks to adjust caster.
  3. Lower machine and settle suspension components by rolling machine back and forth several feet at a time.
  4. Check settings and make small adjustments as needed.
- Each time an adjustment is made, machine must be rolled back and forth to settle suspension components.

Once on ground, and suspension is settled,  
setting should be: positive 3° - 4°

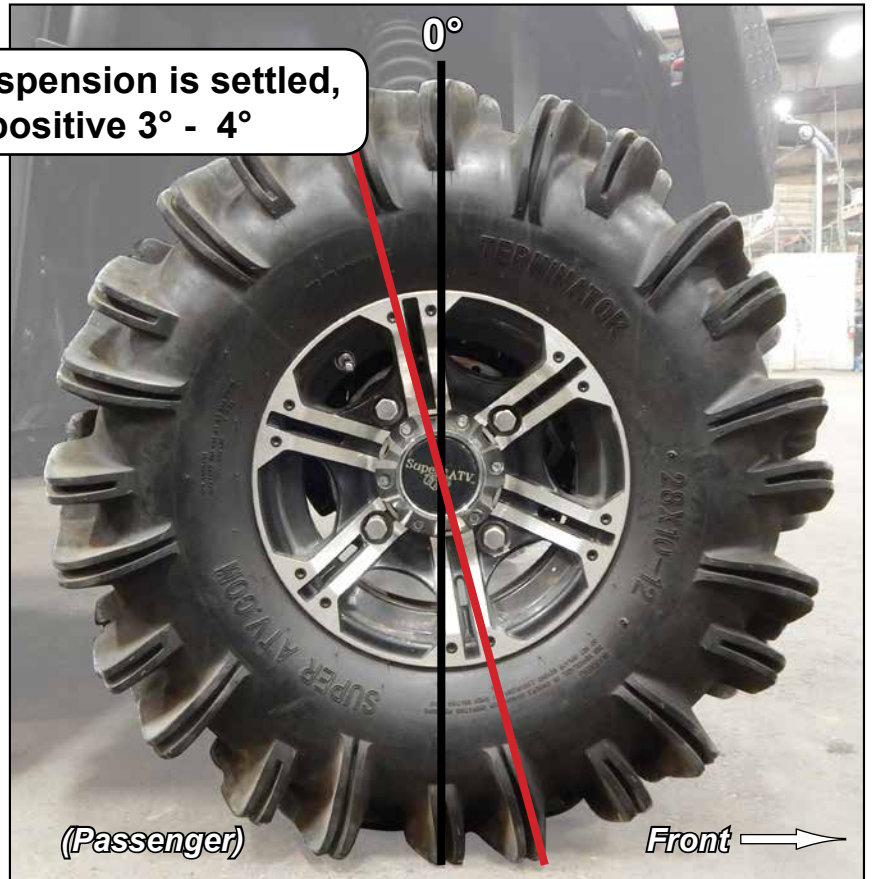

Adjust Pivot Blocks, in or out, to achieve correct setting. One Pivot Block will be different.

