



Global West Suspension  
655 South Lincoln Avenue  
San Bernardino Ca. 92408  
Toll Free 877-470-2975 Fax 909-890-0703  
[www.globalwest.net](http://www.globalwest.net)

**Part # TBC-52 --- 1965-68 Impala Adjustable Rear upper control arm  
(double bearing)**

**TBC-52 allows you to set pinion angle without shims or removing the arm off the car.**

The following items are supplied in the kit:

- Fully assembled upper control arm
- 2 --- 5/8 x 4 x 18 bolts
- 4 --- 16mm flat washers
- 2 --- 5/8 x 18 lock nuts



Installation requires supporting the car on the frame and supporting the rear end.

1. After the car is supported properly, unbolt the upper control arm from the frame bracket and rear end.



2. Install the new upper control arm with new hardware on the rear end side first. Install the new bolt with a flat washer against the head of the bolt and one against the lock nut. Tighten the bolt down till it contacts the bracket. Do not torque the bolt yet.



3. Install the other side of the control arm in the frame bracket. Make sure there are gold bearing spacers on each side of the spherical bearing. The spacers are installed here during assembly. Swing the arm into position and using new hardware, install the bolt with a flat washer against the head of the bolt and one against the lock nut. Torque the bolt to 80 foot-pounds bearing side only, not on the rear end side. Note: The bearing used is a self-lubricating bearing. Do not lubricate it.



4. Next support the vehicle on jack stands under the rear end only and not the frame. Torque the bolt on the rear end side only after the car is resting on the suspension at ride height. Torque to 80 foot-pounds.

5. Check pinion angle: The pinion angle should be set with the vehicle at ride height on a drive on ramp. Measure the angle between the rear end and drive shaft. We recommend 2 to 3 degrees nose down. To adjust the angle, simply adjust the length of the upper control arm by using a one-inch wrench. Loosen the jam nuts first and then rotate the hex adjuster, by lengthening or shortening the upper arm will adjust the pinion angle. After the pinion angle is adjusted tighten the jam nuts. When you tightening down the jam nuts for final, make sure the bearing assembly is in the center of it's travel and not tilted to one side.



Global West also makes the following additional components for 65-70 Impala:

- Tubular front upper and lower control arms (Featuring a major geometry change).
- Front and rear springs (one inch drop)
- Rear tubular lower control arms
- Rear anti-squat bracket
- Adjustable track bar/panhard rod.
- Adjustable track bar relocation kit