



UPR 79-04 Mustang Triple Hook Quadrant

1. At the bellhousing, remove the plastic/metal splash shield. Use a pry bar to slacken the clutch cable and disconnect it from the clutch fork.
2. Under the dash, pull the end of the cable loose from the quadrant.
3. Under the dash there are two plastic parts, which make up the factory clutch quadrant mechanism. They are held in place by clips on the end of the shafts. Remove the clips from the end of the shafts.
4. Press the clutch pedal fully to the floor (you may have to pull the carpet aside) and pry the plastic quadrant and springs off.
5. Press the clutch pedal to the floor again. Align the new aluminum quadrant with the shafts and slide the aluminum quadrant on. Reinstall the clips onto the end of the shafts.
6. Install the Adjustable Cable or Cable Adjuster. Hook the cable onto the clutch quadrant. **If you are using a firewall mounted Cable Adjuster**, attach the cable to the hook closest to the firewall. **If you are using an Adjustable Cable without a firewall Adjuster**, attach the cable to the hook farthest away from the firewall.