



## Radius Rod Upper Control Arm Installation Instructions

1. Remove stock upper control arms, making sure rear is supported.
2. Remove upper bushings from rear end, including steel shell. Spray bushing with WD-40 and hammer it further into rear (this will loosen rust), then hammer out sleeve and bushing.
3. Adjust length of new upper 9 1/8" center to center, this is a good starting point.
4. Install new arms to the outside of rear housing, inserting new bushings into rear end.
5. Do not over tighten as locknuts will maintain tightness.
6. 6. Adjust pinion angle to negative 1 to 2 degrees.