

CODE ALARM

Transmitter Programming Guide

The system will store codes from up to 4 different transmitters. If a 5th transmitter is programmed to the system, then the first transmitter programmed to the system will be erased from the system's memory.

1. Enter the vehicle, and turn the ignition switch to the ON position.
2. Press and release the programming button switch 3 times.
3. The dash mounted LED will flash 1 time, and the horn/siren will sound 1 time, indicating that the system is ready to accept programming of channel 1 which is arm/lock.
4. Press and hold the lock icon button of the transmitter you wish to program for 4 seconds or until a long chirp is heard from the horn/siren. Repeat for any additional transmitters you wish to program.
5. Press and release the programming button switch 1 time to advance to channel 2. The dash mounted LED will flash 2 times and the horn/siren will sound 2 times, indicating that the system is ready to accept programming for channel 2 which is disarm/lock.
6. Press and hold the unlock icon button of the transmitter you wish to program for 4 seconds or until a long chirp is heard from the horn/siren. Repeat for any additional transmitters you wish to program.
7. Press and release the programming button switch 1 time to advance to channel 3. The dash mounted LED will flash 3 times and the horn/siren will sound 3 times, indicating that the system is ready to accept programming for channel 3 which is trunk release/remote start.
8. Press and hold the trunk/key icon button of the transmitter you wish to program for 4 seconds or until a long flash from the parking lights. Repeat for any additional transmitters you wish to program.
9. Press and release the programming button switch 1 time to advance to channel 4. The dash mounted LED will flash 4 times and the horn/siren will sound 4 times indicating that the system is ready to accept programming for channel 4 which is an optional device.
10. Press and hold the option button of the transmitter you wish to program for 4 seconds or until a long flash from the parking lights. Repeat for any additional transmitters you wish to program.