

Caravan® Canopy custom graphics are available to create an eye catching promotional tool. (Not available for premanufactured tops.)

Caravan® Canopy le ofrece signos gráficos de acuerdo a su gusto. Los signos gráficos llamarán la atención de todo el mundo y será un excelente instrumento de propaganda. (No es disponible en las cubiertas prefabricadas.)

Fabrication de tonnelles avec graphiques personnalisés sur commande (par exemple, pour faire des publicités accrocheuses).

All accessories or custom graphics can be ordered by calling Caravan® Canopy Int'l or via our website - [www.caravancanopy.com](http://www.caravancanopy.com)

Para cualquier pedido de accesorios, favor de llamar a Caravan® Canopy Int'l, o bien, ordene su pedido por via internet a: [www.caravancanopy.com](http://www.caravancanopy.com)

Tous les accessoires peuvent être commandés en appelant Caravan® Canopy Int'l ou par le biais de notre site web au : [www.caravancanopy.com](http://www.caravancanopy.com)

## • Replacement Parts •

Guide	Part Name	Guide	Part Name
A	Dome Cap ONLY	J	Upper Peak Bracket (4-way)
B	Foot Pad	K	Lower Peak Bracket (4-way)
C	Inner Leg with Foot Pad	L	Peak Pole with Dome Cap
D	Joint Bolt	M	Pole Support without Adjustable Dial
E	Joint Bolt and Nut	N	Snap Button
F	Joint Washer and Bolt Cap	N	Pull-Pin Slider
G	Outer Leg Bracket (2-way)	O	Truss Bar
H	Slider Bracket (2-way)	P	Truss Cap (Upper and Lower)
I	Outer Leg Bracket (2-way)		



## • Warranty •

Caravan® Canopy Int'l warrants that each part of this product will be free from defects in material and workmanship for a two (2) year period from date of purchase.

This warranty is void :

- If product is used under other than normal use and maintenance conditions.
- If the product is modified or altered.
- If product is subject to abuse or neglect.
- If product damage is accidental or deliberate or caused by rain, wind or other forces of nature.
- If product use does not conform to product instructions.
- If product is repaired by someone other than Caravan® Canopy Int'l or its authorized representative.

The sole obligation of Caravan® Canopy Int'l under this warranty or any other legal obligation, with respect to the product, is repair or replacement, by Caravan® Canopy Int'l or its authorized representative, of the missing or defective parts causing malfunction with new parts after review and examination by Caravan® Canopy Int'l.

Under no circumstances will the retail customer, user, authorized representative or other person be entitled to any direct, special, indirect, consequential or exemplary damages for breach of contract or otherwise. Under no circumstances will any person be entitled to a sum greater than purchase price of the malfunctioning part.

No Caravan® Canopy Int'l authorized representative or person other than an officer of Caravan® Canopy Int'l may extend or modify this warranty. There are no other warranties from either Caravan® Canopy Int'l or its representatives which extend the face of this warranty. All other warranties, expressed or implied, including the warranties of merchantability, fitness for a particular purpose and fitness for use are excluded.

Please contact Caravan® Canopy Int'l for specific shipping instructions before returning any part. All shipping costs must be pre-paid. Caravan® Canopy Int'l will not be responsible for any products damaged in transit.

Caravan® Canopy Int'l garantiza que cada parte de este producto y el producto mismo estarán libres de defectos de material y mano de obra por veinticuatro (24) meses del día de compra. Esta garantía será nula [A] si el producto es utilizado en condiciones que no sean de uso ó mantenimiento normal, [B] si el producto es modificado ó alterado, [C] si el producto es sujeto a abuso ó descuido, [D] si el daño al producto es accidental ó deliberado ó causado por lluvia, viento u otras fuerzas de la naturaleza, [E] si el uso del producto no se conforma a las instrucciones del producto, ó [F] si el producto es reparado por alguien otro que Caravan® Canopy Int'l ó uno de sus representantes autorizados.

Existen otras condiciones y restricciones importantes que forman parte de esta Garantía Limitada. Para obtener la versión completa de esta Garantía en Francés ó Español, por favor llame a la oficina de Servicio al Consumidor de Caravan® Canopy Int'l.

Caravan® Canopy Int'l garantie que chaque partie de ce produit et le produit lui-même sera libre de défauts dans les matériaux et habileté pour vingt-quatre (24) mois de la date d'achat. Cette garantie est nulle (A) si le produit est utilisé sous autre qu'usage normal et conditions de l'entretien, (B) si le produit est modifié ou est changé, (C) si le produit est soumis à abus ou néglige, (D) si le dégât du produit est accidentel ou délibéré ou causé par la pluie, vent ou autres forces de nature, (E) si l'usage du produit ne conforme pas aux directives du produit, ou (F) si le produit est réparé par quelqu'un autre que Caravan® Canopy Int'l ou représentant autorisé.

Il y a autres termes importants et restrictions qui sont incluses comme partie de cette Garantie Limitée. Pour une version complète de cette Garantie en Français ou en Espagnol, s'il vous plaît appelez le bureau de service Caravan® Canopy Int'l

 
 
 


HEADQUARTERS

2111 South Acacia Avenue  
Compton, California 90220  
1-877-9-CANOPY • fax 310-223-4468  
[www.caravancanopy.com](http://www.caravancanopy.com)



Caravan Canopies Canada, Inc.  
203-1515 Broadway Street  
Port Coquitlam, BC V3C 6M2 Canada  
1-877-776-6655 • fax 604-464-1372



Caravan® Canopy International is an innovative company with numerous United States and International Patents and Patent Applications. Manufactured under license to U.S. Patent No. 5,244,001

# DISPLAYSHADE™ Reference Manual



## • Warning • Advertencia • Avertissement •

Do not set-up or leave the canopy unattended in the following conditions: gusty wind, rain, hail, sleet, snow, drizzle, or any other harsh weather conditions. Doing so may cause damage to the entire canopy and will void the warranty. Please call Caravan® Canopy for any questions or inquiries.

Do not set-up or leave the canopy unattended in the following conditions: gusty wind, rain, hail, sleet, snow, drizzle, or any other harsh weather conditions. Doing so may cause damage to the entire canopy and will void the warranty. Please call Caravan® Canopy for any questions or inquiries.

Do not set-up or leave the canopy unattended in the following conditions: gusty wind, rain, hail, sleet, snow, drizzle, or any other harsh weather conditions. Doing so may cause damage to the entire canopy and will void the warranty. Please call Caravan® Canopy for any questions or inquiries.



## • Thank You •

Our mission is to design and manufacture the finest canopies in the world. From raw materials to finished products, our focus is to deliver years of enjoyment to every owner of a Caravan® Canopy. Your new Caravan® Canopy requires very little care or maintenance. Following these simple guidelines will insure a lifetime of satisfaction.

Nuestra misión es diseñar y producir las sombras más finas del mundo. Desde la selección de los materiales hasta el acabado de nuestros productos, nosotros hemos puesto el enfoque en la continua satisfacción y deleite de todos los propietarios de nuestra Caravan® Canopy. Su nueva Caravan® Canopy se requiere de muy poco cuidado o mantenimiento. Siguiendo éstas simples instrucciones, le asegurará una satisfacción duradera.

Notre ambition est de concevoir et de fabriquer la meilleure tonnelle au monde. Depuis la fabrication jusqu'au produit fini, notre volonté est de donner des années de satisfaction à chaque propriétaire de Caravan® Canopy. Votre nouvelle Caravan® Canopy nécessite très peu de soin ou d'entretien. Vous pouvez vous assurer toute une vie d'utilisation en suivant ces simples règles.

## • Warning •

- Not compiling with these warnings will void your Caravan® Canopy warranty!
- DO NOT set-up or leave your Caravan® Canopy assembled in rain, hail, sleet, snow, drizzle, lightning, strong winds or any harsh weather conditions.
- Do not allow water of any kind to accumulate on the canopy top.
- Use Tie-downs, Stakes or Weight Bags to secure your Caravan® Canopy in windy conditions. Commercial Stake Kits and Weight Bags can be purchased as accessories directly from Caravan® Canopy Int'l.
- Never set-up your Caravan® Canopy over barbeque or near open flame. Although the canopy top is fire retardant, serious injury or damage to canopy can still occur.
- Always follow directions when setting-up your Caravan® Canopy. Be aware of hands and fingers when expanding or collapsing frame.
- It is recommended to remove canopy top from frame after take-down. Storing top on frame may result in fabric tears or other damage requiring repair or re-purchase.
- Never clean the canopy top in a washing machine - serious damage will result. If cleaning is required, while set-up on the frame, use a light detergent on a cloth and gently clean top by hand, then rinse off with a garden hose.
- Do not use detergent or hand cleaner if top has custom silk-screened graphics.
- Allow top to dry completely before storing.
- Keep your canopy off of steep slopes and inclines
- Do not use your Caravan® Canopy as a permanent shelter. It is designed for temporary use only!
- Never leave your Caravan® Canopy unattended.

- Utilice ataduras, estacas o bolsas de peso para asegurar su Caravan® en condiciones ventosas. El juego de estacas comerciales y las bolsas de peso (vea la página 4) pueden ser adquiridos como accesorios directamente de Caravan® Canopy Int'l.
- NUNCA DEBERÁ DEJAR LA SOMBRA BAJO LA TORMENTA. DE NINGUNA MANERA DEBERÁ tratar de armar su Caravan® cuando haya tormenta, lluvia, nieve o relámpago. No deje que la lluvia se acumule encima de la cubierta - puede causar daños.
- Nunca trate de armar su Caravan® sobre el asador o cerca del fuego. Aunque la cubierta de la sombra es resistente al fuego, serias lesiones o daños a la sombra pueden ocurrirse.
- Siempre siga las instrucciones cuando vaya a armar su Caravan®. Tenga mucho cuidado con sus manos y dedos cuando esté expandiendo o doblando el armazón.
- Nunca guarde su Caravan® con la cubierta conectada en el armazón. Siempre remueva la cubierta del armazón y guarde la cubierta por separado. De no ser así, puede causar desgarrones en el tejido u otros danos que tendrá que ser reparados o adquirirla de nuevo.
- Nunca trate de lavar la cubierta en la lavadora (podría ocasionar serios daños). En caso de que necesite limpiarla, hágalo mientras esté tendida sobre el armazón. Use un detergente ligero sobre un trapo y suavemente limpie la cubierta a mano y enjuague utilizando la manguera. (NO utilice detergente ni trate de limpiar a mano si su cubierta tiene impresiones graficas de orden especial. En ese caso use solamente la manguera para enjuagar.) Deje que la cubierta se seque completamente antes de guardarla.

- Servez-vous des tendeurs, de piquets ou de sacs de lest pour assurer votre Caravan® Canopy Int'l en cas de vent. Des lots de piquets et de sacs de lest peuvent être commandés comme accessoires directement chez nous.
- Ne laissez jamais votre tonnelle sans surveillance pendant une tempête. Ne tentez pas de monter votre tonnelle sous la pluie, sous la neige ou pendant un orage. Ne laissez jamais l'eau de pluie s'accumuler sur la toile de la tonnelle - des dégâts irréversibles pourraient survenir.
- N'installez jamais votre Caravan® au dessus d'un barbecue ou à proximité d'une flamme. Même si la toile est ignifugée, il y a toujours un risque de vous brûler ou d'endommager la tonnelle.
- Suivez toujours le mode d'emploi quand vous montez votre Caravan®. Faites attention à vos mains et à vos doigts pendant le montage et le démontage de l'armature.
- Attention ! Toujours ôtez la toile avant de plier la structure. Le démontage de la tonnelle avec la toile toujours accrochée peut déchirer ou endommager celle-ci et nécessiter des réparations, voire même son remplacement.
- Ne tentez jamais de laver la toile dans un lave-linge (risques de sérieux dégâts). Si la tonnelle nécessite un nettoyage, mettez un peu de détergent doux sur un chiffon et frottez doucement la toile, puis rincez avec un tuyau d'arrosage (ne pas frotter, ni utiliser un détergent si la toile est imprimée ; arrosez-la, tout simplement).

## • Setup •

1.) Stand the Caravan Canopy frame upright in the center desired set-up location. 2.) Gently pull the outer frame legs partially extended with a second person assisting.

1.) Stand the Caravan Canopy frame upright in the center desired set-up location. 2.) Gently pull the outer frame legs partially extended with a second person assisting.

1.) Stand the Caravan Canopy frame upright in the center desired set-up location. 2.) Gently pull the outer frame legs partially extended with a second person assisting.

3.) Place the canopy top over the partially open frame. 4.) Align the canopy top with the four (4) corners of the frame and attach the canopy velcro strip to each frame corner securely.

3.) Place the canopy top over the partially open frame. 4.) Align the canopy top with the four (4) corners of the frame and attach the canopy velcro strip to each frame corner securely.

3.) Place the canopy top over the partially open frame. 4.) Align the canopy top with the four (4) corners of the frame and attach the canopy velcro strip to each frame corner securely.

5.) Lift frame into position by expanding the truss bars until the frame is fully extended. Be careful not pinch fingers or hands as you lift and step backwards slowly. 6.) Now that the frame is fully extended, lock the top bracket sliders into place at each corner by holding the frame with one hand and pulling the slider in place until it locks.

5.) Lift frame into position by expanding the truss bars until the frame is fully extended. Be careful not pinch fingers or hands as you lift and step backwards slowly. 6.) Now that the frame is fully extended, lock the top bracket sliders into place at each corner by holding the frame with one hand and pulling the slider in place until it locks.

5.) Lift frame into position by expanding the truss bars until the frame is fully extended. Be careful not pinch fingers or hands as you lift and step backwards slowly. 6.) Now that the frame is fully extended, lock the top bracket sliders into place at each corner by holding the frame with one hand and pulling the slider in place until it locks.

7.a/7.b) Adjust the frame legs to your desired height by lifting up each leg and slowly pulling out the inner leg into place until the leg pops into place. Repeat this process for each desired height adjustment by using the pull pin on each leg. Placing one foot on each corner footpad and slowly extending each leg into place can also extend the frame legs.

 
 
7.a/7.b) Adjust the frame legs to your desired height by lifting up each leg and slowly pulling out the inner leg into place until the leg pops into place. Repeat this process for each desired height adjustment by using the pull pin on each leg. Placing one foot on each corner footpad and slowly extending each leg into place can also extend the frame legs.

7.a/7.b) Adjust the frame legs to your desired height by lifting up each leg and slowly pulling out the inner leg into place until the leg pops into place. Repeat this process for each desired height adjustment by using the pull pin on each leg. Placing one foot on each corner footpad and slowly extending each leg into place can also extend the frame legs.

8.) Attach U-Clips to each side of the canopy frame to secure canopy top. Your Caravan Canopy Traveler is now complete!

8.) Attach U-Clips to each side of the canopy frame to secure canopy top. Your Caravan Canopy Traveler is now complete!

8.) Attach U-Clips to each side of the canopy frame to secure canopy top. Your Caravan Canopy Traveler is now complete!

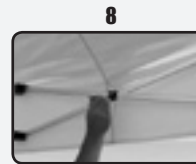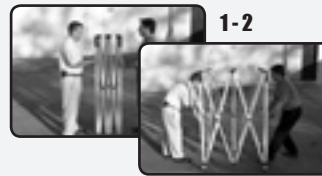

complete



## • Take Down •

1.) Release each pull pin on each leg and shorten the frame to its original height prior to extending the legs during set-up. 2.) Disengage locking button at each corner of the frame and pull the slider down slowly until the button is completely free of the slider.

1.) Release each pull pin on each leg and shorten the frame to its original height prior to extending the legs during set-up. 2.) Disengage locking button at each corner of the frame and pull the slider down slowly until the button is completely free of the slider.

1.) Release each pull pin on each leg and shorten the frame to its original height prior to extending the legs during set-up. 2.) Disengage locking button at each corner of the frame and pull the slider down slowly until the button is completely free of the slider.

3.) Hold the middle frame section with a second person assisting on two sides of the frame. 4.) Walk forward slowly allowing for the frame to fold inward and close. Be careful not pinch fingers or hands as you close the frame. Secure the frame firmly for storage.

3.) Hold the middle frame section with a second person assisting on two sides of the frame. 4.) Walk forward slowly allowing for the frame to fold inward and close. Be careful not pinch fingers or hands as you close the frame. Secure the frame firmly for storage.

3.) Hold the middle frame section with a second person assisting on two sides of the frame. 4.) Walk forward slowly allowing for the frame to fold inward and close. Be careful not pinch fingers or hands as you close the frame. Secure the frame firmly for storage.

5.) Completely fold the frame to securely with or without the canopy attached. 6.) Place the frame into the unzipped storage bag by sliding it down into the bag slowly until canopy fits comfortably. Zip the storage bag completely shut.

5.) Completely fold the frame to securely with or without the canopy attached. 6.) Place the frame into the unzipped storage bag by sliding it down into the bag slowly until canopy fits comfortably. Zip the storage bag completely shut.

5.) Completely fold the frame to securely with or without the canopy attached. 6.) Place the frame into the unzipped storage bag by sliding it down into the bag slowly until canopy fits comfortably. Zip the storage bag completely shut.

7.) Wheel your Caravan Canopy Display Shade to your desired storage area.

7.) Wheel your Caravan Canopy Traveler to your desired storage area.

To enhance your experience with your Caravan® Canopy, optional accessories are available. Para su mayor satisfacción con su Caravan® Canopy, le ofrecemos los siguientes accesorios Opcionales. Pour accompagner votre Caravan® Canopy, des accessoires sont disponibles en option.

• Nylon weight bags to enhance stability. Las bolsas de peso de nilón para mejorar la estabilidad. Des sacs de lest en nylon et sable pour augmenter la stabilité.

• Stakes and ropes for secure anchoring. Las estacas de durabilidad suprema para asegurar el anclaje. Des piquets renforcés pour ancrer fermement la tonnelle.

• Roller bag to contain the complete unit. Bolsa rolliza para guardar la unidad completa. Un sac sur roulettes pour ranger et déplacer la tonnelle.

• Zippered sidewalls for complete enclosure. Paredes laterales para rodear por completo la armadura. Des panneaux latéraux pour fermer la tonnelle complètement.

