


Logo Chair Company - 9' x 9' Tailgate Tent


At least two people recommended for set up

HOW TO SET UP


- 1** Remove tent from storage bag. Stand tent up on legs in center of area to be covered. With a partner standing at opposite corners of tent, slowly open tent by grasping the legs, lift tent off ground, and pull legs away from each other. Only open tent about half way and stop. Unfold and loosely place tent canopy into proper place on top of frame.

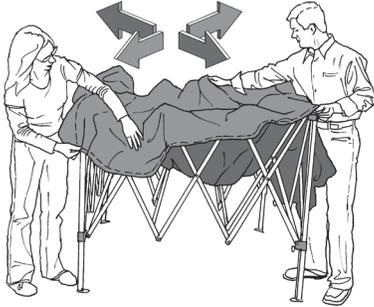


- 2** Each person return to opposite corners of tent, grasp the opposite legs and step backward extending the frame to the full open position. Be sure to lift tent while pulling back if on an uneven surface such as grass or sand.

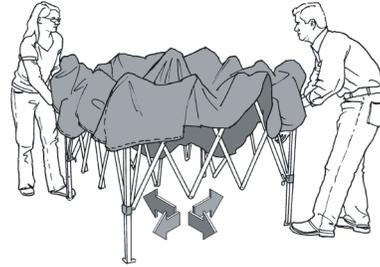

- 3** As the frame fully opens, use one hand to pull up on sliding joint with other hand on the leg until the snap o-ring engages into hole. Repeat at all four corners. BE CAREFUL NOT TO PINCH FINGERS.

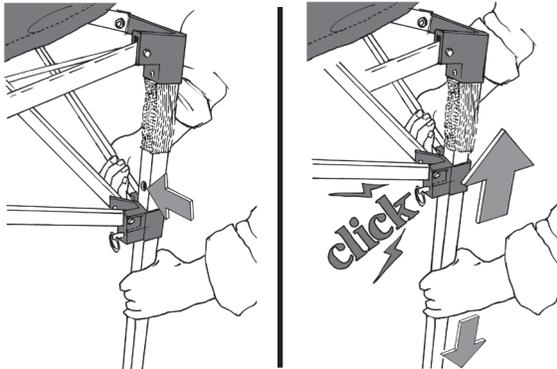

- 4** At each corner, pull down hem of canopy and secure with velcro so that top is tight and there is no sagging.

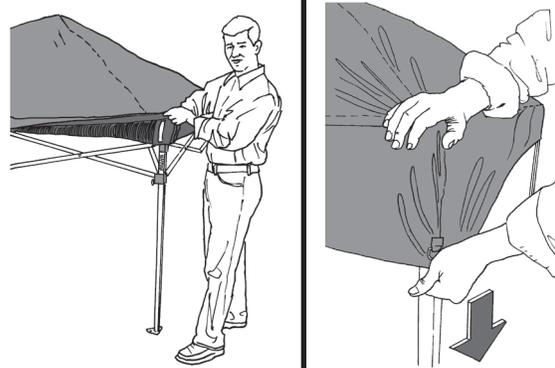

- 5** Two people position themselves at adjacent ends of tent. Each person place one of their feet on bottom foot of tent leg. Using your hands, lift the upper portion of the tent frame as the lower legs slide out until each snap button locks into first (top) hole.



Repeat on opposite side of tent. Tent should measure approx. 6ft in height from ground level.

For extra **stability on grass or dirt surface**, it is recommended that user tie down tent using the rope and stakes provided. Tie each rope to ring on top of each corner. Then tie the opposite end of rope to a stake. Pull on rope tightly as you insert each stake into ground. For extra **stability on concrete or solid surface**, it is recommended to use weight bags (sold separately) to anchor tent down.

HOW TO TAKE DOWN

Repeat set up instructions in reverse order. Depress the snap buttons on the legs to lower tent. Pull o-ring lock on each corner sliding joint to release locked frame. With a person on each side of tent, grasp frame and step forward to push frame together and close fully. Remove canopy and insert it into the provided storage pouch on the outside of carrying case.

NOTE: If canopy is wet or damp, allow canopy to fully dry before folding or storing.

Maintenance and Care Instructions:

1. To clean canopy use mild (non detergent) soap and water.
2. Allow tent top and frame to completely dry before closing or storing.
3. If frame joints or parts become loose, check for loose bolts and tighten them

Warning:

1. Be careful not to pinch fingers and hands as frame opens and closes.
2. Always stake or weigh down tailgate tent. Do not use in windy or rainy weather. Wind and rain may damage tent and may result in personal injury.
3. Do not use tailgate tent during storms or while lightning is present.
4. Tailgate tent is a temporary shelter. Do not leave up for extended periods.
5. Keep all flame and heat sources away from fabric canopy top. Do not build fires within tailgate tent.

Customer Service: customerservice@logochairs.com

Replacement Parts: www.logochairs.com