


Package Contents


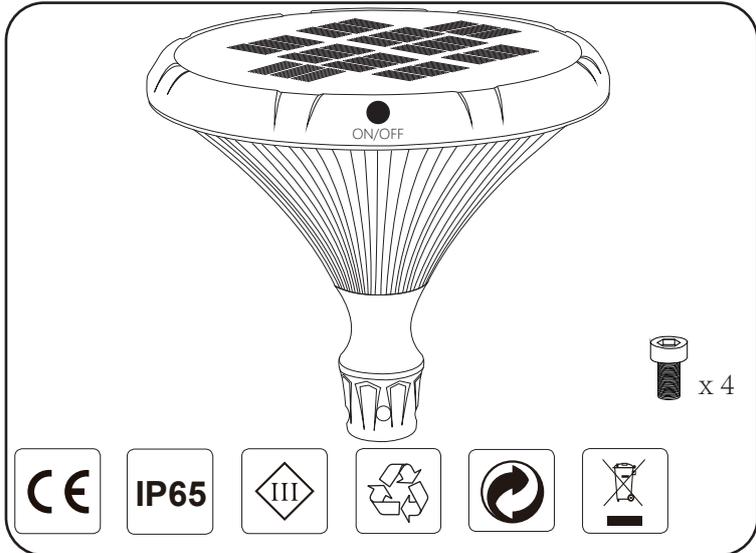


Instruction Manual


Note:

- The pole and foundation cage are not included.
- For best results, the solar lamp must be charged for two sunny days on the "ON" position
- Battery performance is affected by weather and temperature. Expect reduced performance in adverse conditions of cold, extreme cold, extreme heat, plus humidity and dampness.

Installation

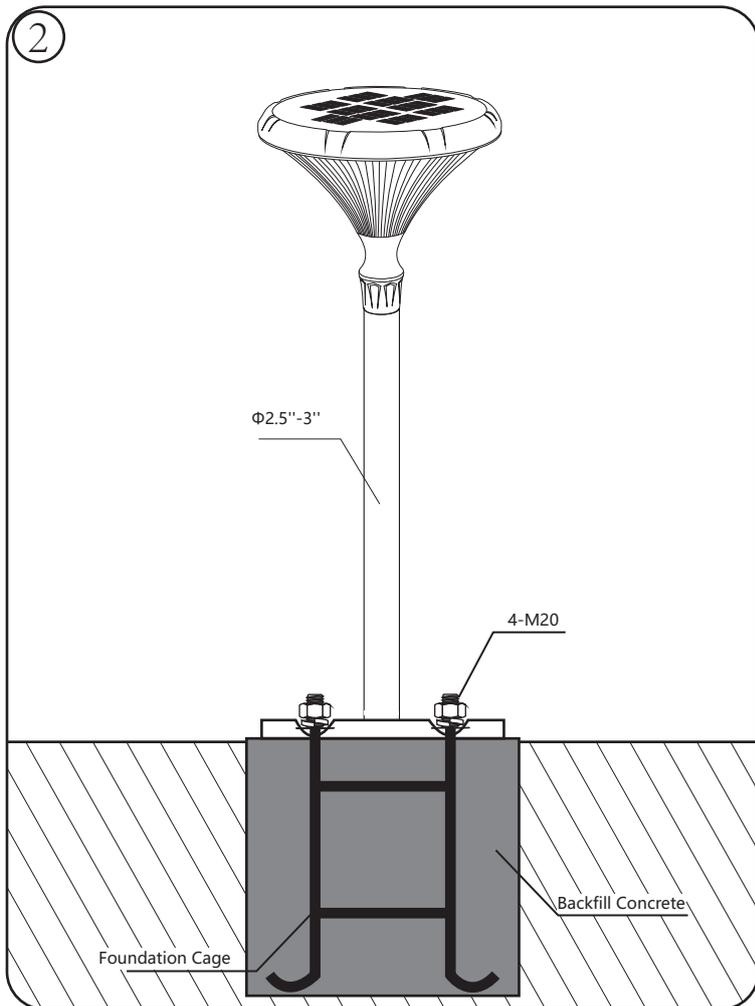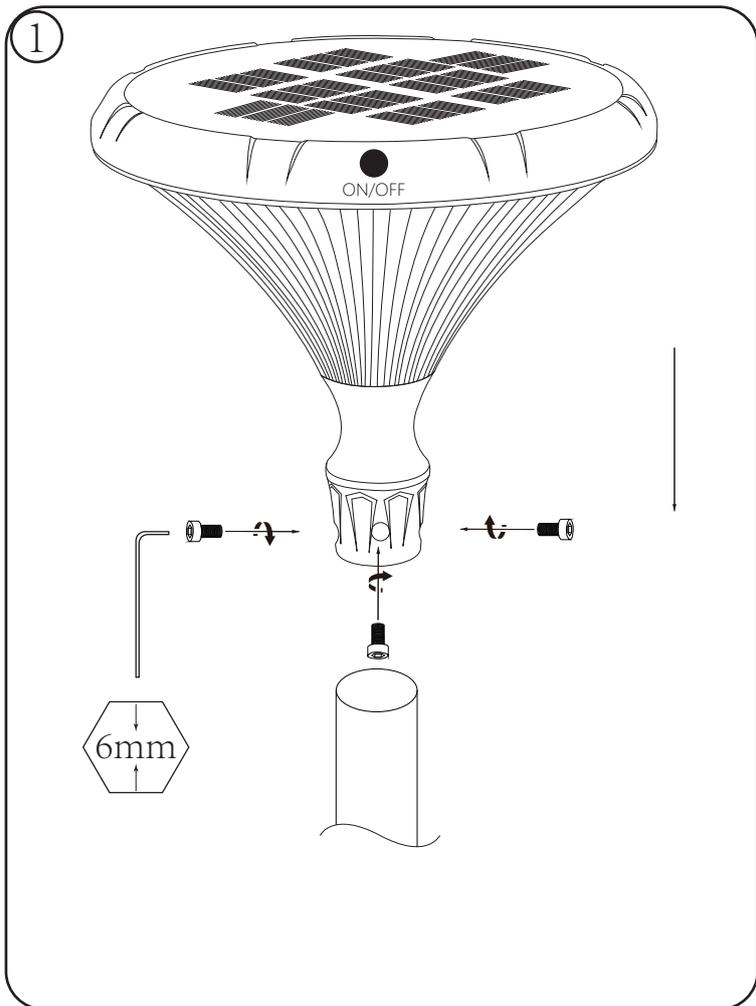

Operation Instructions

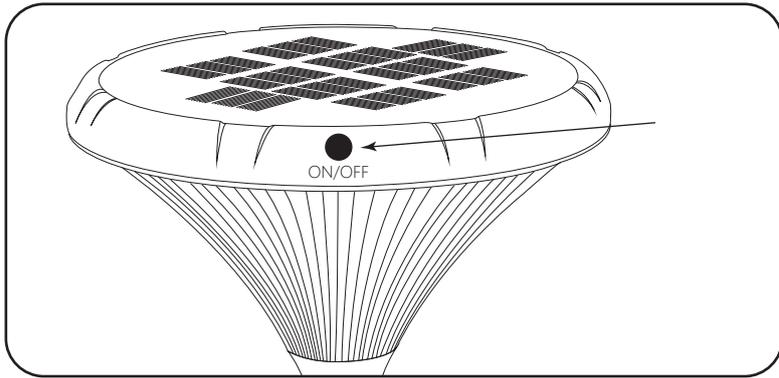

Press switch button for one time, then the lamp will light up after 10S. The lamp is ready to be installed.

Note:

1. *The Solar Lamp will automatically operate at dusk. Will not turn on if it is day light, to test your light is working take it into a dark room or use a cloth to cover the solar panel.*
2. *Please note the solar light automatically turns off after 14 hours to preserve the battery for the following evening.*

Maintenance

Clean the solar module regularly with a damp towel to guarantee optimum performance of the solar panel. Do not use any type of solvent for cleaning and be careful not to put too much pressure on the module while cleaning.

Troubleshooting

If your solar charged light does not come on at dusk despite observance of all the instructions, please try the following steps:

1. Make sure that the solar light is not being affected by any other light source. These could be bright indoor/outdoor lights from your property or neighbors, or streetlights.
2. Ensure the solar light is not positioned in the shade during the day.
3. Make sure the switch in the lamp head is in the "ON" position.
4. Leave the solar lamp to recharge for 2-3 days ensuring one sunny day has passed. After 2-3 days return to the light and turn it back on at switch.
5. In some cases, you may have to open the lamp and "seat" the batteries correctly between wire connectors as some dislodging may occur during the shipment.

WARRANTY

EESGI guarantees this product to be free from defects in material & workmanship for (3) year.

This warranty does not apply to damage from misuse or incorrect installation/ connection.

This warranty does not cover accessories, bulbs, batteries, high voltage accidents, alterations, unauthorized use or repair, neglect, misuse, abuse, damages, or defects resulting from normal wear and tear (including chips, fading scratches, abrasions or discoloration due to usage or sun exposure), or failure to follow instructions for care and maintenance, fire, flood, and Acts of God.

This warranty does not include liability for incidental or consequential damages.

EESGI is not responsible for any damages in excess of the retail purchase price of the product under any circumstances. The consumer is responsible for the installation of, removal of, and reinstallation of the product.