

Item No. Z-005


Assembling instruction for

Telemark Ski Brake


- [70] / [83] / [95] / [110] mm

For a ski width (measured underneath the binding) up to [x] mm – see above:

Mounting: Before mounting the 7tm on the ski, the brake lever has to be positioned underneath the binding as indicated in the picture. It is essential that the plastic lever itself swing back and the plastic hooks of the 7tm brake levers are aligned against the direction of travel (**see picture**) – otherwise the components can be severely damaged or the brake will not work.

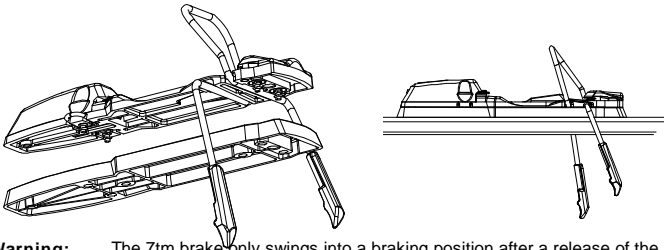

Warning: The 7tm brake only swings into a braking position after a release of the binding mechanism! There will be no brake effect as long as the heel lever comes loose, but the boot holding device remains in the binding! To avoid such an unintended opening of the heel lever it has to be secured with a safety strap.

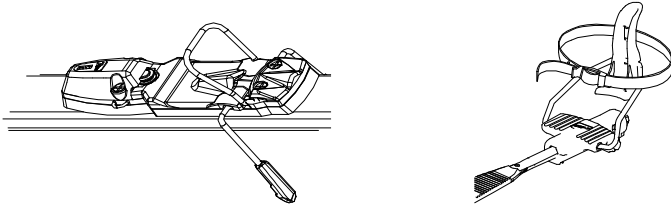

Important: Please check whether the brake levers swing back without touching the ski after the mounting is finished. Otherwise you have to switch to the next brake width!

- The 7tm releasable binding should always be used with a ski leash or ski brake. Failure to do so could cause a run-away which could potentially injure other people on the slope.
- In case of deep snow skiing it may be helpful to use the brake in combination with an so called powder leash, in order to find the ski again after a release of the binding.
- If you, despite all warnings, choose to enter terrain where avalanches could occur, it is recommended to remove the leash completely.
- Please refer to the 7tm owners manual for complete instructions.

DEUTSCH:

Nur für maximale Skibreite (gemessen unter der Bindung) bis [x] mm – siehe oben:

Montage: Vor der Montage der 7tm auf dem Ski, den Bremsbügel wie abgebildet unter der Bindung positionieren. Die Haken am Ende der Bremsbügel müssen in der Bremsstellung unbedingt in Fahrtrichtung weisen (siehe Abb.) und die Bremsflügel beim Schließen nach hinten schwenken! Ansonsten keine Funktion und schwere Beschädigung der Bauteile!

Warnung: Die 7tm Bremse schwenkt nur nach einer Auslösung der Bindung in Bremsposition! Keine Bremswirkung wenn nur der Fersenhalter öffnet, aber die Schuhhalterung auf dem Ski bleibt! Zur Vermeidung einer ungewollten Öffnung des Fersenhalters z.B. im Lift muss dieser (z.B. mit einem Sicherungs-Gurt) gesichert werden. (**siehe Abb.**)

Wichtig: Nach abgeschlossener Montage überprüfen, ob die Bremshebel frei ausschwenken! Ansonsten zur nächsten Bremsbügel-Breite wechseln!

- Die 7tm muss entweder mit einem Fangriemen oder mit Skibremse betrieben werden. Bei Nichtbeachtung könnte der Ski nach einer Auslösung ungebremst talwärts fahren und damit eine Gefahr für Leib und Leben von Mitmenschen darstellen.
- Verwenden Sie bei Tiefschneefahrten eine Skibremse nur in Verbindung mit einem Tiefschneeband, damit Sie den ausgelösten Ski wiederfinden.
- Sollten Sie einen Fangriemen verwenden und sich trotz aller Warnungen in einem lawinengefährdetem Gebiet befinden, lösen Sie bitte den Fangriemen von Bindung oder Bein.
- Bitte auch Sicherheitshinweise in der Bindungs-Montageanweisung beachten!

Made in Germany

www.telemarking.de