


LC01BK,LC01C,LC01M,LC01Y

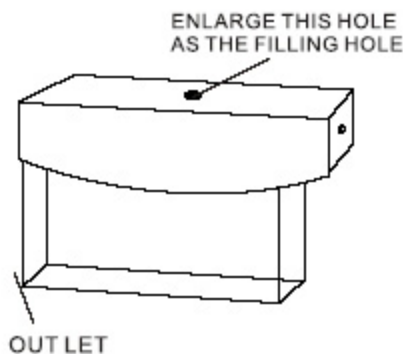

1. Put the cartridge on the tissue paper or other hygroscopic material in case of the excess ink.
2. Make a filling hole with screw driver at the place the figure showed.
3. Assemble the syringe and needle.
4. Press the plug of the syringe slowly and carefully to fill the ink. When ink overflows from filling hole or outlet hole, stop filling ink immediately.
5. Seal the filling hole with the plug provided. If the plug seal is not airtight, then secure and seal plug with strong adhesive tape. This seal must be airtight, if not cartridge will leak.
6. Reload the cartridge into the printer and run "head cleaning" utility 2-3 times before printing test or nozzle test.

BROTHER HC-2500,HS-5000/5300,MFC7000,MC3000